



morphy richards

**3 Year
Guarantee***

*Upon registering your product
at morphyrichards.co.uk

AIR FLEX
10 Inch Stand Fan
with Remote Control



Model No.
821002

User Manual

Please read and keep these instructions for future use





HEALTH AND SAFETY

The use of any electrical appliance requires the following common sense safety rules.

Please read these instructions carefully before using the product.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- If the mains cable is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person in order to avoid a hazard.





HEALTH AND SAFETY

- **WARNING:** Misuse of appliance could cause personal injury.
- Keep the appliance and its cord out of reach of children.
- This appliance is intended for indoor household use only. It is not suitable for use in staff kitchen areas in shops, offices and other commercial environments.





HEALTH AND SAFETY

LOCATION

- Ensure that the appliance is used on a firm, flat surface to reduce noise and vibration.
- Do not expose the appliance to direct sunlight.
- Do not use the appliance outdoors or near water.
- The appliance should be a minimum of 30cm away from a wall or other obstructions that may prevent or impair oscillation.
- The appliance should be stood upright during operation; it should NEVER be laid on its side.
- Do not use the appliance next to curtains, clothing, tablecloths, hair or other items that can be drawn into unit.
- Do not use the appliance near flammable or explosive gases.

MAINS CABLE

- Do not let the mains cable hang over the edge of the worktop where a child could reach it.
- Do not let the mains cable run across an open space e.g. between a low socket and a table.
- The mains cable should reach from the socket to the product without straining the connections.

PERSONAL SAFETY

- Keep hands, hair and clothing, and utensils away from the appliance while in operation, to prevent personal injury and/or damage to the appliance.
- Do not operate with wet hands.

OTHER SAFETY CONSIDERATIONS

- The use of attachments or tools not recommended or sold by Morphy Richards, may cause fire, electric shock or injury.
- Do not move the fan while switched on.
- Do not use this product for anything other than its intended use.
- Unplug from the outlet when not in use.
- **WARNING:** The appliance must not be immersed in water for cleaning.
- **WARNING:** Misuse of this appliance could cause personal injury.



ELECTRICAL DETAILS

Check that the voltage on the rating plate of your appliance corresponds with your house electricity supply which must be A.C. (Alternating Current).

 
Should the fuse in the mains plug require changing, replace it with a fuse of the same rating as originally fitted.

The power consumption in off mode is 0.4W.






PRODUCT OVERVIEW

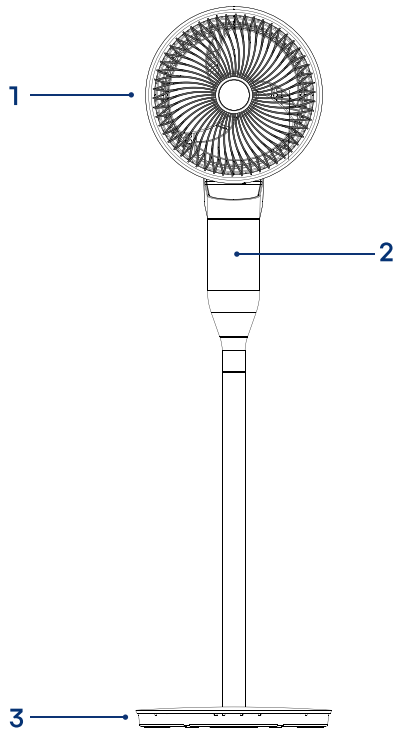

Control Panel & Display

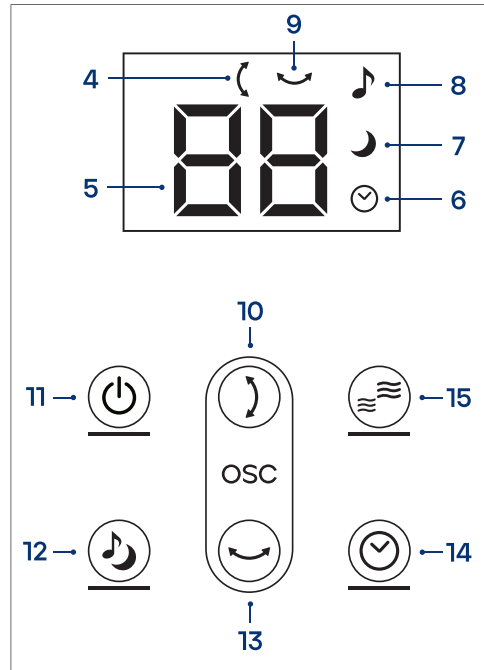 


Features

1. Front grille
2. Control panel & display
3. Base
4. Up/down oscillating indicator
5. Fan speed / timer display
6. Timer indicator
7. Sleep mode indicator
8. Nature mode indicator
9. Left/right oscillating indicator
10. Up/down oscillating button
11. Power on/off button
12. Mode button
13. Left/right oscillating button
14. Timer button
15. Fan speed button





 PRODUCT OVERVIEW

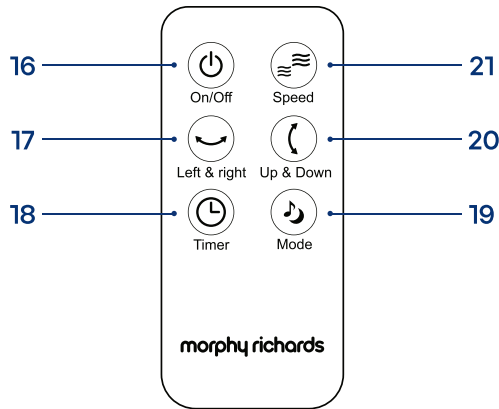

Remote Control

16. Power on/off button
17. Left/right oscillating button
18. Timer button
19. Mode button
20. Up/down oscillating button
21. Fan speed button

BEFORE FIRST USE

1. Remove all packaging.
2. Remove the plastic tab from the remote control to activate the battery (CR2032).

BATTERY WARNING

 
 
KEEP OUT OF REACH OF CHILDREN
Swallowing can lead to chemical burns, perforation of soft tissue, and death. Severe burns can occur within 2 hours of ingestion. Seek medical attention immediately.





ASSEMBLING YOUR FAN


1. Remove the fixing screw from underneath the fan leg.
2. Insert the fan leg into the base and secure it using the fixing screw (a cross-head screwdriver is required).
3. Attach the fan body onto the fan leg.

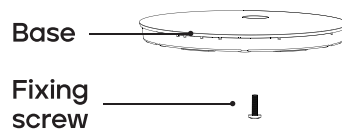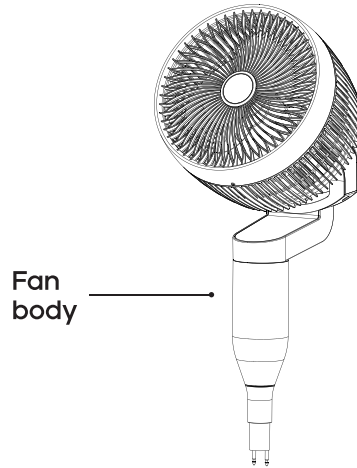




USING YOUR FAN

Setting the Fan Speed

1. Plug into a mains socket.
2. Press the On/Off button  on the control panel or remote control, to turn on the fan on.

Note: The default start up is Fan speed 6.

3. Press the fan speed button  on the control panel or remote control to increase/decrease the speed until the desired speed illuminates in the display. The fan has 12 speed settings
4. To stop the fan press the On/Off button at any time.

Modes


The fan has 3 modes. Normal, Nature & Sleep.

To select your preferred mode. Press the Mode button .

Normal Mode

No indicator illuminates on the display. The fan should be set to the desired speed (as per instructions in Setting the Fan Speed section).

Nature Mode

The nature indicator  will illuminate on the display. The fan speed will then vary mimicking a natural breeze.

Note: The Nature mode is pre-set and cannot be changed.

Sleep Mode

The sleep indicator  will illuminate on the display.

Note: The Sleep mode is pre-set and cannot be changed.



Note: Approximately 60 seconds after the last operation of a button, the display brightness will dim to approximately 50% and it will return to normal brightness when a button is pressed.




USING YOUR FAN

Oscillation

The fan has 3 oscillation settings. Left to Right. Up & Down and 3D.

1. Press the Left/Right oscillating button . The fan will rotate left to right and the Left/Right Oscillating indicator will illuminate on the control panel.
2. Press the Up/Down oscillating button . The fan will rotate Up & Down and the U/Down Oscillating indicator will illuminate on the control panel.
3. For 3D oscillation. Follow the steps for turning on Left to Right and Up & Down oscillation.
4. To stop oscillation press the Oscillating button/s at any time, the Oscillating indicator/s will go off.

Using the Timer (Auto Off)

1. Press the Timer button  on the control panel or on the remote control once to select 1 hour. Continue pressing the button until the desired time (Auto-off hours) illuminate on the display.
2. The fan will stop automatically when the time selected has lapsed.

Note: The timer can be set for a minimum of 1 hour and a maximum of 12 hours to switch off automatically.

Memory Function

1. If the fan is powered off without disconnecting the plug from the mains socket, it will restart in the mode it was using before being switched off (except for nature, sleep and the timer function).

CARE & CLEANING

Important: The fan MUST be unplugged from the mains socket before cleaning.

1. Do not immerse in water.
2. Do not use abrasives to clean the unit. Wipe with a soft, damp cloth.
3. Dry all parts thoroughly before you plug in to operate again.





DISMANTLING THE FAN

WARNING: The fan must be unplugged from the mains socket before removing the front cover.

1. Remove the Fixing screw as shown in Fig 1.
2. Turn the front grille anti-clockwise to detach and lift away (Fig 2).
3. Next remove the fan blades by unscrewing the plastic locking nut clockwise and lift off the blades Fig 3 and Fig 4.
4. Use a soft, damp cloth to remove dust and dirt from the fan blades, front grille and back cover. Dry thoroughly before re-assembling.
5. Ensure the fan is securely re-assembled by reversing the above process before it is plugged in.
6. Store in a cool, dry and ventilated area.

Fig 1

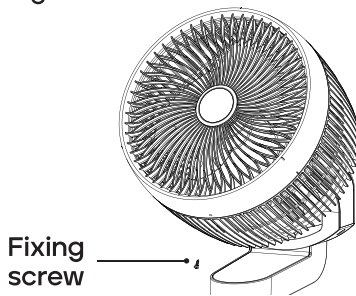 


Fig 2

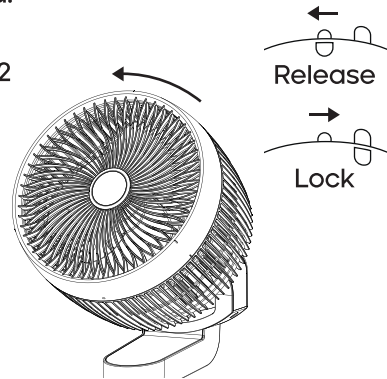 


Fig 3


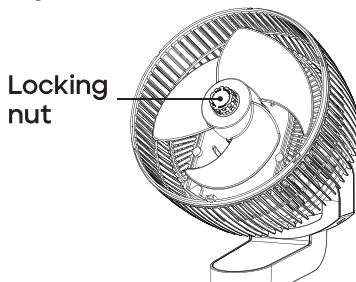 


Fig 4

 

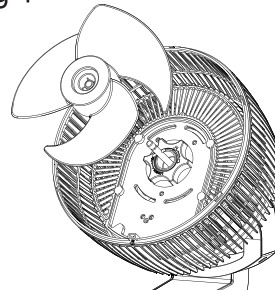

TROUBLESHOOTING

Problem	Solution
No power.	Check the fuse and try a new fuse with the same rating.
	Try a different appliance in the socket as it may be the socket that is at fault.
Tripping electrics.	Try using a different socket.
	Ensure there are no other appliances being used on the same set of sockets.
Fan is noisy during operation.	Dirty fan blades and /or foreign object obstruction. Follow care and cleaning instructions to remove the front cover for cleaning, removal of foreign objects.
	Place on firm, flat horizontal surface.
Poor air flow.	Dirty fan blades and /or foreign object obstruction. Follow care and cleaning instructions to remove the front cover for cleaning, removal of foreign objects.

SPARE PARTS

Part Number	Description	Qty per Product	Key Number
33079	Remote Control	1	N/A





CONTACT US

If you are having a problem with your appliance, please contact our Helpline, as we are more likely to be able to help than the store you purchased the item from. Please have the product name, model number and serial number to hand when you contact us to help us deal with your enquiry quicker.

email: hello@morphyrichards.co.uk

www.morphyrichards.co.uk

PRODUCT RECYCLING



For electrical products sold within the European Community, at the end of the electrical products useful life, it should not be disposed of with household waste.

Please recycle where facilities exist.

Check with your Local Authority or retailer for recycling advice in your country.



REGISTERING YOUR 3 YEAR GUARANTEE

Your standard 2 year guarantee is extended for an additional 1 year when you register the product within 28 days of purchase with Morphy Richards. If you do not register the product with Morphy Richards within 28 days, your product is guaranteed for 2 years.



To validate your 3 year guarantee, scan the QR code or register online at www.morphyrichards.co.uk

N.B. Each qualifying product needs to be registered with Morphy Richards individually. Please note that the 2 year guarantee is only available in the UK. Please refer to the 2 year guarantee for more information.

YOUR 2 YEAR GUARANTEE

It is important to retain the retailer's receipt as proof of purchase. Staple your receipt to the back cover for future reference.

Please quote the following information if the product develops a fault. These numbers can be found on the base of the product.

Model no.

Serial no.

All Morphy Richards products are individually tested before leaving the factory. In the unlikely event of any appliance proving to be faulty within 28 days of purchase, it should be returned to the place of purchase for it to be replaced. If the fault develops after 28 days and within 24 months of original purchase, you should contact the Helpline quoting Model number and Serial number on the product, or write to Morphy Richards at the address shown. You may be asked to return a copy of proof of purchase.

Subject to the exclusions set out on the next page (see Exclusions), the faulty appliance will then be repaired or replaced as appropriate and dispatched usually within 7 working days of receipt.

If, for any reason, this item is replaced or repaired during the 2 year



REGISTERING YOUR 3 YEAR GUARANTEE

guarantee period, the guarantee on the new item will be calculated from the original purchase date. Therefore it is vital to retain your original till receipt or invoice to indicate the date of initial purchase.

To qualify for the 2 year guarantee, the appliance must have been used according to the instructions supplied.

The appliance is intended for domestic use only. Misuse or use for commercial or any other purpose will render the guarantee invalid.

Exclusions

Morphy Richards shall not be liable to replace or repair the goods under the terms of the guarantee where:

1. The fault has been caused or is attributable to accidental use, misuse, negligent use or used contrary to the manufacturer's recommendations or where the fault has been caused by power surges or damage caused in transit.
2. The appliance has been used on a voltage supply other than that stamped on the products.
3. Repairs have been attempted by persons other than our service staff (or authorised dealer).
4. The appliance has been used for hire purposes or non domestic use.
5. The appliance is second hand or refurbished.
6. Morphy Richards reserves the right not to carry out any type of servicing under the guarantee at its discretion.

This guarantee does not confer any rights other than those expressly set out above and does not cover any claims for consequential loss or damage. This guarantee is offered as an additional benefit and does not affect your statutory rights as a consumer. Morphy Richards products are intended for household use only. See usage limitations within the location safety instructions.

Disclaimer

Morphy Richards has a policy of continuous improvement in product quality and design. The company, therefore reserves the right to change the specification of its models at any time.





AT821002MUK Rev1

morphy richards



@morphyrichardsuk #loveyourmorphy

[morphyrichards.co.uk](https://www.morphyrichards.co.uk)

Morphy Richards

9 Cabot Lane, Poole, Dorset, BH17 7BY, UK

