


FP403054 MUK Rev 1

morphy richards®

smart ideas for your home



 Please read and keep these instructions for future use

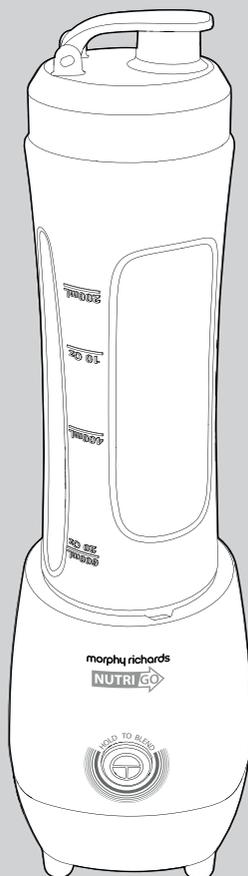

For competitions, product hints and tips and more join us at



www.morphyrichards.co.uk/blog



www.facebook.com/morphyrichardsuk



[@loveyourmorphy](https://twitter.com/loveyourmorphy)

www.morphyrichards.com

* Register online for your 2 year guarantee. See the back of this instruction book for details (UK and Ireland customers only).

Health and Safety

The use of any electrical appliance requires the following common sense safety rules. Please read these instructions carefully before using the product.

- This appliance can be used by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- This appliance shall not be used by children.
- Keep the appliance and cord out of reach of children.
- Do not blend for longer than the time periods recommended in 'Usage' on page 6.
- Always disconnect from the supply if left unattended and before assembling, disassembling or cleaning.
- For care and cleaning refer to page 7.
- Avoid touching moving parts. Keep hands, hair and clothing, and utensils away from the attachment blades during operation, to prevent personal injury and/or damage to the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

In addition, we offer the following safety advice.

Location

- This appliance is intended to be used in household and similar applications such as: farm houses; by clients in hotels, motels and other residential type environments; bed and breakfast type environments. It is not suitable for use in staff kitchen areas in shops, offices and other working environments.
- Do not use outdoors or in a bathroom.
- Always locate your appliance away from the edge of the worktop.

Mains cable

- Do not let the mains cable hang over the edge of the worktop where a child could reach it.
- Do not let the lead run across an open space e.g. between a low socket and a table.
- Do not let the cable run across a cooker or other hot area which might damage the cable.
- The mains cable should reach from the socket to the base unit without straining the connections.

Personal safety

- Care shall be taken when handling the sharp cutting blades, emptying the beakers and during cleaning.

Other safety considerations

- Do not use the appliance for anything other than its intended purpose.

Product specific safety

- **WARNING: The blender blades are very sharp. Handle with care when using and cleaning.**
- **WARNING: Misuse can cause potential injury.**
- Do not clean the attachments under running water while they are in position.
- Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.

Electrical requirements

Check that the voltage on the rating plate of your appliance corresponds with your house electricity supply which must be A.C. (Alternating Current). Should the fuse in the mains plug require changing, a 3 amp BS1362 fuse must be fitted.

Introduction

Thank you for purchasing your new Morphy Richards Nutri Go.


Your Nutri Go will allow you to create an extensive selection of drinks.
Please read the instructions thoroughly before use.

Remember to visit www.morphyrichards.co.uk to register your product's two year guarantee.

Contents

Health and Safety	2
Introduction	3
Product Overview	4
Features	4
Before first use	5
Using your Nutri Go	5
Usage	6
Suitable foods	6
Ice Crushing	6
Tips	6
Care and cleaning	7
Recipes	7
Contact us	10
Notes	11
Guarantee	12

Product overview

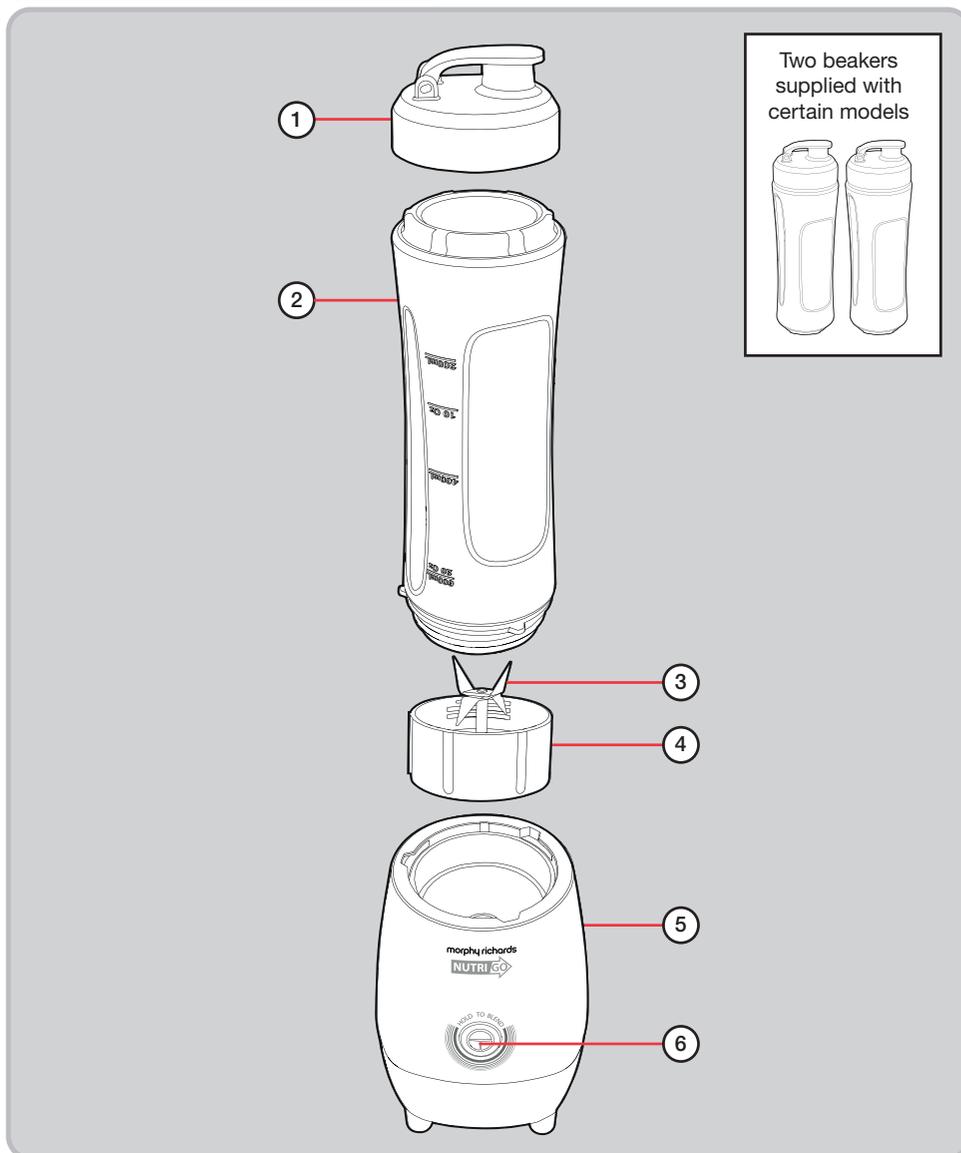

Features

- | | |
|------------------|------------------|
| (1) Drinks Lid | (4) Blade Lid |
| (2) Beaker 600ml | (5) Main Unit |
| (3) Blade | (6) Power Button |


Before first use

WARNING: Sharp blades, handle with care.


Before using for the first time or if unused for a long period, wash your Nutri Go thoroughly.

Wash all parts except the Main Unit (5) in hot soapy water and dry thoroughly. Do not allow the Blade Lid (4) to stand in water.


Using your Nutri Go

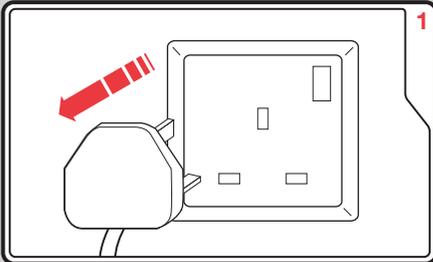


WARNING: Ensure your Nutri Go is unplugged from the mains before use.

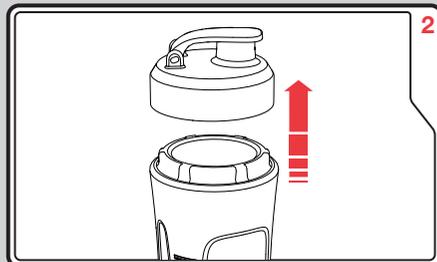


Remove the Drinks Lid (1) from the storage position.

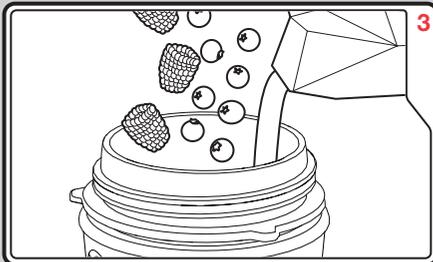


Add the ingredients to the Beaker (2). Do not exceed the 600ml level.

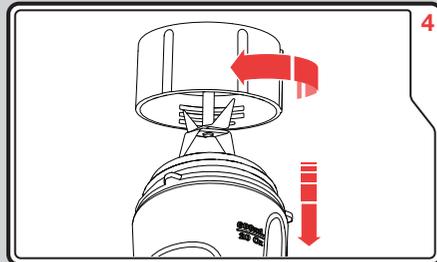


Attach the Blade Lid (4) to the Beaker (2). Screw to fix into place securely.

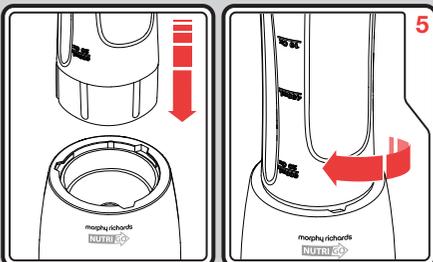



Attach the Beaker/Blade Lid (4) to the Main Unit (5) and turn clockwise to lock the Beaker (2) in place.

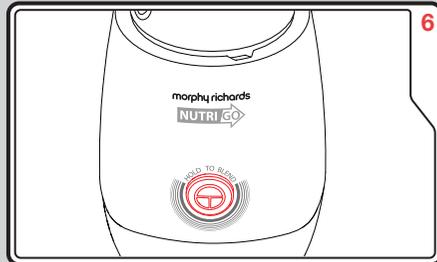


Plug into the mains. Press and hold the Power Button (6) (40 seconds max) to blend the ingredients. When finished unplug from the mains.

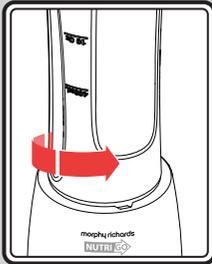

Turn the Beaker (2) anti-clockwise to release & lift away from the Main Unit (5).

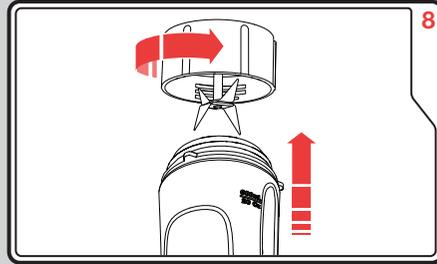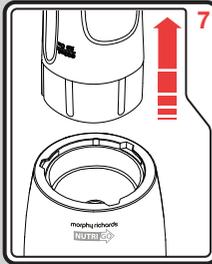

Unscrew the Blade Lid (4).

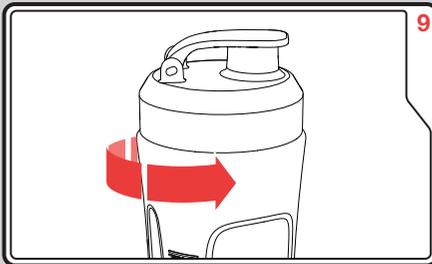

Fit the Drinks Lid (1) securely.

Usage

Do not operate your Nutri Go continuously for more than 40 seconds. After using for this length of time, let it cool down for 10 minutes before using again.

Suitable foods

Your Nutri Go is ideal for blending a wide range of foods, including fruit and dairy. However it is **NOT** suitable for the following uses;

- Grinding or mashing heavy foods (e.g. potatoes or meat).
- Stirring thick mixtures (e.g. dough).
- **Do not use hot liquids in the blender as it can be ejected out of the appliance due to sudden expansion.**
- **Do not crush ice unless it is part of a recipe.**

Ice Crushing

- If using ice in a recipe (i.e. blending it with other liquids), do not use more than **2 ice cubes**.
- Only crush ice as part of the recipe - do not crush ice on its own.

Tips

- If using seeded berries, it is recommended to sieve the drink before serving for smoother consistency.
- Some protein powder additives can cause a reaction (fermentation) with other ingredients. Be careful when using and follow the manufacturers instructions. Do not store these mixed drinks in an airtight container as the fermentation can cause the mixture to expand and cause the lid seal to burst. If in doubt store in the container with the lid removed.

Care and cleaning

It is important to clean your Nutri Go immediately after use.

1. Switch your Nutri Go off and unplug from the mains.

WARNING: Extreme care must be taken when washing the Blade (3) as it is sharp.

2. Wash all parts except the Main Unit (5) in hot soapy water, dry thoroughly. Do not allow the Blade Lid (4) to stand in water.

A small brush can be used to help dislodge food from under the Blade (3) on the Blade Lid (4).

3. Clean the Main Unit (5) with a damp cloth. Do not immerse in water.

- **WARNING:** Always unplug the appliance before cleaning.

NO PARTS ARE DISHWASHER SAFE.

Recipes



We have developed these recipes for you to use in your Nutri Go, from smoothies to health drinks and frappuccinos, there are choices for all tastes.

The ingredients and blending times given in the following recipes are only a guide and can be adjusted to suit personal taste.

Breakfast

Strawberry Banana Smoothie

Ingredients:

- 65g strawberries, hulled and sliced
- ¼ banana, peeled and sliced
- 135ml apple juice
- 200g low fat vanilla yogurt
- 2 ice cubes

Method:

- 1 Add all the ingredients to the Beaker.
- 2 Blend for 20 seconds.

Sweet Berry Kiss Smoothie

Ingredients:

- 200g low fat vanilla yogurt
- 135ml skimmed milk
- 50g frozen cherries
- 2 ice cubes

Method:

- 1 Add all the ingredients to the Beaker.
- 2 Blend for 30 seconds.

Revitalise

Summer Berry Delight

Ingredients:

- 40g raspberries
- 70g strawberries hulled and sliced
- 70g blueberries
- 40g cherries, stoned
- 200ml apple juice

Method:

- 1 Add all the ingredients to the Beaker.
- 2 Blend for 20 seconds.

Note: Strain the smoothie through a sieve to remove the pips if desired.

Citrus Sensation

Ingredients:

- 200g low fat vanilla yogurt
- 135ml orange juice
- 50g orange, peeled and diced
- 50g grapefruit, peeled and diced
- 2 ice cubes

Method:

- 1 Add all the ingredients to the Beaker.
- 2 Blend for approximately 15 seconds.

Note: citrus fruit may leave 'bits' in the drink. You may wish to sieve before drinking.

Coffee

Coffee Frappe

Ingredients:

- 200ml strong coffee, cooled
- 190g low fat frozen yogurt
- 2 ice cubes

Method:

- 1 Add all the ingredients to the Beaker.
- 2 Blend for 30 seconds.

Milkshakes

Chocolate Banana Milkshake

Ingredients:

- 40g dark chocolate, broken into small pieces.
- 250g low fat vanilla yogurt
- 100ml skimmed milk
- ½ banana, peeled and sliced thinly

Method:

- 1 Pulse the chocolate to break it up into smaller pieces / shards.
- 2 Add the rest of the ingredients to the Beaker.
- 3 Blend for 30 seconds.

Note: the banana must be sliced very thinly to ensure it blends into the drink properly.

Powdered mix

Milkshakes and protein powders

Ingredients:

- Follow amounts listed on pack
- Do not exceed the individual beaker maximum (500ml)**

Method:

- 1 Add all the ingredients to the Beaker.
- 2 Blend until smooth.

NOTE: Some protein powder additives can cause a reaction (fermentation) with other ingredients. Be careful when using and follow the manufacturers instructions. Do not store these mixed drinks in an airtight container as the fermentation can cause the mixture to expand and cause the lid seal to burst. If in doubt store in the container with the lid removed.

Registering your 2 year guarantee

Your standard one year guarantee is extended for an additional 12 months when you register the product within 28 days of purchase with Morphy Richards. If you do not register the product with Morphy Richards within 28 days, your product is guaranteed for 1 year. To validate your 2 year guarantee register with us online at

www.morphyrichards.co.uk

Or call our customer registration line quoting model and serial number, these numbers can be found on the base of the product.

UK 0344 871 0242

IRE 1800 409 119

N.B. Each qualifying product needs to be registered with Morphy Richards individually.

Please note that the 2 year guarantee is only available in the UK and Ireland. Please refer to the one year guarantee for more information.

Your 1 year guarantee

It is important to retain the retailer's receipt as proof of purchase. Staple your receipt to this back cover for future reference.

Please quote the following information if the product develops a fault. These numbers can be found on the base of the product.

Model no.

Serial no.

All Morphy Richards products are individually tested before leaving the factory. In the unlikely event of any appliance proving to be faulty within 28 days of purchase, it should be returned to the place of purchase for it to be replaced.

If the fault develops after 28 days and within 12 months of original purchase, you should contact the Helpline number quoting Model number and Serial number on the product, or write to Morphy Richards at the address shown.

You may be asked to return a copy of proof of purchase.

Subject to the exclusions set out below (see Exclusions), the faulty appliance will then be repaired or replaced as appropriate and dispatched usually within 7 working days of receipt.

If, for any reason, this item is replaced or repaired during the 1 year guarantee period, the guarantee on the new item will be calculated from original purchase date. Therefore it is vital to retain your original till receipt or invoice to indicate the date of initial purchase.

To qualify for the 1 year guarantee, the appliance must have been used according to the instructions supplied. For example, crumb trays should have been emptied regularly.

Exclusions

Morphy Richards shall not be liable to replace or repair the goods under the terms of the guarantee where:

- 1 The fault has been caused or is attributable to accidental use, misuse, negligent use or used contrary to the manufacturer's recommendations or where the fault has been caused by power surges or damage caused in transit.
 - 2 The appliance has been used on a voltage supply other than that stamped on the products.
 - 3 Repairs have been attempted by persons other than our service staff (or authorised dealer).
 - 4 The appliance has been used for hire purposes or non domestic use.
 - 5 The appliance is second hand.
 - 6 Morphy Richards reserves the right not to carry out any type of servicing under the guarantee at its discretion
 - 7 Plastic filters for all Morphy Richards kettles and coffee makers are not covered by the guarantee.
 - 8 Batteries and damage from leakage are not covered by the guarantee.
- This guarantee does not confer any rights other than those expressly set out above and does not cover any claims for consequential loss or damage. This guarantee is offered as an additional benefit and does not affect your statutory rights as a consumer. Morphy Richards products are intended for household use only. See usage limitations within the location safety instructions.

Disclaimer

Morphy Richards has a policy of continuous improvement in product quality and design. The company, therefore reserves the right to change the specification of its models at any time.



For electrical products sold within the European Community. At the end of the electrical products useful life, it should not be disposed of with household waste.

Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice in your country

**IF YOU ARE HAVING A PROBLEM
WITH ONE OF OUR PRODUCTS,
CALL OUR HELPLINE:**

**UK: 0344 871 0944
EIRE: 1800 409 119
SPARES: 0344 873 0710**

morphy richards

The After Sales Division
Morphy Richards Ltd
Mexborough, South Yorkshire,
England, S64 8AJ

Helplines (office hours)
UK 0344 871 0944
Spare Parts 0344 873 0710
Republic of Ireland 1800 409 119
www.morphyrichards.com

