

After sales servicing

Examine the blanket and cord frequently for signs of wear or damage. In the case of damage do not use. If the blanket fails to operate, check the following:

1. Ensure that the plug and socket have not become disconnected.
2. Check that the supply plug is correctly connected to the flex.
3. Check the supply fuse and the 3 amp plug fuse if applicable.

Contact us

Helpline

If you are having a problem with your appliance, please call our Helpline, as we are more likely to be able to help than the store you purchased the item from.

Please have the product name, model number and serial number to hand when you call to help us deal with your enquiry quicker.

UK Helpline: 0844 871 0960

IRE Helpline: 1800 409 119

Spares: 0844 873 0726

Talk To Us

If you have any questions or comments, or want some great tips to help you get the most out of your products, join us online:

Blog: www.morphyrichards.co.uk/blog

Facebook: www.facebook.com/morphyrichardsuk

Twitter: @loveyourmorphy

Website: www.morphyrichards.com

Notes

<hr/> <hr/> <hr/> <hr/> <hr/> <hr/> <hr/> <hr/> <hr/> <hr/> <hr/> <hr/> <hr/> <hr/> <hr/> <hr/> <hr/> <hr/> <hr/> <hr/> <hr/> <hr/> <hr/> <hr/>	<hr/> <hr/> <hr/> <hr/> <hr/> <hr/> <hr/> <hr/> <hr/> <hr/> <hr/> <hr/> <hr/> <hr/> <hr/> <hr/> <hr/> <hr/> <hr/> <hr/> <hr/> <hr/> <hr/> <hr/>
---	---

EB600001 MUK Rev1 03/13

Your 3 year guarantee

To qualify for the 3 year guarantee, the appliance must have been used according to the instructions supplied.

It is important to retain the retailer's receipt as proof of purchase. Staple your receipt to this back cover for future reference.

Please quote the following information if the product develops a fault. These numbers can be found on the stitched label of the product.

Model no.

Serial no.

All Morphy Richards products are individually tested before leaving the factory. In the unlikely event of any appliance proving to be faulty within 28 days of purchase, it should be returned to the place of purchase for it to be replaced.

If the fault develops after 28 days and within 3 years of original purchase, you should contact the Helpline number quoting Model number and Serial number on the product, or write to Morphy Richards at the address shown.

You may be asked to return a copy of proof of purchase.

Subject to the exclusions set out below (see Exclusions), the faulty appliance will then be repaired or replaced and dispatched usually within 7 working days of receipt.

If, for any reason, this item is replaced during the 3 year guarantee period, the guarantee on the new item will be calculated from original purchase date. Therefore it is vital to retain your original till receipt or invoice to indicate the date of initial purchase.

This appliance is intended for domestic use only. Misuse or use for commercial or any other purpose will render the guarantee invalid.

Exclusions

Morphy Richards shall not be liable to replace or repair the goods under the terms of the guarantee where:

- 1 The fault has been caused or is attributable to accidental use, misuse, negligent use or used contrary to the manufacturer's recommendations or where the fault has been caused by power surges or damage caused in transit.
- 2 The appliance has been used on a voltage supply other than that stamped on the products.
- 3 Repairs have been attempted by persons other than our service staff (or authorised dealer).
- 4 The appliance has been used for hire purposes or non domestic use.
- 5 The appliance is second hand.
- 6 Morphy Richards reserves the right not to carry out any type of servicing under the guarantee at its discretion.
- 7 The guarantee excludes consumables.

- This guarantee does not confer any rights other than those expressly set out above and does not cover any claims for consequential loss or damage. This guarantee is offered as an additional benefit and does not affect your statutory rights as a consumer. Morphy Richards products are intended for household use only. See usage limitations within the location safety instructions.

Morphy Richards has a policy of continuous improvement in product quality and design. The company, therefore reserves the right to change the specification of its models at any time.

Disclaimer



For electrical products sold within the European Community. At the end of the electrical products useful life, it should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice in your country.

IF YOU ARE HAVING A PROBLEM
WITH ONE OF OUR PRODUCTS,
CALL OUR HELPLINE:

UK: 0844 871 0960
EIRE: 1800 409 119
SPARES: 0844 873 0726

morphy richards

The After Sales Division
Morphy Richards Ltd
Mexborough,
South Yorkshire,
England, S64 8AJ

www.morphyrichards.com



 
EB600001 MUK Rev1

morphy richards[®]
smart ideas for your home



Fleece Washable Heated Underblanket

 Please read and keep these instructions for future use

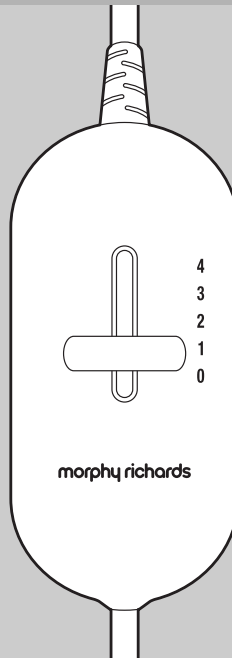

Contact us

Helpline

If you are having a problem with your appliance, please call our Helpline, as we are more likely to be able to help than the store you purchased the item from. Please have the product name, model number and serial number to hand when you call to help us deal with your enquiry quicker.

UK Helpline: **0844 871 0960**

IRE Helpline: **1800 409 119**

Spares: **0844 873 0726**

For competitions, product hints and tips and more join us at



www.morphyrichards.co.uk/blog



www.facebook.com/morphyrichardsuk



[@loveyourmorphy](https://twitter.com/loveyourmorphy)

www.morphyrichards.com

* 3 year guarantee. See back of this instruction book for details. (UK and Ireland customers only)


Health and Safety

The use of any electrical appliance requires the following common sense safety rules.

Please read these instructions carefully before using the product.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be undertaken by children without supervision.

Personal safety

- Do not use with persons insensitive to heat and other very vulnerable persons who are unable to react to overheating.
-  Children under the age of three are not to use this appliance due to their inability to react to overheating.
- Young children should be instructed on how to operate the controls safely and heat settings should be controlled by a parent or guardian.
- Do not use a hot water bottle at the same time as using the blanket.

Product safety

- **WARNING:** When storing the appliance, allow it to cool down before folding.
- Examine frequently for any signs of wear or damage to the blanket, switch or cord. In case of damage or misuse, please cease using and contact the Helpline.
- During the summer, the blanket can be used to air the mattress.
- To store, fold carefully and place back into the original packaging.
- Do not crease the appliance by placing items on top of it during storage.
- Do not dry clean the blanket, follow washing instructions on the label attached to the blanket and the details that relate to it.

- Ensure the blanket is used in the manner in which it is intended, either as an overblanket or underblanket as appropriate.



If used on an adjustable bed, check the blanket or cord cannot become trapped or rucked, for example in hinges.

- Ensure the product is correctly fitted to the bed, following the instructions in this booklet.



Do not insert pins or any sharp objects into the blanket.

- Do not tuck the heated part of the material under the mattress.
- Do not use if the blanket is wet.
- Avoid pressing creases or folds into the blanket. Do not switch on if the blanket is folded, creased or rucked.
- Do not use any lead, switch or cord other than the one supplied with this blanket.
- Do not coil or lay the lead on the blanket.
- Not intended for medical use in hospitals.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person(s) in order to avoid a hazard.

Electrical requirements

- Should the fuse in the mains plug require changing, a 3 amp BS1362 fuse must be fitted.
- This appliance does not need to be earthed. It is a double insulated product.

Before use

Before using this appliance, ensure that the voltage indicated on the product corresponds with the mains voltage in your home. If you are in any doubt about your supply, ask your electrical dealer or local electricity company.

WARNING: Do not attempt to use the blanket with controls other than those supplied with the unit as referred to on the rating label attached to the blanket.

Dual control models

On dual control models, users are able to control their own side of the bed with individual controls, tailoring independent temperatures to independent needs.

Each side of the blanket has a completely separate element and each is supplied with its own independent mains lead. A 13 amp plug (fused at 3A) on each lead is essential.

Do not connect both flexible cords to one 13 amp mains plug.

The two leads should preferably be plugged into individual sockets. However, if only one socket is accessible, then a multi adaptor should be used.

WARNING: If you are unsure about electrical connections, please contact a qualified engineer.

Safeguard overheat protection system

Activation

The system will remain dormant indefinitely as long as the blanket is operating in the normal temperature range. If, for any reason, the blanket is operated in an abnormal situation or condition which would otherwise have induced a rapid temperature rise high enough to constitute a hazard, the OVERHEAT SYSTEM should intervene by cutting off the supply current before the temperature reaches the point at which damage may occur.

 
In the event of the OVERHEAT SYSTEM operating, the blanket will cease to function.

WARNING: No attempt should be made to repair the blanket or have it repaired locally and the switch supplied must never be replaced as the specialised components are not generally available.

The fact that this blanket incorporates the overheat system does not absolve the user from observing these instructions.

Fitting the underblanket to the bed

- NOTE: This product can be used with any type of bedding, including waterproof bed protectors.
- NOTE: If the blanket is to be used with a memory foam mattress or topper, refer to the manufacturer's instructions regarding use with an electric blanket.
- Use only as an underblanket and do not use above the occupant of the bed.
- The blanket must be secured to the mattress in the following manner. Place the blanket directly on the mattress and ensure that a space of 10-15cm (4-6 inches) is left between the bottom edge of the blanket and mattress.

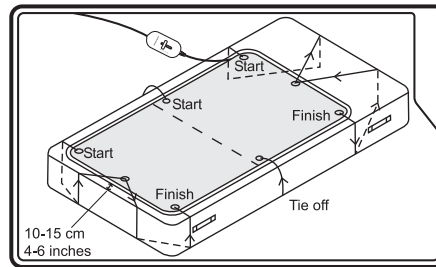

- Place the underblanket directly onto the mattress. Making sure the control switch end is at the head of the bed, with the connector facing upwards.
- Each blanket is fitted with 3 tie cords.
- Position the blanket on the bed ensuring the pillow area is clear.
- Do not stretch the cord too tightly. Allow some 'give' to avoid edge distortion. Ensure knots are not tied too tightly so that they can be undone easily.
- Pass the first tape (1) under the corner of the mattress.
- Thread up through the centre eyelet.
- Pass under the adjacent corner and tie off to opposite loop.
- Repeat for second tape (2) at opposite end of the blanket.
- Pass the centre tape (3) underneath the mattress and tie to opposite loop.
- If the tape is too long you can cut off the ends.

How to use

1. Ensure the blanket is fitted to the bed correctly, see diagram on previous page.
2. Plug the power lead into the closest socket, using an extension lead, if needed, to ensure that the lead is not stretched.

Preheating the bed

Move the heat setting on the control switch to heat level 3 or 4, depending on the level of the heat required. Allow approximately 60-90 minutes for the blanket to heat the bed thoroughly, although this time may vary depending on the room temperature and type of bedding used.

In cold weather, all electric blankets will take longer to heat the bed to a comfortable temperature. Please allow for this.

All night use

NOTE: Blankets are perfectly safe to be used all night. However, we recommend using the heat setting below.

- Move the heat setting on the control switch to heat level 1 or 2.
- These settings will provide safe and comfortable heat to sleep on all night.
- These settings can be used to air the bed.

WARNING: Always ensure that the heat setting is moved to the OFF position when you get up the next day, or after airing the bed.



Storage instructions

When not in use, store as follows:

- To store, fold carefully and place back into the original packaging.
- Allow to cool before folding.
- Do not crease the appliance by placing an item on top of it.

Washing instructions

 
WARNING:

-  Do not dry-clean
-  Do not iron

WARNING: Before washing or drying, ensure that you detach all the controls from the blanket.


Measure the blanket so it can be stretched back to its original size whilst wet.

- **NOTE:** Please ensure the blanket is fully dry before use.
1. Unplug the blanket from the power socket.
 2. Disconnect the control switch and cord from the blanket by lifting the locking lever over the raised button and pulling apart.

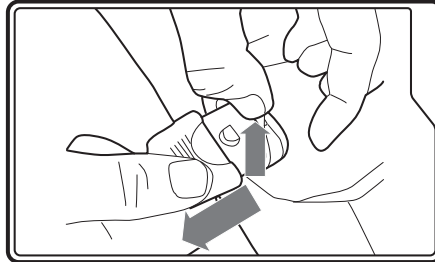


Machine washing

Only use a washing machine with a drum large enough to take the blanket without forcing it in.

-  Wash on the wool setting at 40°C.

Hand washing

- 
1. Use a mild washing liquid or detergent and lukewarm water.
 2. Immerse the blanket in the water and allow to soak for 5-10 minutes.
 3. Squeeze the soapy water through the fabric.
 4. Rinse the blanket thoroughly in cool water, gently squeezing the fabric.


WARNING: Do not wring.

- **NOTE:** Please ensure the blanket is fully dry before use.

Drying

Gently stretch the blanket back to its original shape and size before drying.

Tumble drying

-  Tumble dry on low heat

Line drying

This blanket can be line dried without applying clothes pegs to wired areas of the blanket.