



morphy richards

**3 Year
Guarantee***

*Upon registering your product
at morphyrichards.co.uk

ROAVA

Grind & Sip Fully-Automatic Espresso Machine



Model No.

**173501
173502**

User Manual

Please read and keep these instructions for future use



HEALTH AND SAFETY

The use of any electrical appliance requires the following common sense safety rules.

Please read these instructions carefully before using the product.

- **WARNING: Misuse of the appliance could cause personal injury.**
- This appliance shall not be used by children.
- Keep appliance and cord out of the reach of children.
- If the mains cable is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person in order to avoid a hazard.
- This appliance can be used by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.



HEALTH AND SAFETY

- For care & cleaning instructions, refer to the Cleaning Your Coffee Machine section of the manual.
- The appliance is fitted with a heating element which is subject to residual heat after use.
- Avoid contact with moving parts.
- Children shall not play with the appliance.
- This appliance is intended for household use only. It is not suitable for use in staff kitchen areas in shops, offices and other commercial environments.
- This appliance is not intended to be to be operated on an extension cable or by means of an external timer or separate remote control system.



HEALTH AND SAFETY

LOCATION

- Always locate your appliance away from the edge of the worktop.
- Ensure that the appliance is used on a firm, flat surface.
- Do not use the appliance outdoors or near water.
- **WARNING: Do not place the appliance onto a metal tray or metal surface whilst in use.**

MAINS CABLE

- Do not let the mains cable hang over the edge of the worktop where a child could reach it.
- Do not let the mains cable run across an open space e.g. between a low socket and a table.
- Do not let the mains cable run across a cooker or other hot area which might damage the cable.
- The mains cable should reach from the socket to the base unit without straining the connections.

PERSONAL SAFETY

- **WARNING: To protect against fire, electric shock and personal injury do not immerse cord, plug and appliance in water or any other liquid.**
- Unplug from the outlet before cleaning.

- Allow to cool thoroughly before putting on or taking off parts and before cleaning.
- Do not move the Coffee Maker while switched on.

OTHER SAFETY CONSIDERATIONS


- The use of attachments or tools not recommended or sold by Morphy Richards, may cause fire, electric shock or injury.
- Do not use the appliance for any use other than its intended purpose.
- Do not place the appliance on or near a hot gas or electric burner or in a heated oven.
- **WARNING: The appliance must not be immersed for cleaning.**
- **CAUTION:** To prevent damage to the appliance, do not use alkaline cleaning agents when cleaning. Use a soft cloth and mild detergent.



ELECTRICAL DETAILS

- Check that the voltage on the rating plate of your appliance corresponds with your house electricity supply which must be A.C. (Alternating Current).
- Should the fuse in the mains plug require changing, replace it with a fuse of the same rating as originally fitted.
- The power consumption in off mode is 0w.
- The appliance goes into off mode (0w) after 15 minutes.
- **WARNING:** This appliance must be earthed.


PRODUCT OVERVIEW

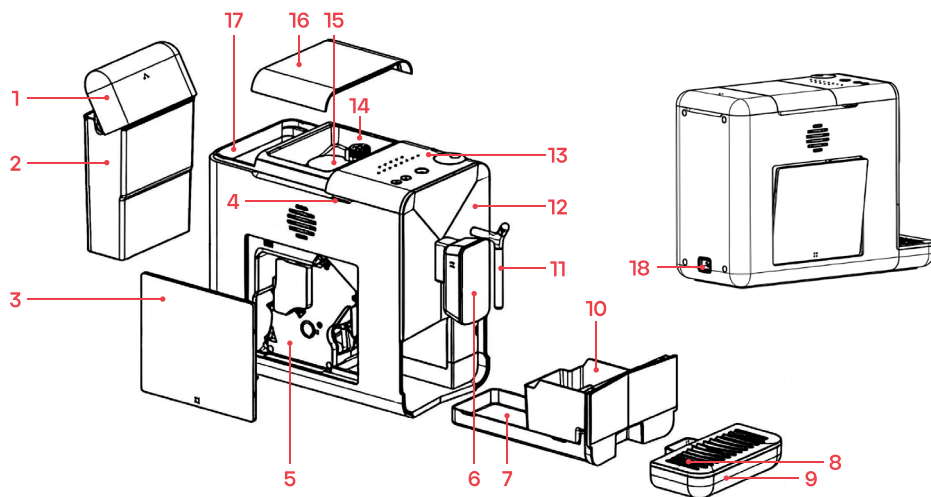

- | | |
|-----------------------------------|--|
| 1. Water tank lid | 11. Steam pipe with stainless steel sleeve |
| 2. Water tank | 12. Main unit |
| 3. Side cover | 13. Control panel |
| 4. Power On/Off button | 14. Coffee bean grinding adjustment knob |
| 5. Brewing assembly | 15. Grinding head protective cover |
| 6. Adjustable coffee brewing head | 16. Coffee bean hopper cover |
| 7. Internal drip tray | 17. Water tank holder |
| 8. Drip tray grid | 18. Power cable socket |
| 9. Drip tray | |
| 10. Coffee grounds container | |



PRODUCT OVERVIEW

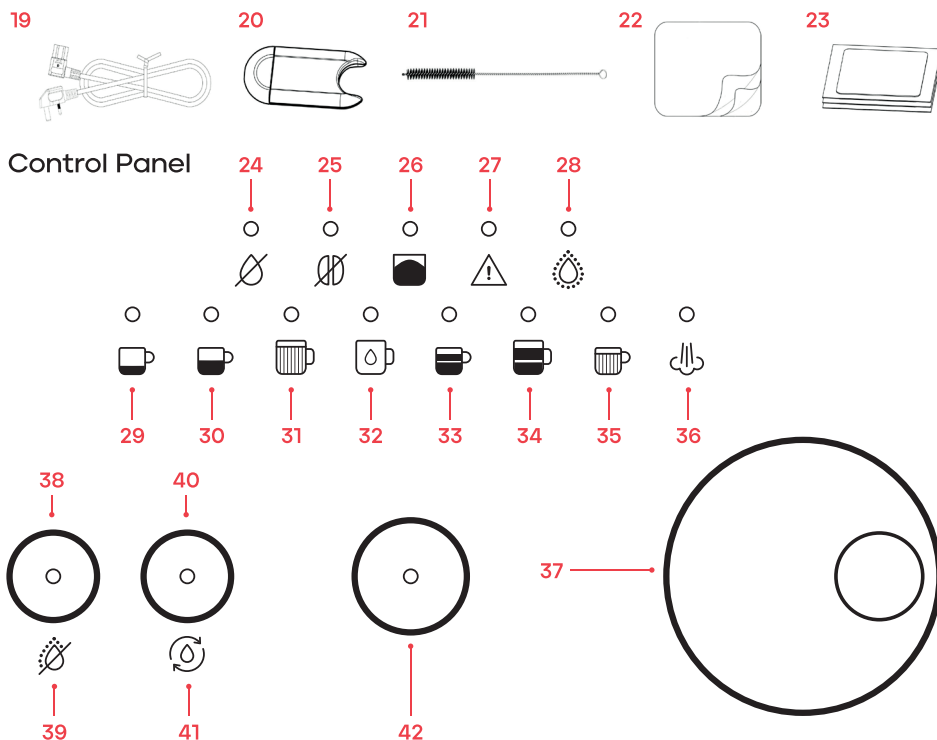

- | | |
|--------------------------------|------------------------------|
| 19. Power cable | 31. Americano indicator |
| 20. Steam nozzle | 32. Hot water indicator |
| cleaning needle | 33. Doppio + espresso |
| 21. Cleaning brush | coffee indicator |
| 22. Cleaning Cloth | 34. Double espresso |
| 23. 3 pack of descaler | coffee indicator |
| 24. Empty water tank indicator | 35. Long coffee indicator |
| 25. Coffee beans | 36. Steam function indicator |
| empty indicator | 37. Selector dial |
| 26. Coffee grounds | 38. Descale button |
| container full indicator | 39. Descale icon |
| 27. Brewing head | 40. Manual flushing button |
| cleaning indicator | 41. Manual flushing icon |
| 28. Descaler indicator | 42. Function confirmation |
| 29. Ristretto coffee indicator | button |
| 30. Espresso coffee indicator | |






BEFORE FIRST USE

- Remove all packaging from the coffee maker.
- Wash the detachable parts of the machine with warm water, such as the water tank and lid, side cover, coffee grounds container, drip trays, coffee bean hopper cover and brewing assembly.
- Dry thoroughly and re-assemble all parts.
- Connect the power cable to the power cable socket at the back of the coffee machine and plug into a mains socket.
- The first time you use your Coffee Machine, operate using the manual cleaning mode – see the Manual Flushing section.

IMPORTANT: NONE of the parts/accessories are dishwasher safe.

COFFEE BEAN GRINDING ADJUSTMENT KNOB (14)

- If you prefer a coarser coffee ground turn the knob (14) clockwise or for a finer coffee ground turn it anti-clockwise.

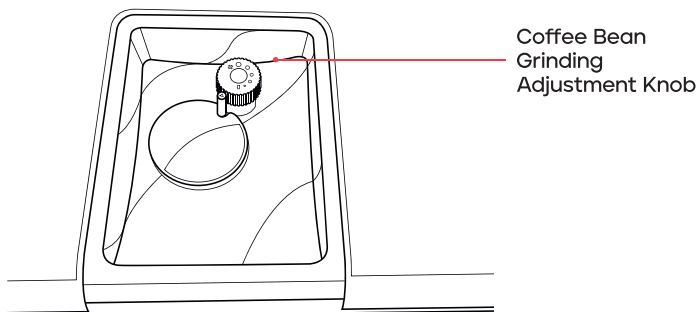

IMPORTANT: Adjustment should be carried out during grinding. Or before the first use when the hopper is empty.

Turning the Coffee bean grinding adjustment knob (14) while the grinding head is still and the hopper has coffee beans in it, may damage the grinding assembly.





USING YOUR COFFEE MACHINE

Drinks Selection

The coffee machine has eight drink functions, which can be selected by turning the Selector Dial (37).

1. Ristretto (29)
2. Espresso (30)
3. Americano (31)
4. Hot Water (32)
5. Doppio + Espresso (33)
6. Double Espresso (34)
7. Long Coffee (35)
8. Steam Function (36)


Drinks Selection	Dispense Amount or Time
Ristretto	20g - 30g
Espresso	30g - 40g
Americano	135g - 165g
Hot Water	45 Seconds
Doppio	30g - 40g
Double Espresso	60g - 80g
Lungo	80g - 100g
Steam	1 Minute

- Open the Water Tank Lid (1) and fill the Water Tank (2) with water, taking care not to exceed the MAX level.
- Ensure the Water Tank is located correctly into the coffee machine.



USING YOUR COFFEE MACHINE

- Pour the coffee beans into the Coffee Bean Hopper.
- Check the Internal Drip Tray (7) and Coffee Grounds Container (10) are fitted.
- Ensure the drip tray and grid (8&9) are in position.
- Press the Power On/Off button the coffee machine will start to heat up and the indicators will flash successively.
- After the end of heating, the machine will carry out the internal pipeline, self-cleaning cycle, when the cycle is complete, the machine is ready for use.
- Rotate the Selector Dial (37) clockwise or anti-clockwise until it reaches the corresponding drink indicator on the control panel.
- The Adjustable Coffee Brewing Head (6) can be moved up and down according to the size of the cup being used. And the drip tray and grid (8&9) can be removed if using very tall cups.
- Place the coffee cup or mug under the boiling head and press the Function Confirmation button (42).

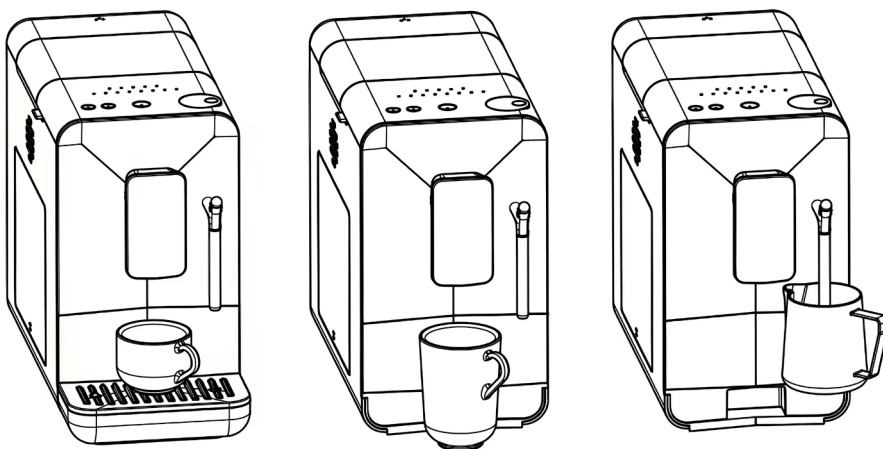



USING YOUR COFFEE MACHINE

- The indicator on the Function Confirmation button will light up and start to brew the coffee.
- The appliance will stop automatically and the indicator light on the Function Confirmation button will go off.
- The Function Confirmation button can be pressed at any time during brewing to cancel brewing.

Note: The amount of coffee that is ground cannot be adjusted for any of the drinks.

Note: If the coffee machine has been resting for 15 minutes or more, it is normal for the first few cups of coffee to be a slightly low temperature.

Note: It is recommended to set the water hardness for the first use. See the 'Setting the Water Hardness' section.

Note: If there is no drink selection made within 15 minutes, the coffee maker will shut down automatically.

Steam Function

- Rotate the Selector dial until the steam function  indicator lights up.
- Press the function confirmation button, the indicator will light up and the Steam Function indicator will begin to flash until the machine has heated to the required temperature. When the Steam Function indicator becomes steady it is ready to use.
- The Function Confirmation button will now be flashing.
- Place a container of milk under the steam pipe (11).
- Then press the Function Confirmation button (42) to start releasing steam while slowly rotating the container from bottom to top so that the milk frothed thoroughly.
- The maximum duration of steam release is one minute, if you want to stop steaming before the end of the process, press the Function Confirmation button again.



USING YOUR COFFEE MACHINE

- If you wish to continue steaming after the automatic stop, press the Function Confirmation button to restart the steam release.
- After heating the milk, inside of the steam pipe needs to be cleaned for a few seconds by releasing steam.
- Clean the steam pipe every time you use it to prevent milk residue building up or clogging. For complete cleaning of steam nozzles, see the section 'Cleaning and Maintenance'.
- A manual round of flushing is recommended after each use of the steam function.

Note: To prepare a traditional cappuccino or latte, we recommend using cold, fresh whole

- If you wish to continue steaming after the automatic stop, press the Function Confirmation button to restart the steam release.
- After heating the milk, inside of the steam pipe needs to be cleaned for a few seconds by releasing steam.
- Clean the steam pipe every time you use it to prevent milk residue building up or clogging. For complete cleaning of steam nozzles, see the section 'Cleaning and Maintenance'.
- A manual round of flushing is recommended after each use of the steam function.

Note: To prepare a traditional cappuccino or latte, we recommend using cold, fresh whole milk. The creaminess of the milk foam depends on the milk's fat content; therefore, whole milk is strongly advised.

Caution: During and after using the steam pipe will be very hot. To prevent burns DO NOT touch the steam pipe surface directly with your hands. If you need to rotate the pipe, hold it at the top with a dry cloth.



USING YOUR COFFEE MACHINE

Personalised Brewing

For each Drink Selection, you can customise the amount of coffee you brew or the amount of water you dispense.

- Select your preferred drink.
- Place a coffee cup or mug under the Adjustable Coffee Brewing Head.
- Press the Function Confirmation button (42) for at least 3 seconds, the machine will beep.
- The indicator light on the Function Confirmation button will start to flash, indicating the modification of the preset program.
- When the desired amount is dispensed, press the Function Confirmation button again. The indicator on the Function Confirmation button will become steady, and a beep indicates that the brewing amount has been saved.
- After a few seconds, the indicator on the Function Confirmation button will go out.
- The personalised setting is complete and will be remembered for future brewing.
- To restore factory settings press and hold the Descaling button (38) and Function Confirmation button (42) together for at least 3 seconds. The coffee machine will beep indicating that the factory settings are restored.

Setting the Water Hardness

- The factory default setting is hard water. The machine can be adjusted according to the actual water hardness in the user's area, thus reducing the frequency of descaling.

Note: If you do not know the hardness of the water your local water authority can be contacted for advice.



USING YOUR COFFEE MACHINE

- To adjust the water hardness setting, press the Descaling button (38), and Manual Flushing button (40) at the same time and hold for at least 3 seconds. The indicator lights will flash and the coffee grounds container full indicator (26) will illuminate. indicating that the water hardness is ready to be set.
- Press the Descaling button (38), the Coffee Grounds Container Full indicator (26) goes off and the Coffee Bean Empty indicator (25) illuminates. Press the Descaling button (38) again.
- The Empty Water Tank indicator (24) illuminates, now press the Manual Flushing button (40) to complete the setting.
- To save the setting. Within 15 seconds, press and hold the Manual Flushing button (40), and Function Confirm button (42) together for at least 3 seconds.

Power Off

- Ensure the drip tray (8&9) is in place and there is water in the tank.
- Press Power On/Off Press button (4), the control panel will cycle through the Drinks Selection indicator lights. The coffee machine will go then go through an automatic cleaning cycle if it has brewed at least one cup of coffee.
- At the end of the automatic cleaning cycle the coffee machine will shut down.



USING YOUR COFFEE MACHINE

Alerts

Empty Water Tank Indicator (24)

- When the Water Tank is not fitted, or there is no water in the tank or the water level is not sufficient, the corresponding indicator will flash. Re-fit the tank or fill the tank with water.

Coffee Bean Shortage Indicator (25)

- When the coffee beans in the coffee bean hopper have reached the lowest level or the hopper is empty, the indicator will remain lit. Add coffee beans to the hopper.

Coffee Grounds Container Full Indicator (26)

- When the Coffee Grounds container (10) and/or the Internal Drip Tray (7) is full, incorrectly assembled or not fitted into the coffee machine. The indicator will flash, and the coffee machine will not operate until the parts are properly assembled and/or emptied.

Brewing Assembly and Side Cover Indicator (27)

- If the Side Cover (3) or the Brewing Assembly (5) aren't fitted correctly or are missing. The indicator will flash, and the coffee machine will not operate until the parts are properly assembled.
- If the indicator is illuminated (steady) it is recommended that the Brewing Assembly and compartment around it are cleaned.

Descaling Indicator (28)

- If the indicator light is on, a descale cycle is strongly recommended.

This suggests that a descaling cycle is strongly recommended.

- If the indicator is flashing: All functions of the machine will be locked and a descale cycle must be carried out at once. Only after the descaling cycle will the machine return to normal operation.



CARE AND CLEANING

General Cleaning

Note: Consistently cleaning your coffee maker will allow optimum performance.

- It is recommended to carry out a simple daily cleaning routine, such as wiping the main unit with a damp cloth. Washing the drip trays and coffee grounds container. Rinsing the brewing assembly and water tank. See the specific cleaning sections.

Manual Flushing (40 & 41)

- Ensure the water tank has sufficient water in it and the drip tray is attached to the coffee machine.
- When the machine has completed pre-heat, press the Manual Flushing Button  (40). The indicator light in the button will illuminate and water will flow from the adjustable coffee brewing head.
- When the manual flushing cycle is complete, the indicator light will go out and a beep will be heard.

Cleaning the External Drip Tray and Drip Tray Grid (8&9)

- The drip tray (9) is fitted with a red float which rises through the drip tray grid (8) when the maximum water level is exceeded.
- Remove the drip tray and grid (8&9) and wash using warm soapy water.
- Dry the parts thoroughly and reassemble them on to the coffee machine.

Cleaning the Coffee Grounds Container (10) and Internal Drip Tray (7)

- Remove the coffee grounds container and the internal drip tray, by pulling outwards. Empty both and wash them in warm soapy water, dry thoroughly before reassembling.



CARE AND CLEANING

Note: The Coffee Grounds Container Full Indicator (26)  will flash until the coffee grounds container and the internal drip tray are re-fitted.

Note: We recommend daily cleaning of the coffee grounds container and internal drip tray.

- Residual moisture on internal trays is perfectly normal.

IMPORTANT: For the integral coffee grounds meter to re-set, the coffee grounds container should be removed from the coffee machine and emptied while the coffee machine is on. The coffee grounds container and internal drip tray should be removed from the coffee machine for a few seconds or the integral meter will not re-set.

Water Tank Cleaning


- Lift the water tank cover (1) and remove the tank (2) from the coffee machine.
- Wash the tank (2) under running water with a mild detergent, rinse thoroughly with fresh water and reinstall it in the machine.

Cleaning the Brewing Assembly (5)

- It is recommended to clean the Brewing Assembly at least once a week (i.e. remove from the machine and rinse them externally).
- When the indicator light on the Manual Flushing button (40) flashes, it means that the user must manually clean the brewing assembly, otherwise the coffee machine will not work.
- Remove the Side Cover (3) by pushing the bottom edge. Then press and hold down the red button on the Brewing Assembly (5) to remove it from the coffee machine.
- Rinse the Brewing Assembly (5) with running water, dry carefully and thoroughly. Wipe the chamber with a damp cloth and dry thoroughly before re-fitting the Brewing Assembly.
- Re-fit the Side Cover (3), ensuring it is located correctly.



CARE AND CLEANING

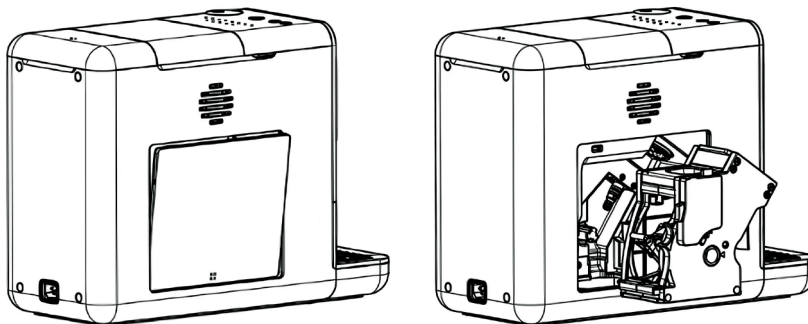

Note: After making 30 cups of coffee, The Brewing Head Cleaning indicator (27) will illuminate. The Brewing Assembly must be cleaned or the coffee machine will not operate until you do so. Remove the Brewing Assembly from the coffee machine and follow cleaning instructions above.

Note: The Brewing Assembly should be removed for cleaning while the coffee machine is powered on, to allow the integral counter to re-set. (The meter will not re-set for at least 10 seconds after each Drink Selection indicator has illuminated and turned on, and then the Manual Flush icon (41) has turned off.

- A manual cleaning cycle is recommended each time you do this. Please refer to the 'Manual Flushing' section

IMPORTANT: To avoid damage to components and accessories, DO NOT use the dishwasher to clean them.

Cleaning the Steam Pipe


- Before cleaning the steam pipe wait until it has cooled thoroughly.
- Turn the steam pipe clockwise to remove for cleaning.
- Separate the stainless steel sleeve from the steam pipe and wash thoroughly under running water. Use the steam nozzle cleaning needle to remove any blockages in the steam outlet hole.
- Dry thoroughly, reassemble the steam pipe and sleeve, then re-attach to the appliance.




CARE AND CLEANING



Turn clockwise to remove the steam pipe.

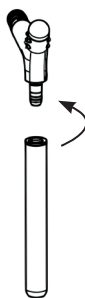

Turn anti-clockwise to re-attach the steam pipe.

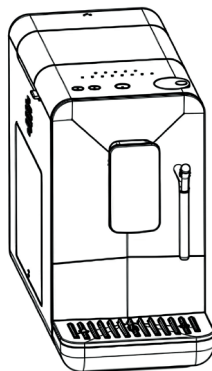

Pull downwards to remove stainless steel sleeve from the steam pipe.

Descaling

- We recommend you use a proprietary liquid descaler which is especially made for coffee machines and plastic kettles.

Note: Do not use a kettle descaler unless the packet specifically states it is suitable for Coffee Machines.

- The coffee machine indicates when the descaling cycle needs to be performed based on the set water hardness (see Setting Water Hardness).
- If the Descale indicator  (28) is on, it recommends that a descaling cycle is performed in order to retain optimum performance from the coffee machine and avoid damage that can be caused by the build-up of limescale in the product.
- At this point, you can continue to brew coffee and other drinks for a limited number of times.
- If the Descale indicator flashes, it means that a descaling cycle must be carried out or the machine cannot be used.



CARE AND CLEANING

To Descale the Coffee Machine

- Place a container with a minimum capacity of 1.4L under the Adjustable Coffee Brewing Head (6).
- Fill the Water Tank (2) to the MAX level (refer to the descaler instructions for the dosing ratio). Alternatively, citric acid or white vinegar can be used to a ratio of one hundred parts of water to three parts of citric acid or white vinegar.
- When the coffee machine is ready, press and hold the Descale button (38) for at least 5 seconds, the machine enters the descaling program, and the indicator light on the Descale button (38) stays illuminated throughout the descaling cycle.
- During the descaling cycle, the coffee machine will pump intermittently, to allow the descaling solution to work more effectively.
- When the Empty Water Tank Indicator  (24) illuminates, the machine will beep, indicating that the water tank has emptied of the descaling solution and the first cycle of descaling is complete.
- Rinse the water tank thoroughly with clean water. Then re-fill with clean water to the MAX level.
- Re-fit the Water Tank into the machine, the indicator light on the Descale button (38) will go off and the machine will automatically enter the flushing cycle.
- When the cycle is complete, the machine automatically shuts down.



CARE AND CLEANING

Note: At the end of the descaling cycle, if the Descale indicator (38) is still on, it requires the descaling process to be repeated.

IMPORTANT: The user must remain near the machine throughout the descaling process, as the water tank may need refilling during the process. The total descaling cycle is approximately 30 minutes.

Note: Consistently cleaning the coffee maker will allow optimum performance.

The frequency of descaling depends on the hardness of the water in your area and how often you use the coffee machine.

STORAGE

Emptying System

If you plan to store the coffee machine for a prolonged period, we recommend that the 'Emptying System' is used.

- To activate the cycle, press and hold, the Manual Flushing button (40) and the Function Confirmation button (42) for at least 3 seconds. The indicators on the buttons will flash and water/coffee will be drained from the system.
- The pump will operate until the system is empty, the coffee machine will then shut down.

Note: The Emptying System cycle can takes a few minutes. Do not turn off the coffee machine until the program is complete.



TROUBLESHOOTING

Problem	Solution
No power.	Check the fuse and try a new fuse with the same rating.
	Try a different appliance in the socket as it may be the socket that is at fault.
Coffee is too strong or weak.	Change the level of grinding to your personal choice - see the 'Coffee Bean Grinding Adjustment Knob' section.
Milk is not frothing.	Air and steam aren't getting into the milk. Remove the steam pipe and stainless steel sleeve and unblock the air hole with steam nozzle cleaning needle (20) if necessary.
Coffee isn't dispensing.	Make sure there is enough water in the tank.
	The coffee machine may need descaling. Follow instructions in the Descaling section of the manual.
Tripping electrics.	Try using a different socket.
	Ensure there are no other appliances being used on the same set of sockets as the coffee maker.



SPARES

Part Number	Description	Qty Per Product	Features Key Number
10284	Water Tank with lid, colour Stone	1	1 & 2
10285	Water Tank with lid, colour Olivine	1	1 & 2
10286	Brewing assembly	1	5
10287	Coffee ground container	1	10
10289	Internal drip tray with colour coded front. - Stone	1	7
10290	Internal drip tray with colour coded front. - Olivine	1	7
10292	External drip tray with level indicator, colour - Stone	1	9
10293	External drip tray with level indicator, colour - Olivine	1	9
10295	External drip tray grid with level indicator, colour - Stone	1	8
10296	External drip tray grid with level indicator, colour - Olivine	1	8





SPARES

Part Number	Description	Qty Per Product	Features Key Number
10298	Brewing Assembly Side Cover, colour - Stone	1	3
10299	Brewing Assembly Side Cover, colour - Olivine	1	3
10301	Coffee bean hopper cover, colour - Stone	1	16
10302	Coffee bean hopper cover, colour - Olivine	1	16
10303	Power cord	1	19
10333	Steam pipe with stainless steel sleeve	1	12
10341	Steam nozzle cleaning needle	1	20
10331	Cleaning brush	1	21
10342	Cleaning cloth	1	22
10343	3 Pack of descaler	1	23



CONTACT US

If you are having a problem with your appliance, please contact our Helpline, as we are more likely to be able to help than the store you purchased the item from. Please have the product name, model number and serial number to hand when you contact us to help us deal with your enquiry quicker.

email: hello@morphyrichards.co.uk

www.morphyrichards.co.uk

PRODUCT RECYCLING



For electrical products sold within the European Community, at the end of the electrical products useful life, it should not be disposed of with household waste.

Please recycle where facilities exist.

Check with your Local Authority or retailer for recycling advice in your country.



REGISTERING YOUR 3 YEAR GUARANTEE

Your standard 2 year guarantee is extended for an additional 1 year when you register the product within 28 days of purchase with Morphy Richards. If you do not register the product with Morphy Richards within 28 days, your product is guaranteed for 2 years.



**To validate your 3 year guarantee,
scan the QR code or register online
at www.morphyrichards.co.uk**

N.B. Each qualifying product needs to be registered with Morphy Richards individually. Please note that the 2 year guarantee is only available in the UK. Please refer to the 2 year guarantee for more information.

YOUR 2 YEAR GUARANTEE

It is important to retain the retailer's receipt as proof of purchase. Staple your receipt to the back cover for future reference.

Please quote the following information if the product develops a fault. These numbers can be found on the base of the product.

Model no.

Serial no.

All Morphy Richards products are individually tested before leaving the factory. In the unlikely event of any appliance proving to be faulty within 28 days of purchase, it should be returned to the place of purchase for it to be replaced. If the fault develops after 28 days and within 24 months of original purchase, you should contact the Helpline quoting Model number and Serial number on the product, or write to Morphy Richards at the address shown. You may be asked to return a copy of proof of purchase.

Subject to the exclusions set out on the next page (see Exclusions), the faulty appliance will then be repaired or replaced as appropriate and dispatched usually within 7 working days of receipt.

If, for any reason, this item is replaced or repaired during the 2 year



REGISTERING YOUR 3 YEAR GUARANTEE

guarantee period, the guarantee on the new item will be calculated from the original purchase date. Therefore it is vital to retain your original till receipt or invoice to indicate the date of initial purchase.

To qualify for the 2 year guarantee, the appliance must have been used according to the instructions supplied.

The appliance is intended for domestic use only. Misuse or use for commercial or any other purpose will render the guarantee invalid.

Exclusions

Morphy Richards shall not be liable to replace or repair the goods under the terms of the guarantee where:

1. The fault has been caused or is attributable to accidental use, misuse, negligent use or used contrary to the manufacturer's recommendations or where the fault has been caused by power surges or damage caused in transit.
2. The appliance has been used on a voltage supply other than that stamped on the products.
3. Repairs have been attempted by persons other than our service staff (or authorised dealer).
4. The appliance has been used for hire purposes or non domestic use.
5. The appliance is second hand or refurbished.
6. Morphy Richards reserves the right not to carry out any type of servicing under the guarantee at its discretion.

This guarantee does not confer any rights other than those expressly set out above and does not cover any claims for consequential loss or damage. This guarantee is offered as an additional benefit and does not affect your statutory rights as a consumer. Morphy Richards products are intended for household use only. See usage limitations within the location safety instructions.

Disclaimer

Morphy Richards has a policy of continuous improvement in product quality and design. The company, therefore reserves the right to change the specification of its models at any time.



NOTES

[illegible]



CM173501MUK Rev1

morphy richards



@morphyrichardsuk #loveyourmorphy

[morphyrichards.co.uk](https://www.morphyrichards.co.uk)

Morphy Richards

9 Cabot Lane, Poole, Dorset, BH17 7BY, UK

