



morphy richards

**3 Year
Guarantee***

*Upon registering your product
at morphyrichards.co.uk

BREW & BLEND Electric Coffee Grinder & Burr



Model No.

210253

User Manual

Please read and keep these instructions for future use





HEALTH AND SAFETY

The use of any electrical appliance requires the following common sense safety rules.

Please read these instructions carefully before using the product.

- This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- This appliance shall not be used by children
- Keep the appliance and cord out of the reach of children.
- **CAUTION:** Ensure that the coffee grinder is switched off before removing the coffee bean container from the main motor unit.



HEALTH AND SAFETY

- This appliance is intended for household use only. It is not suitable for use in staff kitchen areas in shops, offices and other working environments.
- Keep hands, hair and clothing and utensils away from all moving parts while in operation to prevent personal injury and / or damage to the appliance.
- Always disconnect the coffee grinder from the supply if it is left unattended and before assembling, disassembling or cleaning.
- The appliance is not intended to be operated on an extension cable or by means of an external timer or a separate remote control system.
- **WARNING: Misuse can cause personal injury.**



HEALTH AND SAFETY

LOCATION

- Do not use the outdoors or near water
- Always locate your appliance away from the edge of the worktop.
- Do not place the coffee grinder on a highly polished wooden surface as damage may occur to the surface.

MAINS CABLE

- Do not let the mains cable hang over the edge of the worktop where a child could reach it.
- Do not let the lead run across an open surface e.g. between a low socket and a table.
- Do not let the cable run across a cooker or other hot area which might damage the cable.
- The mains cable should reach from the socket to the power base without straining the connections.
- The power cord cannot be replaced.

PRODUCT SPECIFIC SAFETY

- Do not use attempt to operate the coffee grinder without the lid in place.
- Do not overfill the grinding bowl, this may cause damage to the product and will invalidate your guarantee.
- Do not remove the lid until grinding bowl has come to a stop.

OTHER SAFETY CONSIDERATIONS

- Do not use the appliance for any other use other than its intended purpose.
- The use of appliances or tools not recommended or sold by Morphy Richards may cause fire, electric shock or injury.
- **WARNING:** Misuse of this appliance could cause personal injury.



 
 


ELECTRICAL REQUIREMENTS

Check that the voltage on the rating plate of your appliance corresponds with your house electricity supply which must be AC. (Alternating Current). Should the fuse in the mains plug require changing, replace it with a fuse of the same rating as originally fitted.

WARNING: This appliance must be earthed.

PRODUCT OVERVIEW

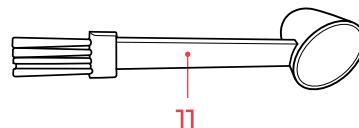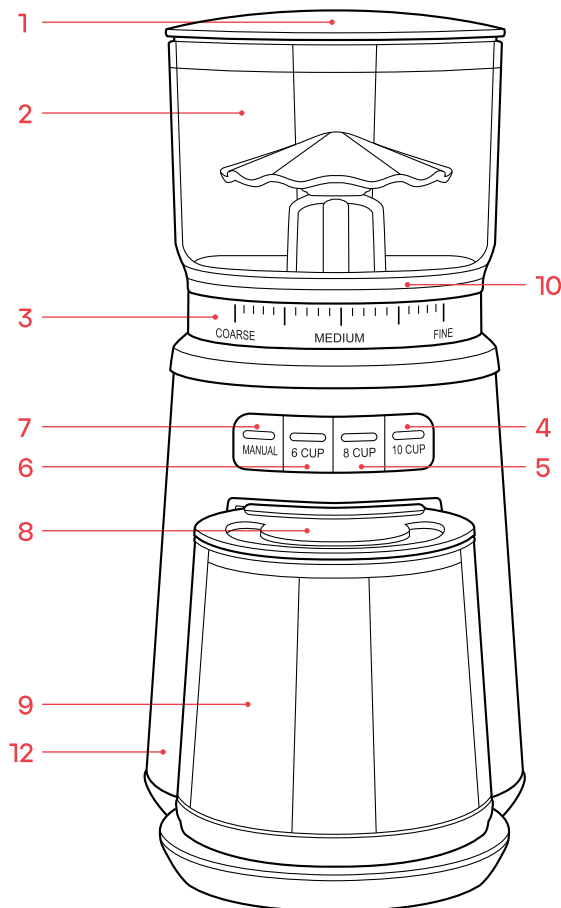

1. Coffee bean container lid
2. Coffee bean container
3. Coffee bean grind setting
4. 10 cup selector button
5. 8 cup selector button
6. 6 cup selector button
7. Manual grind selector button
8. Coffee grounds container lid
9. Coffee grounds container
10. Grinding burr
11. Measuring scoop/
cleaning brush
12. Main Motor Unit





BEFORE FIRST USE

- Remove all packaging materials.
- Remove any stickers or labels from the appliance. Do not remove the rating label on the bottom of the appliance.

USING YOUR COFFEE GRINDER




ADJUSTING AMOUNT

Never grind more than the amount of coffee required for use within the next hour as ground coffee is quickly spoilt. Use the cup selector or manual buttons to determine the amount of coffee produced for your needs.

GRIND CONSISTENCY

It is important that the grounds are suitable for your coffee maker or it could produce an inferior coffee.

Tip: The grind guide below provides an indication of which coffee ground is most suited to the type of coffee maker to be used. The table should be used as a guide and settings adjusted to suit your coffee maker and your preferred taste.

Setting	Grounds suitable for
 Fine	Espresso - Pump or Steam
 Medium	Filter Coffee Maker / Moka Pots / Stove Tops
 Coarse	French Press / Plunger / Cafetiere





USING YOUR COFFEE GRINDER

1. Stand the Coffee Grinder on a flat, level surface.
2. Fill the Coffee Bean Container with required amount of beans, replace the Coffee Bean Container Lid making sure it fits securely. (The maximum fill is 200g of coffee beans.)
3. Place the Coffee Bean Container onto the Main Motor Unit with the arrows on the coffee bean container and the coffee bean ground setting lined up, then twist the coffee bean container anti-clockwise until the arrow is aligned with the required ground setting (coarse to fine).
4. Place the coffee grounds container with its lid onto the Main Motor Unit.
5. Plug into the power socket.
6. Press either the 10, 8 or 6 cup selector button, to begin grinding. The grinder will automatically stop when the correct amount of coffee has been ground with coffee grounds deposited in the coffee grounds container.
7. Alternatively, the Manual Grind selector button can be used to grind small amounts of coffee, or to have more precise control in how much coffee is ground. The grinder will continue to run while the button is held down with coffee grounds deposited in the coffee grounds container and will stop grinding when the button is released.
8. Unplug from the power socket.
9. Lift out the coffee grounds container from the unit, remove the lid and pour out the coffee grounds.

WARNING: The grinder must have come to a complete stop before removing the coffee grounds container.





COFFEE GRINDING TIPS

1. COARSE grind is generally used for French Press, Plunger or Cafetieres. MEDIUM grind for Filter Coffee Makers, Moka Pots and Stove Tops. A FINE grind is used for Espresso, Pump or Steam.
2. For the freshest, most flavourful coffee, grind only enough for the pot you are making. Coffee beans keep up to 2 months in the freezer in an airtight container. Coffee grounds left in your grinder can become stale and affect the flavour of newly ground coffee. Be sure to clean after each use.
3. This grinder can only grind dry, brittle foods.
4. It will not grind anything moist, extremely hard, or gummy such as whole ginger, chocolate, sesame seeds or oily spices such as cinnamon, cloves or nutmeg. Do not grind peanuts or grains such as wheat, rice, barley or dried corn.
5. Never use it to chop ice cubes.



 


COFFEE PREPARATION GUIDE


Your coffee grinder helps you to make a variety of coffee drinks helping you to create the coffee shop experience in your own home. The diagrams on this page are a simple guide showing you the percentage of ingredients that make up each of the drink types.



Espresso

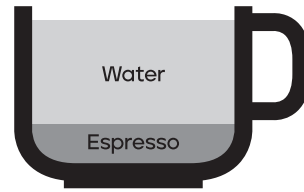

Americano

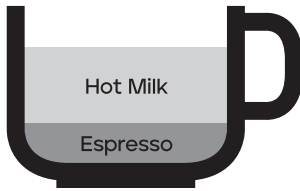 


Flat White



Espresso Macchiato



 Espresso con Panna

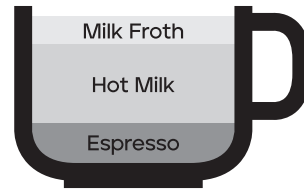

Caffé Latte



Cappuccino



 
Caffé Mocha



CLEANING AND MAINTENANCE

- Before cleaning ensure that the appliance is unplugged.
- Remove the coffee bean container and the coffee grounds container from the base unit, dispose of any remaining coffee beans and coffee grounds.
- To remove the grinding burr, rotate clockwise to unlock, grip tightly and lift straight up to remove. See Fig. below.
- All removeable parts can be washed in warm soapy water. They are not dishwasher safe.
- Ensure all washed parts are completely dry before replacing.
- To clean the grinder base unit wipe with a damp cloth and use the soft cleaning brush provided to remove any excess coffee grounds.

WARNING: Never immerse the main motor unit in water or any other liquids.

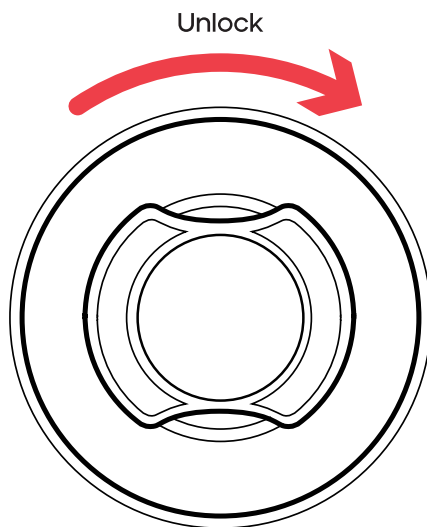



TROUBLESHOOTING

Problem	Possible Cause	Solution
Grinder does not start	Grinder not plugged in	Plug into power socket
	Coffee bean container is not attached correctly	Twist the coffee bean container to the required consistency setting
	Grind selector button hasn't been pressed	Press 6, 8 or 10 cup or manual selector button to start grinding
Motor is running but no coffee grounds are coming from the ground outlet	There are no coffee beans in the coffee bean container	Fill the coffee bean container with coffee beans
	Coffee grinder or coffee bean container is blocked	Remove the coffee bean container and grinding burr and inspect for blockages, refer to care and cleaning
Not enough / too much ground coffee	Grind amount requires adjustment	Grind amount requires adjustment. Select correct 6, 8 or 10 cup. For more precise control in how much coffee is ground use the manual selector button



REGISTERING YOUR 3 YEAR GUARANTEE

Your standard 2 year guarantee is extended for an additional 1 year when you register the product within 28 days of purchase with Morphy Richards. If you do not register the product with Morphy Richards within 28 days, your product is guaranteed for 2 years.



**To validate your 3 year guarantee,
scan the QR code or register online
at www.morphyrichards.co.uk**

N.B. Each qualifying product needs to be registered with Morphy Richards individually. Please note that the 2 year guarantee is only available in the UK. Please refer to the 2 year guarantee for more information.

YOUR 2 YEAR GUARANTEE

It is important to retain the retailer's receipt as proof of purchase. Staple your receipt to the back cover for future reference.

Please quote the following information if the product develops a fault. These numbers can be found on the base of the product.

Model no.

Serial no.

All Morphy Richards products are individually tested before leaving the factory. In the unlikely event of any appliance proving to be faulty within 28 days of purchase, it should be returned to the place of purchase for it to be replaced. If the fault develops after 28 days and within 12 months of original purchase, you should contact the Helpline quoting Model number and Serial number on the product, or write to Morphy Richards at the address shown. You may be asked to return a copy of proof of purchase.

Subject to the exclusions set out below (see Exclusions), the faulty appliance will then be repaired or replaced as appropriate and dispatched usually within 7 working days of receipt.

If, for any reason, this item is replaced or repaired during the 2 year





REGISTERING YOUR 3 YEAR GUARANTEE

guarantee period, the guarantee on the new item will be calculated from the original purchase date. Therefore it is vital to retain your original till receipt or invoice to indicate the date of initial purchase.

To qualify for the 2 year guarantee, the appliance must have been used according to the instructions supplied.

The appliance is intended for domestic use only. Misuse or use for commercial or any other purpose will render the guarantee invalid.

Exclusions

Morphy Richards shall not be liable to replace or repair the goods under the terms of the guarantee where:

1. The fault has been caused or is attributable to accidental use, misuse, negligent use or used contrary to the manufacturer's recommendations or where the fault has been caused by power surges or damage caused in transit.
2. The appliance has been used on a voltage supply other than that stamped on the products.
3. Repairs have been attempted by persons other than our service staff (or authorised dealer).
4. The appliance has been used for hire purposes or non domestic use.
5. The appliance is second hand or refurbished.
6. Morphy Richards reserves the right not to carry out any type of servicing under the guarantee at its discretion.

This guarantee does not confer any rights other than those expressly set out above and does not cover any claims for consequential loss or damage. This guarantee is offered as an additional benefit and does not affect your statutory rights as a consumer. Morphy Richards products are intended for household use only. See usage limitations within the location safety instructions.

Disclaimer

Morphy Richards has a policy of continuous improvement in product quality and design. The company, therefore reserves the right to change the specification of its models at any time.



PRODUCT RECYCLING



For electrical products sold within the European Community, at the end of the electrical products useful life, it should not be disposed of with household waste.

Please recycle where facilities exist.

Check with your Local Authority or retailer for recycling advice in your country.

CONTACT US

If you are having a problem with your appliance, please contact our Helpline, as we are more likely to be able to help than the store you purchased the item from. Please have the product name, model number and serial number to hand when you contact us to help us deal with your enquiry quicker.

email: hello@morphyrichards.co.uk

www.morphyrichards.co.uk





CM210253MUK Rev1

morphy richards



@morphyrichardsuk #loveyourmorphy

morphyrichards.co.uk

Morphy Richards

9 Cabot Lane, Poole, Dorset, BH17 7BY, UK

