



morphy richards

**3 Year
Guarantee***

*Upon registering your product
at morphyrichards.co.uk

Pour Over Coffee Set



Model No.
858752

User Manual

Please read and keep these instructions for future use





HEALTH AND SAFETY

IMPORTANT: Read this manual thoroughly and retain for future reference. It contains important information about safety, use and maintenance of the product.

WARNING: Failure to comply with the instructions may cause the risk of burns from the pour over coffee maker.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge.
- Keep out of reach of children.
- DO NOT leave children in the proximity of the filtering coffee maker.
- DO NOT leave the coffee maker unattended while in use.
- DO NOT use the coffee maker, milk frother in an oven or microwave.
- Hot liquids should be handled carefully to avoid burns or scalds.
- The Pour Over Coffee Set is intended for household use only.



HEALTH AND SAFETY

- Use the coffee maker and milk frother as instructed in the Using Your Pour Over Coffee Set section of this manual.
- **CAUTION:** The body of the glass carafe can reach high temperatures. To avoid burns DO NOT touch the hot surfaces. It is recommended to move the glass carafe holding the silicone collar or use an oven mitt or glove when handling it.
- Always keep the coffee maker away from the edge of a worktop where it could be accidentally knocked over.



HEALTH AND SAFETY

**PLEASE BE AWARE OF HOT SURFACES.
HANDLE WITH CARE.**




**CAUTION!
HOT
SURFACE!**

TREATING SCALDS

- Run cold water over the affected area immediately.
- Do not stop to remove clothing.
- Seek medical advice quickly.


FITTING THE BATTERIES

- Twist the top cover anticlockwise to remove it from the Main Unit.
- Insert 2 x AA batteries (not supplied), noting the polarity marked on the product.
- Replace the top cover and tighten clockwise.
- **Important:** When required, always replace both batteries. Do not mix old and new batteries.

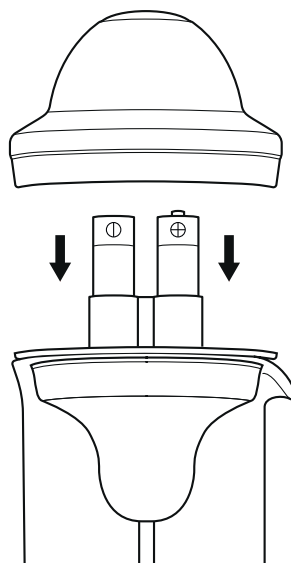



PRODUCT OVERVIEW

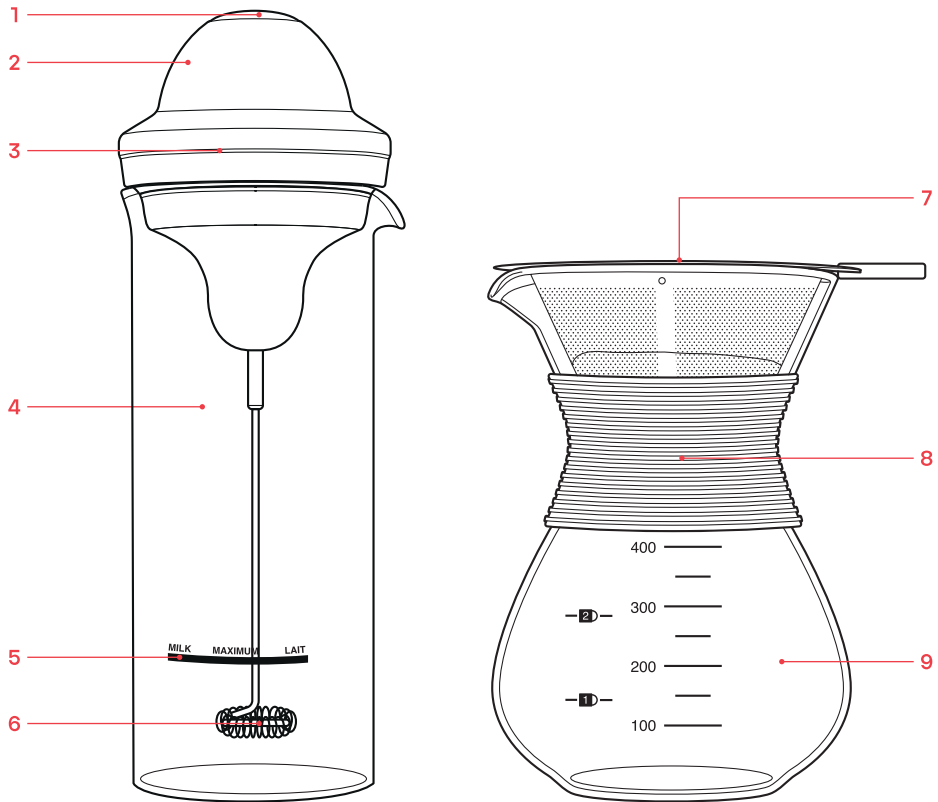

1. On/off button
2. Top Cover
3. Main Unit
4. Glass Frothing Jug
5. Maximum Fill Line
6. Frother
7. Stainless Steel Coffee Filter
8. Silicone Collar
9. Glass Carafe



BEFORE FIRST USE

- Before first use, remove all labels and packaging materials from the Pour Over Coffee Set.
- Wash the Glass Carafe and Glass Milk Frother Jug with warm water and a mild detergent, rinse thoroughly, and dry (see the Care & Cleaning section of this manual).
- DO NOT immerse the Main Unit of the milk frother in water, use a warm damp cloth to clean.


USING YOUR POUR OVER COFFEE SET

POUR OVER COFFEE

- Place the desired amount of ground coffee into the stainless steel filter. One tablespoon of ground coffee per cup is recommended (Fig 1).
- Heat the water using an electric or stovetop kettle. When the desired temperature is reached, slowly pour the hot (NOT boiling) water in a circular motion into the filter. It is recommended to pour 150 ml of water per cup (Fig 2).
- Brewing may take up to 5 minutes depending on the amount of water and type of coffee used (Fig 3).
- When filtering is complete remove the filter from the carafe and serve the coffee (Fig 4).



USING YOUR POUR OVER COFFEE SET

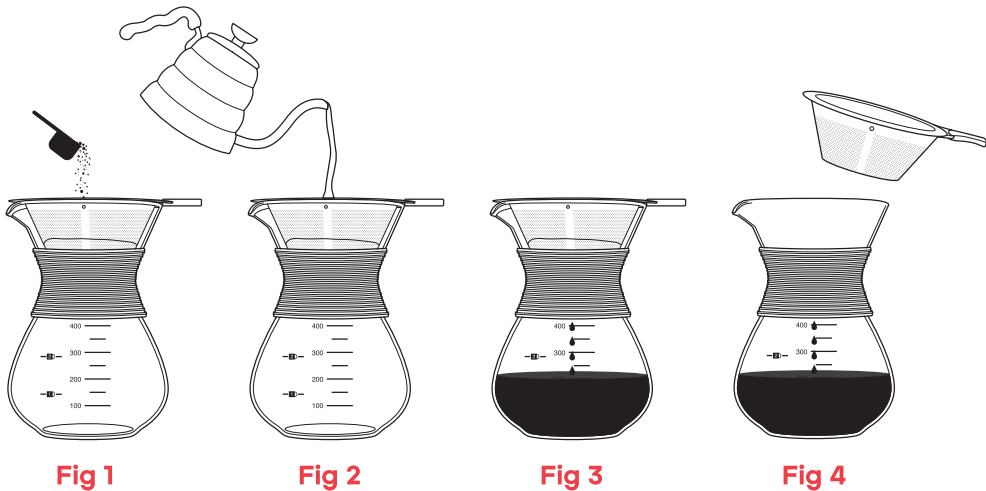

IMPORTANT:

- This Glass Carafe coffee maker is not designed to be exposed to a heat source (e.g. microwave, electric or gas hob etc.) and should only be used for coffee brewing as instructed above).
- The Glass Carafe is heat-resistant and withstands up to 100°C / 210°F, however, we recommend using hot NOT boiling water to brew your coffee.
- Prior to each use, check that the Glass Carafe has no scratches, cracks, or chips. Do not use if it is scratched, chipped, or cracked.
- To prevent burns, avoid touching the Glass Carafe during use. Always handle the coffee maker by the silicone collar or use an oven mitt or glove.
- Allow the coffee maker to cool completely before cleaning or storing it.
- Never leave children or infants unattended near the coffee maker when in use.
- Not dishwasher safe.



USING YOUR POUR OVER COFFEE SET

MILK FROTHER

- Preheat milk to about 65°C in a pan on the stove top or in a jug/mug for approximately 45 seconds in a microwave.
- Add warm milk to the Glass Frothing Jug. Do Not fill the past the Maximum fill line.
- Place the Main Unit onto the frothing jug.
- Press and hold the ON/OFF button to start frothing.
- Release the ON/OFF button when enough froth has been produced.
- Serve the milk immediately.

IMPORTANT:


- Never leave children or infants unattended near the milk frother when in use.
- For optimal performance and to ensure the longevity of the motor, DO NOT exceed 5 minutes of continuous frothing. Allow the product to rest for 1 - 2 minutes before using again.
- Excessive use may result in decreased motor performance.
- Not dishwasher safe.



CARE AND CLEANING

IMPORTANT:

- DO NOT immerse the Main Unit of the milk frother in water or other liquids.
- Clean the Main Unit with a warm, damp cloth and dry thoroughly.
- Always wash the Glass Carafe, Glass Frothing Jug and Stainless Steel Coffee Filter with warm water and a mild detergent after each use.
- Rinse well and dry thoroughly,
- The Frother can be cleaned under running water. Dry thoroughly.
- Note: Care must be taken not to wet the Main Unit.
- Not Dishwasher Safe.

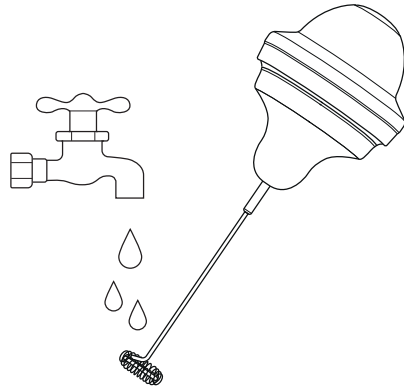

STORAGE

IMPORTANT:

- Ensure all parts of the product are clean and dry before storing.
- Store in a clean, dry place at room temperature when not in use.
- If the product isn't used for prolonged periods, the batteries should be removed from the Milk Frother to avoid leakage and possible damage to the product.



TROUBLESHOOTING

Problem	Solution
Milk frother has no power.	The batteries don't have sufficient charge. Replace with 2 new AA batteries.
	Has the product been used consecutively without resting? Allow the motor unit time to cool down.
Poor frothing results.	Over time milk/drinks residue can accumulate on the frother, affecting its performance. Wash & rinse the frother thoroughly in warm water and a mild detergent. Rinse well.
Frother is not turning.	Make sure the liquid you are trying to froth is not too thick or dense.
Coffee not filtering.	Filter holes may be blocked. In case of blockages, clean thoroughly under running water using a small, soft bristled brush or a needle before using the coffee maker again. Always wash thoroughly after each use.



CONTACT & SUPPORT

For help with your appliance, please visit our Help Centre:

support.morphyrichards.co.uk

Here you can browse FAQs, troubleshoot, or submit a Contact Us form.

PRODUCT RECYCLING



For electrical products sold within the European Community, at the end of the electrical products useful life, it should not be disposed of with household waste.

Please recycle where facilities exist.

Check with your Local Authority or retailer for recycling advice in your country.



Li-ion

The lithium battery this product requires, is not a serviceable item. Check with your Local Authority for recycling advice.





REGISTERING YOUR 3 YEAR GUARANTEE

Your standard 2 year guarantee is extended for an additional 1 year when you register the product within 28 days of purchase with Morphy Richards. If you do not register the product with Morphy Richards within 28 days, your product is guaranteed for 2 years.



**To validate your 3 year guarantee,
scan the QR code or register online
at www.morphyrichards.co.uk**

N.B. Each qualifying product needs to be registered with Morphy Richards individually. Please note that the 2 year guarantee is only available in the UK. Please refer to the 2 year guarantee for more information.

YOUR 2 YEAR GUARANTEE

It is important to retain the retailer's receipt as proof of purchase. Staple your receipt to the back cover for future reference.

Please quote the following information if the product develops a fault. These numbers can be found on the base of the product.

Model no.

Serial no.

All Morphy Richards products are individually tested before leaving the factory. In the unlikely event of any appliance proving to be faulty within 28 days of purchase, it should be returned to the place of purchase for it to be replaced. If the fault develops after 28 days and within 24 months of original purchase, you should contact the Helpline quoting Model number and Serial number on the product, or write to Morphy Richards at the address shown. You may be asked to return a copy of proof of purchase.

Subject to the exclusions set out on the next page (see Exclusions), the faulty appliance will then be repaired or replaced as appropriate and dispatched usually within 7 working days of receipt.

If, for any reason, this item is replaced or repaired during the 2 year



REGISTERING YOUR 3 YEAR GUARANTEE

guarantee period, the guarantee on the new item will be calculated from the original purchase date. Therefore it is vital to retain your original till receipt or invoice to indicate the date of initial purchase.

To qualify for the 2 year guarantee, the appliance must have been used according to the instructions supplied.

The appliance is intended for domestic use only. Misuse or use for commercial or any other purpose will render the guarantee invalid.

Exclusions

Morphy Richards shall not be liable to replace or repair the goods under the terms of the guarantee where:

1. The fault has been caused or is attributable to accidental use, misuse, negligent use or used contrary to the manufacturer's recommendations or where the fault has been caused by power surges or damage caused in transit.
2. The appliance has been used on a voltage supply other than that stamped on the products.
3. Repairs have been attempted by persons other than our service staff (or authorised dealer).
4. The appliance has been used for hire purposes or non domestic use.
5. The appliance is second hand or refurbished.
6. Morphy Richards reserves the right not to carry out any type of servicing under the guarantee at its discretion.

This guarantee does not confer any rights other than those expressly set out above and does not cover any claims for consequential loss or damage. This guarantee is offered as an additional benefit and does not affect your statutory rights as a consumer. Morphy Richards products are intended for household use only. See usage limitations within the location safety instructions.

Disclaimer

Morphy Richards has a policy of continuous improvement in product quality and design. The company, therefore reserves the right to change the specification of its models at any time.



HW858752MUK Rev1

morphy richards



@morphyrichardsuk #loveyourmorphy

[morphyrichards.co.uk](https://www.morphyrichards.co.uk)

Morphy Richards

9 Cabot Lane, Poole, Dorset, BH17 7BY, UK

