



**morphy richards**



AIRFLEX  
**14" Tower Fan**

with Built-In Device Charger



Model No.  
**820250,**  
**820251**

**User Manual**

Please read and keep these instructions for future use





## HEALTH AND SAFETY

The use of any electrical appliance requires the following common sense safety rules.

**Read these instructions carefully and retain for future reference.**

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- If the mains cable is damaged, it must be replaced by the manufacturer, it's service agent or similarly qualified person in order to avoid a hazard.
- **WARNING:** Misuse of appliance could cause personal injury.
- Keep the appliance and its cord out of reach of children.





## HEALTH AND SAFETY

- This appliance is intended for household use only. It is not suitable for use in staff kitchen areas in shops, offices and other commercial environments.
- The appliance is not intended to be operated on an extension cable or by means of an external timer or separate remote control.





## HEALTH AND SAFETY

### LOCATION

- Ensure that the appliance is used on a firm, flat surface to reduce noise and vibration.
- Do not expose the appliance to direct sunlight.
- Do not use the appliance near water.
- The appliance should be a minimum of 30cm away from a wall or other obstructions that may prevent or impair oscillation.
- The appliance should be stood upright during operation; it should NEVER be laid on its side.
- Do not use the appliance next to curtains, clothing, tablecloths, hair or other items that can be drawn into unit.
- Do not use the appliance near flammable or explosive gases.

### MAINS CABLE

- Do not let the cable hang over the edge of the worktop where a child could reach it.
- Do not let the cable run across an open space e.g. between a low socket and table.
- Do not let the cable run across a cooker or other hot area which might damage the cable.
- The charging cable should run from the power source/socket to the appliance without straining the connections.

- Do not operate the appliance with a damaged charging cable or charger.

### PERSONAL SAFETY

- Keep hands, hair and clothing, and utensils away from the appliance while in operation, to prevent personal injury and/or damage to the appliance.
- Do not operate with wet hands.

### OTHER SAFETY CONSIDERATIONS

- The use of attachments or tools not recommended or sold by Morphy Richards, may cause fire, electric shock or injury.
- Do not move the fan while switched on.
- Do not use this product for anything other than it's intended use.
- Unplug from the outlet when not in use.
- **WARNING:** The appliance must not be immersed in water for cleaning.
- **WARNING:** Misuse of this appliance could cause personal injury.


## ELECTRICAL DETAILS

- Check that the voltage on the rating plate of your appliance corresponds with your house electricity supply which must be A.C. (Alternating Current).
- Should the fuse in the mains plug require changing, replace it with a fuse of the same rating as originally fitted.
- **WARNING:** This appliance must be earthed.

Description	Symbol	Value	Unit
Maximum fan flow rate	F	3.23	m <sup>3</sup> /min
Fan power input	P	6.00	W
Service value	SV	0.54	(m <sup>3</sup> /min)W
Standby power consumption	PSB	0.38	W
Off mode power consumption	Poff	-	W
Fan sound power level	LWA	46.30	dB (A)
Maximum air velocity	C	2.48	meters/sec
Seasonal electricity consumption (Remark: Calculate according to the formula, provided by manufacturer. $Q=PF *320 + POFF *1120$ . POFF is the power consumption in Standby mode or Off mode (KW), PF is the nominal fan power input (KW))	Q	2.3	kWh/a



## PRODUCT OVERVIEW

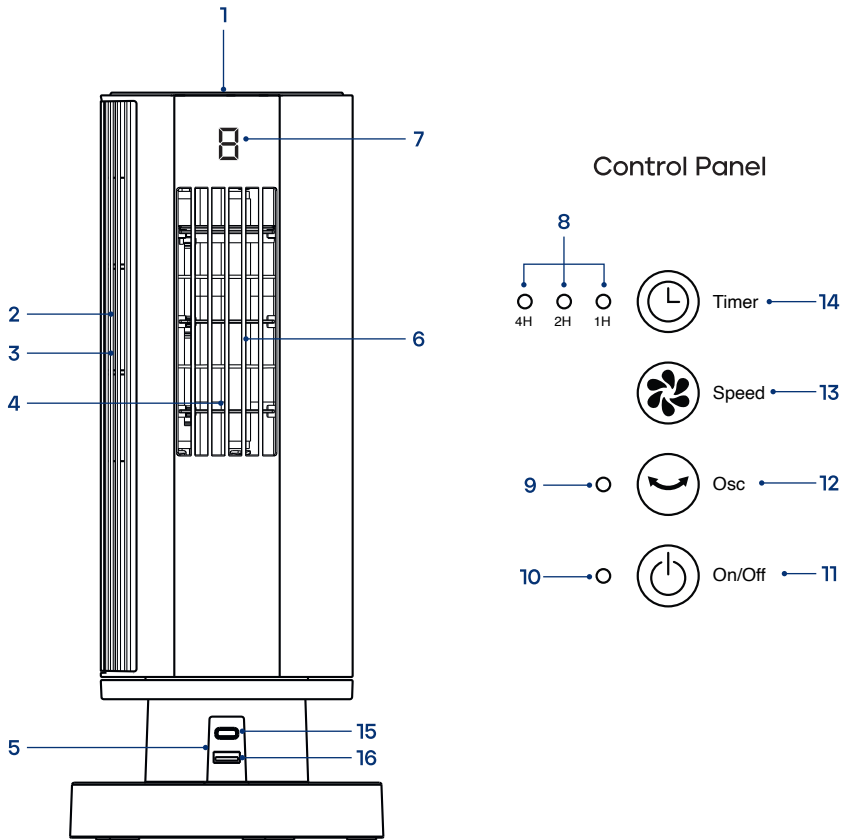

- |                                 |                          |
|---------------------------------|--------------------------|
| 1. Control panel                | 10. Power On indicator   |
| 2. Air inlet removable grille   | 11. Power On/Off button  |
| 3. Air inlet filter (not shown) | 12. Oscillating button   |
| 4. Louvre handle                | 13. Fan speed button     |
| 5. Charging ports               | 14. Timer button         |
| 6. Air outlet with louvres      | 15. Type-C charging port |
| 7. Speed display                | 16. USB Charging port    |
| 8. Timer indicators             |                          |
| 9. Oscillating indicator        |                          |





## BEFORE FIRST USE

Remove all packaging. Place the fan on a firm, flat and level surface.

## USING YOUR FAN

1. When plugged into the mains socket the power LED will illuminate.
2. Press the ON/OFF button to turn on the appliance, the Speed Display will show the fan speed.
3. The fan has 6 speed settings, press the fan speed button to increase the speed.
4. The speed level will illuminate on the Display Panel.
5. To stop the fan, press the Power On/Off button.

## OSCILLATION

1. Press the oscillating button, the Oscillating indicator will illuminate on the control panel.
2. The fan will rotate to the left and right.
3. To stop oscillation press the Oscillating button, the Oscillating indicator will go off.
4. The angle of the air outlet can be changed manually by tilting Louvre handle.

## USING THE TIMER

1. Press the Timer button to select 1 hour timer, 1h indicator will illuminate.
2. Press the time selector button again to increase to 2 hours and again for 4 hours.
3. The corresponding indicator will illuminate.
4. The fan will stop automatically when the time selected has lapsed.

**Note:** The fan can be used for a maximum of 4 hours on the timer.





## USB CHARGING PORTS

The Type-C and USB ports can be used with or without the fan being in operation when the fan is plugged into a power source.

## CARE & CLEANING

- Always unplug the appliance before cleaning.
- DO NOT immerse in water.
- Do not use abrasives to clean the appliance. Wipe the outer surface with a soft, damp cloth.
- If the air inlet removable grille becomes dusty/dirty it can be unclipped and washed in warm soapy water. The black filter mesh can rinsed in a running tap.
- Dry all parts thoroughly before you reassemble and plug in to operate the fan again.
- Store in a cool, dry and ventilated area.
- **WARNING:** The fan must be unplugged from the mains outlet before removing the Air Outlet cover.

## TROUBLESHOOTING

Problem	Solution
<b>Not turning on</b>	Check the fuse and try a new fuse with the same rating.
	Try a different appliance in the socket as it may be the socket that's at fault.
<b>Noisy fan</b>	The Air Outlet filter may be dirty. Follow care and cleaning instructions to remove the air inlet cover for cleaning.





## SPARES

Part Number	Description	Qty per product	Features Key Number
33060	Air Inlet Grille White	1	2
33061	Air Inlet Grille Grey	1	2
33062	Air Inlet Filter	1	3

## CONTACT US

If you are having a problem with your appliance, please contact our Helpline, as we are more likely to be able to help than the store you purchased the item from. Please have the product name, model number and serial number to hand when you contact us to help us deal with your enquiry quicker.

email: [hello@morphyrichards.co.uk](mailto:hello@morphyrichards.co.uk)

[www.morphyrichards.co.uk](http://www.morphyrichards.co.uk)

## PRODUCT RECYCLING



For electrical products sold within the European Community, at the end of the electrical products useful life, it should not be disposed of with household waste.

Please recycle where facilities exist.

Check with your Local Authority or retailer for recycling advice in your country.





## REGISTERING YOUR 3 YEAR GUARANTEE

Your standard 2 year guarantee is extended for an additional 1 year when you register the product within 28 days of purchase with Morphy Richards. If you do not register the product with Morphy Richards within 28 days, your product is guaranteed for 2 years.



To validate your 3 year guarantee, scan the QR code or register online at [www.morphyrichards.co.uk](http://www.morphyrichards.co.uk)

N.B. Each qualifying product needs to be registered with Morphy Richards individually. Please note that the 2 year guarantee is only available in the UK. Please refer to the 2 year guarantee for more information.

### YOUR 2 YEAR GUARANTEE

It is important to retain the retailer's receipt as proof of purchase. Staple your receipt to the back cover for future reference.

Please quote the following information if the product develops a fault. These numbers can be found on the base of the product.

**Model no.**

**Serial no.**

All Morphy Richards products are individually tested before leaving the factory. In the unlikely event of any appliance proving to be faulty within 28 days of purchase, it should be returned to the place of purchase for it to be replaced. If the fault develops after 28 days and within 24 months of original purchase, you should contact the Helpline quoting Model number and Serial number on the product, or write to Morphy Richards at the address shown. You may be asked to return a copy of proof of purchase.

Subject to the exclusions set out on the next page (see Exclusions), the faulty appliance will then be repaired or replaced as appropriate and dispatched usually within 7 working days of receipt.

If, for any reason, this item is replaced or repaired during the 2 year





## REGISTERING YOUR 3 YEAR GUARANTEE

guarantee period, the guarantee on the new item will be calculated from the original purchase date. Therefore it is vital to retain your original till receipt or invoice to indicate the date of initial purchase.

To qualify for the 2 year guarantee, the appliance must have been used according to the instructions supplied.

The appliance is intended for domestic use only. Misuse or use for commercial or any other purpose will render the guarantee invalid.

### Exclusions

Morphy Richards shall not be liable to replace or repair the goods under the terms of the guarantee where:

1. The fault has been caused or is attributable to accidental use, misuse, negligent use or used contrary to the manufacturer's recommendations or where the fault has been caused by power surges or damage caused in transit.
2. The appliance has been used on a voltage supply other than that stamped on the products.
3. Repairs have been attempted by persons other than our service staff (or authorised dealer).
4. The appliance has been used for hire purposes or non domestic use.
5. The appliance is second hand or refurbished.
6. Morphy Richards reserves the right not to carry out any type of servicing under the guarantee at its discretion.

This guarantee does not confer any rights other than those expressly set out above and does not cover any claims for consequential loss or damage. This guarantee is offered as an additional benefit and does not affect your statutory rights as a consumer. Morphy Richards products are intended for household use only. See usage limitations within the location safety instructions.

### Disclaimer

Morphy Richards has a policy of continuous improvement in product quality and design. The company, therefore reserves the right to change the specification of its models at any time.





AT820250MUK

# morphy richards



@morphyrichardsuk #loveyourmorphy

[morphyrichards.co.uk](http://morphyrichards.co.uk)

**Morphy Richards**  
9 Cabot Lane, Poole, Dorset, BH17 7BY, UK

