



morphy richards

3 Year
Guarantee*

*Upon registering your product
at morphyrichards.co.uk

FLEXI FREEZE

1 Litre Rechargeable
Mini Air Cooler



Model No.

823000
823001

User Manual

Please read and keep these instructions for future use





HEALTH AND SAFETY

The use of any electrical appliance requires the following common sense safety rules.

Please read these instructions carefully before using the product.

- **WARNING:** Disconnect from the mains supply before carrying out any routine maintenance.
- **WARNING:** Misuse of the appliance could cause personal injury.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children unless they are older than 8 years and supervised.
- Keep the appliance and its cord out of reach of children less than 8 years.
- This appliance is not intended to be operated on an extension cable or by





HEALTH AND SAFETY

means of an external timer or separate remote control system.

- This appliance is intended for indoor household use only. It is not suitable for use in staff kitchen areas in shops, offices and other commercial environments.
- Unplug the appliance during filling and cleaning.
- Be aware that high humidity levels may encourage the growth of biological organisms in the environment.
- Do not permit the area around the humidifier to become damp or wet. If dampness occurs, turn the output of the humidifier down. If the humidifier output volume cannot be turned down, use the humidifier intermittently. Do not allow absorbent materials, such as carpeting, curtains, drapes, or tablecloths, to become damp.
- Never leave water in the reservoir when the appliance is not in use.
- Empty and clean the humidifier before storage. Clean the humidifier before next use.



HEALTH AND SAFETY

LOCATION

- Ensure that the appliance is used on a firm, flat surface to reduce noise and vibration.
- Do not expose the appliance to direct sunlight.
- Do not use the appliance near water.
- Do not in any way obstruct the air inlets and outlets of the appliance.
- The appliance should be stood upright during operation; it should NEVER be laid on its side.
- Do not use the appliance next to curtains, clothing, tablecloths, hair or other items that can be drawn into unit.
- Do not use the appliance near flammable or explosive gases.
- Do not use outdoors, this appliance is intended for indoor household use only.

CHARGING CABLE

- Do not let the charging cable hang over the edge of the worktop where a child could reach it.
- Do not let the charging cable run across an open space e.g. between a low socket and table.
- Do not let the charging cable run across a cooker or other hot area which might damage the charging cable.

- The charging cable should run from the power source/socket to the appliance without straining the connections.
- Do not operate the appliance with a damaged charging cable or charger (not supplied).

OTHER SAFETY CONSIDERATIONS

- Only use for its intended purpose.
- Do not attempt to repair or adjust any electrical or mechanical element of the appliance. Doing so may be unsafe and will void your warranty.

PERSONAL SAFETY

 
- Do not allow water or other liquids to run into the appliance as it could create a fire/electrical.
- Do not touch the cable or plug with wet hands.
- Do not pull the cable when unplugging.
- Keep hands, hair and clothing away from the appliance while in operation, to prevent personal injury and/or damage to the appliance.
- Do not push any objects in to the air inlet or outlet grilles as this may cause electric shock, fire or damage the appliance.
- In the unlikely event technical problems develop, stop using the product immediately and seek advice from the manufacturer.



BATTERY SAFETY & DISPOSAL

- Do not expose a battery pack or appliance to fire or excessive heat. Exposure to fire or temperatures above 130°C/265°F may cause an explosion.
- Recommended ambient charging and storage temperature: 10°C–40°C (50°F–104°F). Recommended operation temperature: 25°C+/- 5°C.
- Do not incinerate electrical appliances even if the appliance is severely damaged, as lithium-ion batteries may explode in fire.
- The lithium battery is not a serviceable item. Check with your Local Authority for recycling advice.


PRODUCT OVERVIEW

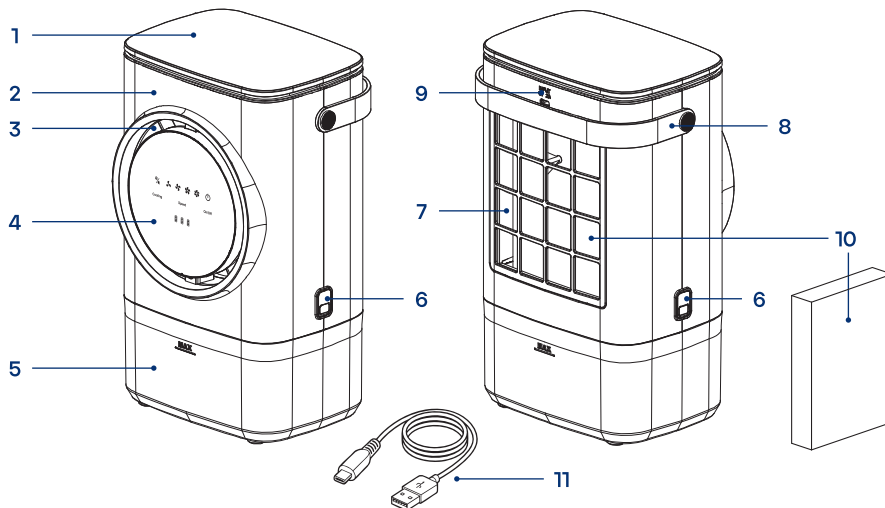

- | | |
|------------------|-------------------------------------|
| 1. Top cover | 7. Air Inlet Panel with Mesh Filter |
| 2. Main unit | 8. Handle |
| 3. Air outlet | 9. Charging inlet |
| 4. Control panel | 10. Filter |
| 5. Water tank | 11. USB-C charging cable |
| 6. Locking tabs | |



 PRODUCT OVERVIEW

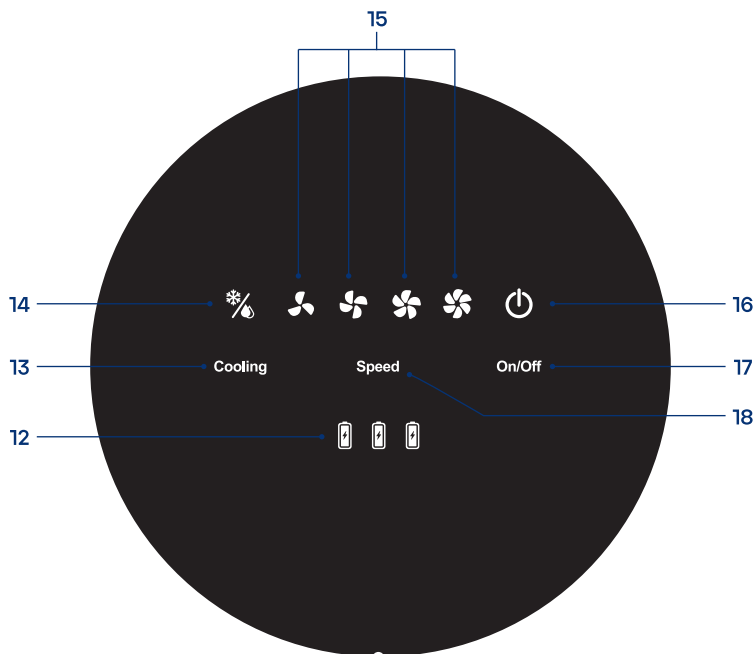

12. Charging indicators

13. Cooling/Humidifier button

14. Cooling/Humidifier indicator

15. Fan speed indicators

16. Power On/Off indicator

17. Power On/Off button

18. Fan speed button

BEFORE FIRST USE

- Remove all packaging and protective film from the control panel.
- Ensure the water tank is securely fastened to the Air Cooler with the Locking Tabs.
- Fully charge the Air Cooler.





CHARGING YOUR AIR COOLER

Note: A 5V 2A adaptor (not supplied) must be used to charge the Cooling Fan.

Note: Before first use of this appliance, appliance must be fully charged.

Note: The Air Cooler takes approximately 4 hours to fully charge with a 5V 2A adapter.

- Connect the USB-C cable supplied into the charging inlet and then connect to a mains socket.
- While charging, if the battery level is less than 33% charged, 1 battery indicator  will flash.
- When the battery level is between 33% and 66%, 1 battery indicator stays illuminated and the 2nd indicator flashes.
- When the battery level is between 66% and 100%, 2 battery indicator lights are illuminated, and the 3rd indicator flashes.
- When the battery is fully charged, all 3 indicator lights  are illuminated.
- To check the current battery power when the appliance is turned off (and not charging), press and hold the Power On/Off button for approx. 3 seconds, the charging indicator light/s will illuminate.

Note: If the battery power is too low to turn on the Air Cooler, 3 battery indicator lights flash 5 times and then the appliance automatically shuts down.

Note: Approximate run times with a fully charged battery. High fan speed with Cooling function - 3 hours. Low fan speed - 15 hours.

LOCATING YOUR AIR COOLER

- Ensure the appliance is used on a firm, flat, level surface.
- The air inlet at the rear should have a clearance from walls/obstructions of 30-50 cm.
- The air outlet (front) should have a clearance from walls/obstructions of 100-150 cm.
- The top should be free from any coverings.

CAUTION: Do not in any way obstruct the air inlets and outlets of the appliance.



SWITCHING ON YOUR AIR COOLER

- Plug the adapter into the mains socket.
- To turn the Air Cooler on, press the Power On/Off button the default start up is Speed 1. The Speed 1 indicator will illuminate. The battery indicator will display the current battery power and turn off after 5 seconds. All other indicators are off.
- Press the Power On/Off button once to turn on the appliance.
- The appliance default start up is Speed 1. The Speed 1 indicator  will illuminate.
- The battery indicator will display the current battery power and turn off after 5 seconds.
- To turn off the appliance, press the Power On/Off button.

Note: If the battery power is too low, the Power On/Off indicator flashes 5 times and then automatically shuts down. Until the battery is recharged, each time the Power On/Off button is pressed the indicator will flash 5 times as a reminder to recharge the battery.

INDICATOR LIGHT DIMMING

- While the appliance is powered on or charging, any indicator light/s that are illuminated for 1 minute but no button is pressed, the indicator lights will dim.
- To illuminate the indicator light/s, press any button.

SELECTING FAN SPEED

- To adjust the fan speed; press the Fan Speed button while the appliance is powered on. The speed will cycle, speed 1 → speed 2 → speed 3 → speed 4 → speed 1 etc...





COOLING

- Fill the water tanks (see Filling with Water and Using the Water Pump sections of the manual).
- Press the Cooling button to start Cooling mode.
- The water pump will start to operate, and the Cooling/Humidifier indicator will illuminate.
- Press the Cooling button at any time to turn off the appliance.

Note: To turn off the indicator lights while the appliance is operating press and hold the Cooling button for 3 seconds. Press any button to restore the indicator illumination.

Note: While the appliance is charging and in standby, the charging indicator lights can be turned off by pressing and holding the Cooling button for 3 seconds. To restore the charging indicators, press the Power On/Off button or press and hold the Cooling button for 3 seconds.

Note: When the battery level is sufficient, the water pump will automatically shut off after 8 hours of continuous operation (to prevent damage from running dry).

FILLING WITH WATER

When using the cooling and humidifying functions, water must be added to the water tank. There are two ways to add water.

- Remove the Top Cover of the Air Cooler and slowly add water into the water tank (Figure 1 and Figure 2).
- Replace the Top Cover.

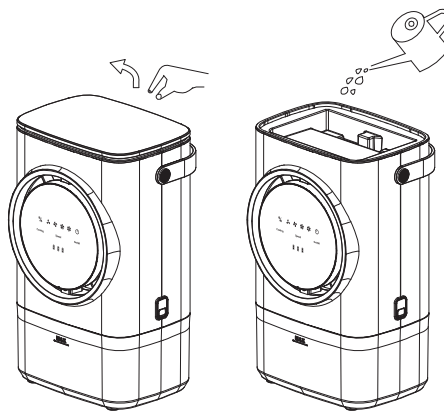 


Figure 1

Figure 2



FILLING WITH WATER

- To fill the Water Tank, press the locking tabs on the sides of the water tank to release the main unit from the water tank and lift upwards. Add water into the tank (Figure 3 and Figure 4).

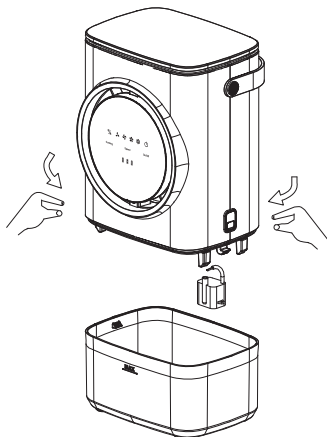 


Figure 3

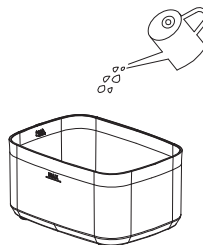 


Figure 4

Note: When adding water, **DO NOT** exceed the MAX level mark on the front of the water tank (Figure 5).

- Re-assemble the main unit and water tank, ensure the main unit and water tank are fastened securely.

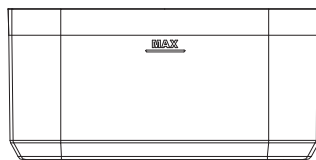 


Figure 5

Note: Always use, clean, fresh tap water.

Note: When the machine is used for the first time, there may be a slight odour and the water in the water tank may be slightly discoloured. This is normal and is no cause for concern.

 
Important: **DO NOT** move the appliance when the tanks are filled with water.






USING THE WATER PUMP

- Rotate the water pump lock anticlockwise and remove the water pump and water pipe from the storage slot allow the water pump and drain pipe to fall to the bottom of the water tank.

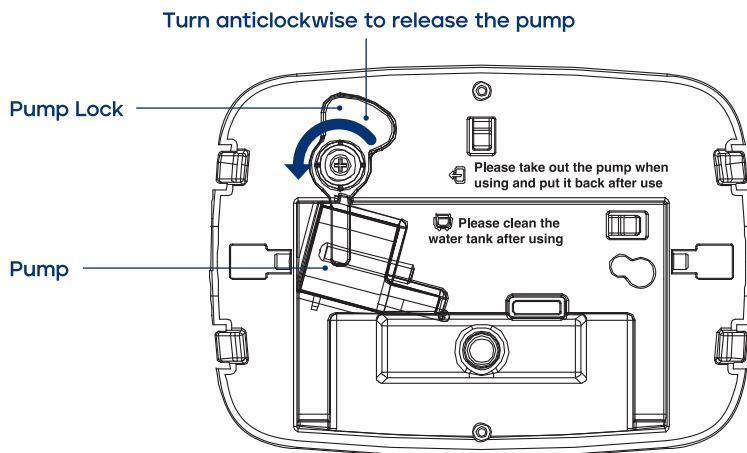

 Follow instructions on the base of the appliance.

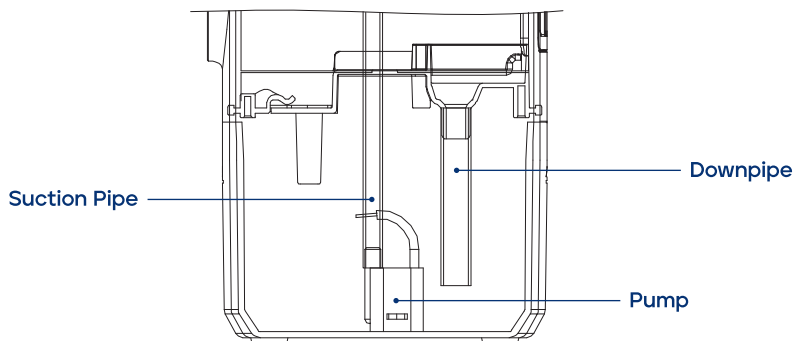

WATER PUMP OVERHEAT PROTECTION

- The water pump will automatically shut down when it has continuously operated for 8 hours, this is to prevent the water pump from overheating.





CARE AND CLEANING

WARNING: Ensure the appliance IS NOT charging when cleaning.

- Wipe the main unit with a soft, damp cloth to remove any light dust or debris. Do not use abrasive or cream cleansers as they may damage the surface of the appliance.

DO NOT immerse the main unit in water or other liquids.

CLEANING THE AIR INLET COVER WITH MESH FILTER

- Remove the Air Inlet Cover with Mesh Filter from the Air Cooler, using a soft brush remove any dust/debris that may have built up on the cover.
- Using warm water and mild detergent wash the cover before rinsing with clean water.
- Dry thoroughly before refitting to the appliance.

Note: A build-up of dust on the Air Inlet Mesh Filter can affect air flow and is recommend cleaning at least once a month.

 
CLEANING THE FILTER

- Remove the Air Inlet cover and lift out the Filter.
- Using a soft bristled brush gently remove surface dust. Avoid excessive friction which could cause damage to the filter.
- Using warm water rinse the filter with clean water and dry thoroughly.
- Re-fit the filter and replace the Air Inlet cover securely.

Note: To maintain optimum performance of your Air Cooler, we recommend the Filter is cleaned at least once a month and replaced every 3-6 months; depending on the frequency of use and environment conditions.



CLEANING THE FILTER

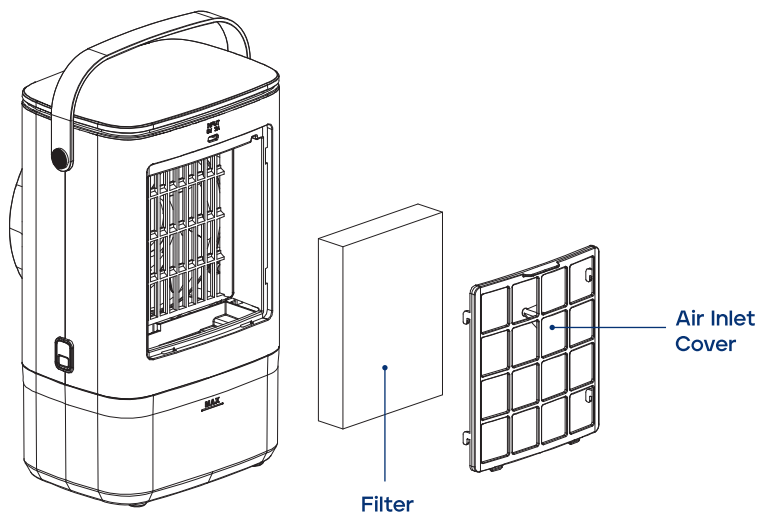

CLEANING THE WATER TANK

WARNING: Never leave water in the water tank when the appliance is not in use.

- The water tank should be cleaned every few weeks to prevent growth of mould, mildew and bacteria. **DO NOT** use a dishwasher to clean the tank.
- Remove the tank from the Air Cooler and partially fill it with clean water and a little mild detergent. Swish the water around in the tank, empty and rinse with clean water.
- Ensure the tank is dry before refitting to the Air Cooler.



STORAGE

- Ensure the air cooler, filters and water tank are clean and dry before storing.
- To store your product out of season we recommend using the original box or similar size box.
- Store in a clean and dry place when not in use.

Important: DO NOT leave water in the tanks when it is not in use or it is stored.

TROUBLESHOOTING

Problem	Solution
No power.	The battery isn't sufficiently charged. Charge the battery using the charging cable supplied.
	Try a different appliance in the socket.
Airflow seems weak.	Clean the filters regularly. Follow instructions in the Care and Cleaning section.
Unit is noisy during operation.	Place on firm, flat horizontal surface.
	Clean the filters regularly. Follow instructions in the Care and Cleaning section.



SPARES

Part Number	Description	Qty Per Product	Features Key Number
33063	Air Inlet Panel with mesh filter White	1	7
33064	Air Inlet Panel with mesh filter Grey	1	7
33065	Filter	1	10
33066	USB-C charging cable White	1	11
33067	USB-C charging cable Grey	1	11



CONTACT US

If you are having a problem with your appliance, please contact our Helpline, as we are more likely to be able to help than the store you purchased the item from. Please have the product name, model number and serial number to hand when you contact us to help us deal with your enquiry quicker.

email: hello@morphyrichards.co.uk

www.morphyrichards.co.uk

PRODUCT RECYCLING



For electrical products sold within the European Community, at the end of the electrical products useful life, it should not be disposed of with household waste.

Please recycle where facilities exist.

Check with your Local Authority or retailer for recycling advice in your country.



REGISTERING YOUR 3 YEAR GUARANTEE

Your standard 2 year guarantee is extended for an additional 1 year when you register the product within 28 days of purchase with Morphy Richards. If you do not register the product with Morphy Richards within 28 days, your product is guaranteed for 2 years.



To validate your 3 year guarantee,
scan the QR code or register online
at www.morphyrichards.co.uk

N.B. Each qualifying product needs to be registered with Morphy Richards individually. Please note that the 2 year guarantee is only available in the UK. Please refer to the 2 year guarantee for more information.

YOUR 2 YEAR GUARANTEE

It is important to retain the retailer's receipt as proof of purchase. Staple your receipt to the back cover for future reference.

Please quote the following information if the product develops a fault. These numbers can be found on the base of the product.

Model no.

Serial no.

All Morphy Richards products are individually tested before leaving the factory. In the unlikely event of any appliance proving to be faulty within 28 days of purchase, it should be returned to the place of purchase for it to be replaced. If the fault develops after 28 days and within 24 months of original purchase, you should contact the Helpline quoting Model number and Serial number on the product, or write to Morphy Richards at the address shown. You may be asked to return a copy of proof of purchase.

Subject to the exclusions set out on the next page (see Exclusions), the faulty appliance will then be repaired or replaced as appropriate and dispatched usually within 7 working days of receipt.

If, for any reason, this item is replaced or repaired during the 2 year



REGISTERING YOUR 3 YEAR GUARANTEE

guarantee period, the guarantee on the new item will be calculated from the original purchase date. Therefore it is vital to retain your original till receipt or invoice to indicate the date of initial purchase.

To qualify for the 2 year guarantee, the appliance must have been used according to the instructions supplied.

The appliance is intended for domestic use only. Misuse or use for commercial or any other purpose will render the guarantee invalid.

Exclusions

Morphy Richards shall not be liable to replace or repair the goods under the terms of the guarantee where:

1. The fault has been caused or is attributable to accidental use, misuse, negligent use or used contrary to the manufacturer's recommendations or where the fault has been caused by power surges or damage caused in transit.
2. The appliance has been used on a voltage supply other than that stamped on the products.
3. Repairs have been attempted by persons other than our service staff (or authorised dealer).
4. The appliance has been used for hire purposes or non domestic use.
5. The appliance is second hand or refurbished.
6. Morphy Richards reserves the right not to carry out any type of servicing under the guarantee at its discretion.

This guarantee does not confer any rights other than those expressly set out above and does not cover any claims for consequential loss or damage. This guarantee is offered as an additional benefit and does not affect your statutory rights as a consumer. Morphy Richards products are intended for household use only. See usage limitations within the location safety instructions.

Disclaimer

Morphy Richards has a policy of continuous improvement in product quality and design. The company, therefore reserves the right to change the specification of its models at any time.



NOTES

[illegible]



AT823000MUK Rev2

morphy richards



@morphyrichardsuk #loveyourmorphy

[morphyrichards.co.uk](https://www.morphyrichards.co.uk)

Morphy Richards

9 Cabot Lane, Poole, Dorset, BH17 7BY, UK

