



morphy richards

**3 Year
Guarantee***

*Upon registering your product
at morphyrichards.co.uk

HEATFLUX 2kW Flat Fan Heater



Model No.

**825100
825101**

User Manual

Please read and keep these instructions for future use





HEALTH AND SAFETY

The use of any electrical appliance requires the following common sense safety rules.

Please read these instructions carefully before using the product.

- **WARNING:** Disconnect from the mains supply before carrying out any routine maintenance.
- **WARNING:** Misuse of the appliance could cause personal injury.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children unless they are older than 8 years and supervised.
- Keep the appliance and its cord out of reach of children less than 8 years.



HEALTH AND SAFETY

- If the supply cable is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Do not use the appliance near or below combustible material such as curtains.
- This appliance is not intended to be operated on an extension cable or by means of an external timer or separate remote control system.
- This appliance is intended for household use only. It is not suitable for use in staff kitchen areas in shops, offices and other commercial environments.
- **WARNING:** Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.



HEALTH AND SAFETY

MAINS CABLE

- Do not let the mains cable run across an open space e.g. between a low socket and a table.
- Do not place the extension cord in a position where it can be pulled by children or animals or tripped over.
- The mains cable should reach from the socket to the product without straining the connections.

OTHER SAFETY CONSIDERATIONS

- Only use for its intended purpose.
- It is strictly forbidden to insert foreign objects such as wooden and metal sticks into the air inlet and outlet.
- Do not spray insecticides or flammable sprays around the product.

PERSONAL SAFETY

- Do watch your appliance during use.
- Do not touch the mains cable or plug with wet hands.
- Do not pull the mains cable when unplugging.
- Keep hands, hair and clothing away from the appliance while in operation, to prevent personal injury and/or damage to the appliance.
- In the unlikely event technical

problems develop, stop using the product immediately and seek advice from the manufacturer.

- Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool.
- It is strictly forbidden to insert foreign objects such as wooden and metal sticks into the air inlet and outlet.
- Do not spray insecticides or flammable sprays around the product.
- **WARNING:** Do not touch hot parts during or after use, use the handle.
- **WARNING:** Do not wrap the cable around the main body of the appliance during or after use.

LOCATION

- To reduce the risk of fire, keep textiles, curtains, or any other flammable material a minimum distance of 1 metre from the appliance.
- Do not cover or place any objects on the heater.
- The heater must not be located directly below a socket outlet.
- **WARNING:** Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.



HEALTH AND SAFETY



**CAUTION!
HOT
SURFACE!**

**PLEASE BE AWARE OF HOT SURFACES.
HANDLE WITH CARE.**

Treating scalds

- Run cold water over the affected area immediately.
- Do not stop to remove clothing.
- Seek medical advice quickly.



ELECTRICAL DETAILS


- Make sure that the power voltage used is consistent with the voltage specified on the rating plate of the device.
- Should the fuse in the mains plug require changing, replace it with one of the same rating as originally fitted.
- **WARNING: This appliance must be earthed.**

Item	Symbol	0.00	Unit
Heat output			
Nominal heat output	P _{nom}	1.800–2.000	kW
Minimum heat output (indicative)	P _{min}	1.000	kW
Maximum continuous heat output	P _{max,c}	2.000	kW
Power consumption			
In off mode	P _o	0.00	W
In standby mode	P _{sm}	0.00	W
In idle mode	P _{idle}	0.00	W
In network standby	P _{ns,m}	0.00	W
Standby mode with display information or status		No	
Seasonal space heating energy efficiency in active mode	n _{S,on}	85.0	%

Item	Unit
Type of heat output/room temperature control (select one)	
Single stage heat output and no room temperature control	No
Two or more manual stages, no room temperature control	No
With mechanic thermostat room temperature control	Yes
Electronic room temperature control plus day timer	No
Electronic room temperature control plus week timer	No
Other control options (multiple selections possible)	
Room temperature control, with presence detection	No
Room temperature control, with open window detection	No
Distance control option	No
Adaptive start control	No
Working time limitation	No
Black bulb sensor	No
Self-learning functionality	No
Control accuracy	No



PRODUCT OVERVIEW

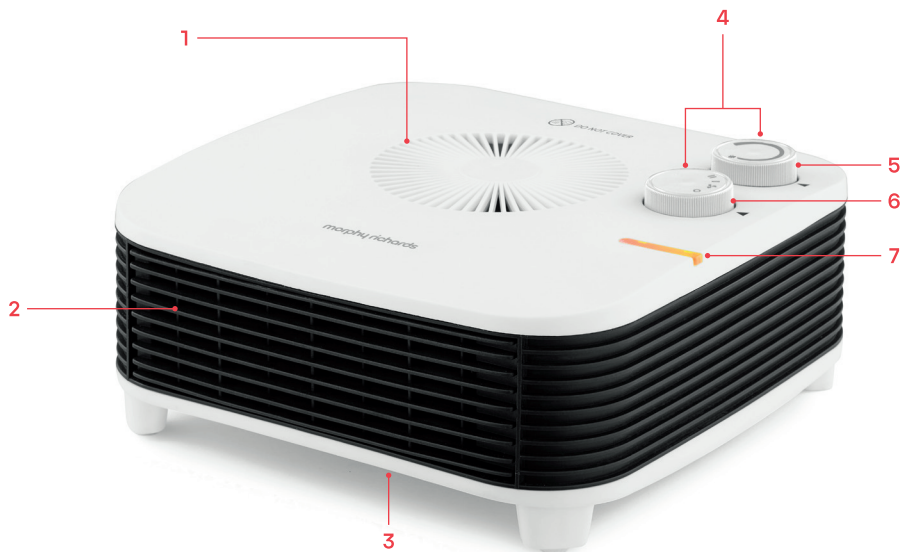

1. Air inlet
2. Heat outlet
3. Air inlet (underneath heater, not shown)
4. Control dials
5. Heat increase/decrease dial
6. Mode selector dial
7. Indicator light

BEFORE FIRST USE

- Remove all packaging and stand the heater on a firm, level surface and ensure the Mode Selector Dial is in the O position.
- Ensure that textiles, curtains, or any other flammable material is a minimum distance of 1 metre from the heater.



USING YOUR HEATER

WARNING: Do not cover or place any objects on the heater. Keep textiles, curtains, or any other flammable material a minimum distance of 1 m from the appliance.

Note: As with all new electric heating elements, your heater will emit a 'new' smell when it is first switched on. This is quite normal and not a cause for concern. It will dissipate with use.

O — off position.

🔥 mode — the heater blows cool air.

I mode — the heater blows warm air and operates at 1000W.

II mode — the heater blows warm air and operates at 2000W.

While the heater is operating, the indicator light will be illuminated.

1. Extend the power cord fully and plug in to the mains socket.
2. Turn the Mode Selector Dial to your required setting.
3. Select the desired temperature with the heat increase/decrease dial.

Note: We recommend turning the dial to mid-way and increase or decrease the temperature if required.

4. After use, turn the mode selector dial to O and unplug from the mains socket.

OVERHEAT PROTECTION

The heater is protected with an overheat protection that switches off the appliance automatically in case of overheating.

Turn the Mode Selector Dial to the O position and unplug the heater, let it cool thoroughly for about 10 minutes before switching it back on. The heater should now operate normally.



BEFORE FIRST USE

Before cleaning, the heater **MUST** be switched off and unplugged from the mains socket and cooled thoroughly.

1. Clean the air inlets and heat outlet regularly with a soft dry cloth to remove any build-up of dust.
2. Use a damp cloth to clean the surface of heater and dry thoroughly before using again or storing.

WARNING: DO NOT immerse the heater in water or other liquid.

STORAGE

- Ensure the heater has completely cooled before storing.
- Do not wrap the mains cable around the heater, as this will cause damage.
- Store the heater in a cool, dry place.

TROUBLESHOOTING

Problem	Solution
No power or not switching on.	Check the fuse and try a new fuse with the same rating.
	Try a different appliance in the socket as it may be the socket that is at fault.
Burning smell.	Check the heater is free from dust etc. Turn off the heater and allow to cool thoroughly . Follow the instructions in the Care and Cleaning section to clean the heater.
	Ensure textiles, curtains, or any other flammable material is a minimum distance of 1 metre from the heater.
Tripping electrics.	Try using a different socket.
	Ensure there are no other appliances being used on the same set of sockets as the heater.



CONTACT US

If you are having a problem with your appliance, please contact our Helpline, as we are more likely to be able to help than the store you purchased the item from. Please have the product name, model number and serial number to hand when you contact us to help us deal with your enquiry quicker.

email: hello@morphyrichards.co.uk

www.morphyrichards.co.uk

PRODUCT RECYCLING



For electrical products sold within the European Community, at the end of the electrical products useful life, it should not be disposed of with household waste.

Please recycle where facilities exist.

Check with your Local Authority or retailer for recycling advice in your country.



NOTES

[illegible]



NOTES

[illegible]



REGISTERING YOUR 3 YEAR GUARANTEE

Your standard 2 year guarantee is extended for an additional 1 year when you register the product within 28 days of purchase with Morphy Richards. If you do not register the product with Morphy Richards within 28 days, your product is guaranteed for 2 years.



To validate your 3 year guarantee,
scan the QR code or register online
at www.morphyrichards.co.uk

N.B. Each qualifying product needs to be registered with Morphy Richards individually. Please note that the 2 year guarantee is only available in the UK. Please refer to the 2 year guarantee for more information.

YOUR 2 YEAR GUARANTEE

It is important to retain the retailer's receipt as proof of purchase. Staple your receipt to the back cover for future reference.

Please quote the following information if the product develops a fault. These numbers can be found on the base of the product.

Model no.

Serial no.

All Morphy Richards products are individually tested before leaving the factory. In the unlikely event of any appliance proving to be faulty within 28 days of purchase, it should be returned to the place of purchase for it to be replaced. If the fault develops after 28 days and within 24 months of original purchase, you should contact the Helpline quoting Model number and Serial number on the product, or write to Morphy Richards at the address shown. You may be asked to return a copy of proof of purchase.

Subject to the exclusions set out on the next page (see Exclusions), the faulty appliance will then be repaired or replaced as appropriate and dispatched usually within 7 working days of receipt.

If, for any reason, this item is replaced or repaired during the 2 year





REGISTERING YOUR 3 YEAR GUARANTEE

guarantee period, the guarantee on the new item will be calculated from the original purchase date. Therefore it is vital to retain your original till receipt or invoice to indicate the date of initial purchase.

To qualify for the 2 year guarantee, the appliance must have been used according to the instructions supplied.

The appliance is intended for domestic use only. Misuse or use for commercial or any other purpose will render the guarantee invalid.

Exclusions

Morphy Richards shall not be liable to replace or repair the goods under the terms of the guarantee where:

1. The fault has been caused or is attributable to accidental use, misuse, negligent use or used contrary to the manufacturer's recommendations or where the fault has been caused by power surges or damage caused in transit.
2. The appliance has been used on a voltage supply other than that stamped on the products.
3. Repairs have been attempted by persons other than our service staff (or authorised dealer).
4. The appliance has been used for hire purposes or non domestic use.
5. The appliance is second hand or refurbished.
6. Morphy Richards reserves the right not to carry out any type of servicing under the guarantee at its discretion.

This guarantee does not confer any rights other than those expressly set out above and does not cover any claims for consequential loss or damage. This guarantee is offered as an additional benefit and does not affect your statutory rights as a consumer. Morphy Richards products are intended for household use only. See usage limitations within the location safety instructions.

Disclaimer

Morphy Richards has a policy of continuous improvement in product quality and design. The company, therefore reserves the right to change the specification of its models at any time.



AT825100MUK Rev1

morphy richards



@morphyrichardsuk #loveyourmorphy

[morphyrichards.co.uk](https://www.morphyrichards.co.uk)

Morphy Richards

9 Cabot Lane, Poole, Dorset, BH17 7BY, UK

