



# morphy richards

**3 Year  
Guarantee\***

\*Upon registering your product  
at [morphyrichards.co.uk](http://morphyrichards.co.uk)

## STAINLESS STEEL 2 Litre Jug Blender



Model No.

**403065**

## User Manual

Please read and keep these instructions for future use





## HEALTH AND SAFETY

The use of any electrical appliance requires the following common sense safety rules.

**Read these instructions carefully and retain for future reference.**

- This appliance can be used by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.
- This appliance shall not be used by children.
- Children shall not play with the appliance.
- Keep appliance and cord out of the reach of children.
- **CAUTION:** Ensure that the blender is switched off before removing it from the stand or approaching parts that move in use.
- Do not blend for periods longer than stated.



## HEALTH AND SAFETY

- Avoid touching moving parts. Keep hands, hair and clothing, and utensils away from the blender blades during operation, to prevent personal injury and/or damage to the appliance.
- Always disconnect the blender from the supply if it is left unattended and before assembling, disassembling or cleaning.
- Care shall be taken when handling the sharp cutting blades, emptying the jug and during cleaning.
- For care & cleaning instructions, refer to the care and cleaning section of the manual.
- This appliance is intended for household use only. It is not suitable for use in staff kitchen areas in shops, offices and other commercial environments.
- This appliance is not intended to be to be operated on an extension cable or by means of an external timer or separate remote control system.



## HEALTH AND SAFETY

### LOCATION

- Do not use outdoors or in a bathroom.
- Always locate your appliance away from the edge of the worktop.
- Do not place the jug used with the appliance on a highly polished wooden surface as damage may occur to the surface.

### MAINS CABLE

- Do not let the mains cable hang over the edge of the worktop where a child could reach it.
- Do not let the lead run across an open space e.g. between a low socket and a table.
- Do not let the cable run across a cooker or other hot area which might damage the cable.
- The mains cable should reach from the socket to the base unit without straining the connections.
- The power cord cannot be replaced. Contact Morphy Richards for advice.

### OTHER SAFETY CONSIDERATIONS

- Do not use the appliance for anything other than its intended purpose.
- The use of attachments or tools not recommended or sold by Morphy Richards may cause fire, electric shock or injury.
- **WARNING:** Misuse of the appliance could cause personal injury.

### PRODUCT SAFETY



- **IMPORTANT:** Allow hot liquids to cool before adding to the blender, always ensure the lid is fitted securely.
- Be careful if hot liquid is poured into the blender as it can be ejected out of the appliance due to sudden steaming.
- Do not use the appliance if the plastic jug or lid is damaged or has visible cracks.



## ELECTRICAL DETAILS

- Check that the voltage on the rating plate of your appliance corresponds with your house electricity supply which must be A.C. (Alternating Current).
- Should the fuse in the mains plug require changing, replace it with a fuse of the same rating as originally fitted.
- The power consumption in off mode into which the equipment is switched automatically is 0.44W. When the appliance is not working, it enters the off mode immediately (0 min).
- **WARNING:** This appliance must be earthed.

## PRODUCT OVERVIEW

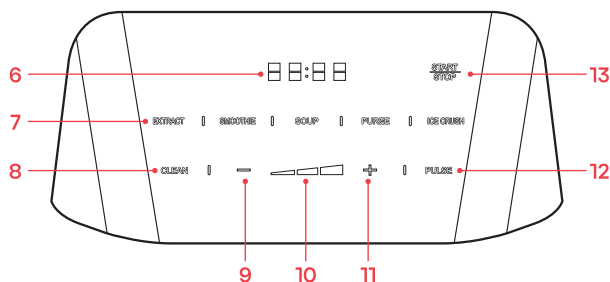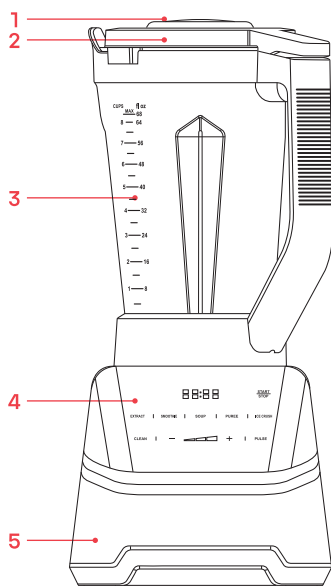

1. Measuring Cup
2. Jug Lid
3. Blending Jug
4. Control Panel
5. Motor Base
6. Time Display
7. Function Buttons

8. Clean Button
9. Speed Decrease Button
10. Blending Speed Display
11. Speed Increase Button
12. Pulse Button
13. Start/Stop Button





## BEFORE FIRST USE

Before first use, unpack the appliance and place all parts on a flat, firm, level surface.

- Wash the Blending Jug, Jug Lid and Measuring Cup in warm, soapy water and dry thoroughly.
- **DO NOT** immerse the motor base in water or other liquids.
- **CAUTION: Blades are sharp.**

## KNOW YOUR BLENDER

**Your Blender has 8 Programmes:**

1. Extract (Juice Blending), pre-set time 35 seconds.
2. Smoothie, pre-set time 45 seconds.
3. Soup, pre-set time 50 seconds.
4. Puree, pre-set time 1.00 minute.
5. Ice Crush, pre-set time 12 seconds.
6. Pulse, activate as required.
7. Stepless Speed, select the speed required, blending time counts up to a maximum of 3 minutes 30 seconds.
8. Clean, pre-set time 16 seconds.



## USING YOUR BLENDER

### **Extract (juice blending), Smoothie, Soup, Puree, Ice Crush Modes:**

- Place the ingredients into the Blending Jug (in sequence of your recipe, if it is stated to do so).
- Attach the Jug Lid and Measuring Cup securely to the Blending Jug securely.
- Connect the Blender to the power supply.
- The control panel will illuminate until your required function is selected.
- Press the required function button and then the START/STOP button.
- The programme will start and the timer on the control panel will count down until the pre-set time finishes.

### **Pulse Mode:**

- Pulse mode is used for processing food at the highest speed and can be activated as required.
- Place the ingredients into the Blending Jug (in sequence of the recipe, if it is stated to do so).
- Attach the Jug Lid and Measuring Cup securely to the Blending Jug securely.
- Connect the Blender to power supply.
- To start, press and hold the Pulse button.
- To stop, release the Pulse button.



## USING YOUR BLENDER

### Stepless Speed:

- Place the ingredients into the Blending Jug (in sequence of the recipe, if it is stated to do so).
- Attach the Jug Lid and Measuring Cup securely to the Blending Jug.
- Connect the Blender to the power supply. The control panel will illuminate.
- Press the + or - button until your preferred speed setting (1 - 6) is shown on the control panel, then press the START/STOP button.
- Blending will start and the timer counts up on the control panel.
- When the desired consistency is reached, press the START/STOP button to stop blending.

**Note:** If a single operation exceeds 3 minutes and 30 seconds, the motor will automatically stop and enter the self-protection mode. Unplug the blender, before following the above steps to use the blender again.

### Blending Speed Display:

The blending speed display  shows the speed the blender is working at.

- 1 bar is low speed range.
- 2 bars are mid-speed range.
- 3 bars are high-speed range.
- If the display illuminates in the order of 1 bar, 1+2 bars, 1+2+3 bars, it indicates the motor is running at a low speed range and requires an increase in the speed level.

**Note:** To add ingredients while the blender is operating, remove the Measuring Cup and place ingredients through the Lid opening.

**Note:** To pause blending, press the function button being used or to stop a program, press the START/STOP button.





## USING YOUR BLENDER

**WARNING:** The Jug Lid and Measuring Cup **MUST** be fitted securely before the blender is switched on.

**WARNING:** The appliance **MUST** be stopped if you want to remove the lid to add ingredients during blending.

**WARNING:** Never extend your hands into the Blending Jug when the blender is powered on.

**WARNING:** The maximum blending amount of SOUP is 1 Litre.

**WARNING:** The temperature of the ingredients poured into the Jug should not exceed 90°C.

**WARNING:** Ice crushing capacity: DO NOT exceed 400g and ice cube size should be smaller than 45x45x45mm.

### Clean Mode:

- Add 700ml of water and 2 drops of detergent.
- Attach the Jug Lid and Measuring Cup to the Blending Jug and connect the Blender to power supply.
- Connect the Blender to the power supply. The control panel will illuminate.
- Press the CLEAN button and then the START/STOP button to start the cleaning function.
- The CLEAN programme will start and the timer on the control panel will count down until the pre-set time finishes.



## USING YOUR BLENDER

### Top Tips:

- For recipes that include liquid, ensure that the liquid is added before any solid ingredients.
- It is not advised to use the Blender for the following tasks: beating egg whites, whipping cream, mashed potato, grinding meat, mixing dough.
- The following items should never be placed in the Blender, as they may cause damage: bones, large solid pieces, frozen food or tough foods such as turnips.
- To crush ice, **DO NOT** exceed 400g. Remove crushed ice immediately – if left it could refreeze.
- Do not put dry ingredients into the Blender without addition of other wet ingredients or liquid.

## CLEANING YOUR BLENDER

- Before cleaning, always unplug your Blender from the power socket.
- Always wash immediately after use for easy cleaning. Do not let food dry on the jug assembly as this will make cleaning difficult.
- Wipe the Motor Base with a damp cloth and dry thoroughly. If liquids spill into the Motor Base, then wipe with a dry cloth and dry thoroughly.

### **WARNING: Blades are sharp**

- Do not immerse the Motor Base in liquid.
- Do not use rough scouring pads or cleaners on any parts.



## TROUBLESHOOTING

| Problem             | Solution   |
|---------------------|--|
| No power.           | Check the fuse and try a new fuse with the same rating.  |
|                     | Try a different appliance in the socket as it may be the socket that is at fault.                |
|                     | Has the blender been used consecutively without resting? Allow the motor base time to cool down. |
| Blades not turning. | Check that the correct function has been selected on the control panel.                          |
|                     | Make sure the food you are trying to blend is not too thick or too hard.                         |
|                     | Add some liquid to the food if it is too thick.  |
|                     | Ensure the jug is correctly fitted to the motor base.  |
| Tripping electrics. | Try using a different socket.  |
|                     | Ensure there are no other appliances being used on the same set of sockets as the stand mixer.   |

## SPARES

| Part Number | Description                      | Qty Per Product | Features Key Number |
|-------------|----------------------------------|-----------------|---------------------|
| 05590       | Blender Jug Assembly with blades | 1               | 3                   |
| 05591       | Blender Lid with seal            | 1               | 2                   |
| 05592       | Measuring cup                    | 1               | 1                   |



## CONTACT US

If you are having a problem with your appliance, please contact our Helpline, as we are more likely to be able to help than the store you purchased the item from. Please have the product name, model number and serial number to hand when you contact us to help us deal with your enquiry quicker.

email: [hello@morphyrichards.co.uk](mailto:hello@morphyrichards.co.uk)

[www.morphyrichards.co.uk](http://www.morphyrichards.co.uk)

## PRODUCT RECYCLING



For electrical products sold within the European Community, at the end of the electrical products useful life, it should not be disposed of with household waste.

Please recycle where facilities exist.

Check with your Local Authority or retailer for recycling advice in your country.



## REGISTERING YOUR 3 YEAR GUARANTEE

Your standard 2 year guarantee is extended for an additional 1 year when you register the product within 28 days of purchase with Morphy Richards. If you do not register the product with Morphy Richards within 28 days, your product is guaranteed for 2 years.



**To validate your 3 year guarantee,  
scan the QR code or register online  
at [www.morphyrichards.co.uk](http://www.morphyrichards.co.uk)**

N.B. Each qualifying product needs to be registered with Morphy Richards individually. Please note that the 2 year guarantee is only available in the UK. Please refer to the 2 year guarantee for more information.

## YOUR 2 YEAR GUARANTEE

It is important to retain the retailer's receipt as proof of purchase. Staple your receipt to the back cover for future reference.

Please quote the following information if the product develops a fault. These numbers can be found on the base of the product.

**Model no.**

**Serial no.**

All Morphy Richards products are individually tested before leaving the factory. In the unlikely event of any appliance proving to be faulty within 28 days of purchase, it should be returned to the place of purchase for it to be replaced. If the fault develops after 28 days and within 24 months of original purchase, you should contact the Helpline quoting Model number and Serial number on the product, or write to Morphy Richards at the address shown. You may be asked to return a copy of proof of purchase.

Subject to the exclusions set out on the next page (see Exclusions), the faulty appliance will then be repaired or replaced as appropriate and dispatched usually within 7 working days of receipt.

If, for any reason, this item is replaced or repaired during the 2 year



## REGISTERING YOUR 3 YEAR GUARANTEE

guarantee period, the guarantee on the new item will be calculated from the original purchase date. Therefore it is vital to retain your original till receipt or invoice to indicate the date of initial purchase.

To qualify for the 2 year guarantee, the appliance must have been used according to the instructions supplied.

The appliance is intended for domestic use only. Misuse or use for commercial or any other purpose will render the guarantee invalid.

### Exclusions

Morphy Richards shall not be liable to replace or repair the goods under the terms of the guarantee where:

1. The fault has been caused or is attributable to accidental use, misuse, negligent use or used contrary to the manufacturer's recommendations or where the fault has been caused by power surges or damage caused in transit.
2. The appliance has been used on a voltage supply other than that stamped on the products.
3. Repairs have been attempted by persons other than our service staff (or authorised dealer).
4. The appliance has been used for hire purposes or non domestic use.
5. The appliance is second hand or refurbished.
6. Morphy Richards reserves the right not to carry out any type of servicing under the guarantee at its discretion.

This guarantee does not confer any rights other than those expressly set out above and does not cover any claims for consequential loss or damage. This guarantee is offered as an additional benefit and does not affect your statutory rights as a consumer. Morphy Richards products are intended for household use only. See usage limitations within the location safety instructions.

### Disclaimer

Morphy Richards has a policy of continuous improvement in product quality and design. The company, therefore reserves the right to change the specification of its models at any time.





FP403065MUK Rev1

# morphy richards



@morphyrichardsuk #loveyourmorphy

[morphyrichards.co.uk](http://morphyrichards.co.uk)

**Morphy Richards**

9 Cabot Lane, Poole, Dorset, BH17 7BY, UK

