

Registering Your 3 Year Guarantee

Your standard 2 year guarantee is extended for an additional 1 year when you register the product within 28 days of purchase with Morphy Richards. If you do not register the product with Morphy Richards within 28 days, your product is guaranteed for 2 years.



To validate your 3 year guarantee, scan the QR code or register online at www.morphyrichards.co.uk

N.B. Each qualifying product needs to be registered with Morphy Richards individually. Please note that the 2 year guarantee is only available in the UK. Please refer to the 2 year guarantee for more information.

Your 2 Year Guarantee

It is important to retain the retailer's receipt as proof of purchase. Staple your receipt to the back cover for future reference.

Please quote the following information if the product develops a fault. These numbers can be found on the base of the product.

Model no.

Serial no.

All Morphy Richards products are individually tested before leaving the factory. In the unlikely event of any appliance proving to be faulty within 28 days of purchase, it should be returned to the place of purchase for it to be replaced. If the fault develops after 28 days and within 24 months of original purchase, you should contact the Helpline quoting Model number and Serial number on the product, or write to Morphy Richards at the address shown. You may be asked to return a copy of proof of purchase. Subject to the exclusions set out on the next page (see Exclusions), the faulty appliance will then be repaired or replaced as appropriate and dispatched usually within 7 working days of receipt.

If, for any reason, this item is replaced or repaired during the 2 year guarantee period, the guarantee on the new item will be calculated from the original purchase date. Therefore it is vital to retain your original till receipt or invoice to indicate the date of initial purchase.

To qualify for the 2 year guarantee, the appliance must have been used according to the instructions supplied.

The appliance is intended for domestic use only. Misuse or use for commercial or any other purpose will render the guarantee invalid.

Exclusions

Morphy Richards shall not be liable to replace or repair the goods under the terms of the guarantee where:

1. The fault has been caused or is attributable to accidental use, misuse, negligent use or used contrary to the manufacturer's recommendations or where the fault has been caused by power surges or damage caused in transit.
2. The appliance has been used on a voltage supply other than that stamped on the products.
3. Repairs have been attempted by persons other than our service staff (or authorised dealer).
4. The appliance has been used for hire purposes or non domestic use.
5. The appliance is second hand or refurbished.
6. Morphy Richards reserves the right not to carry out any type of servicing under the guarantee at its discretion.

This guarantee does not confer any rights other than those expressly set out above and does not cover any claims for consequential loss or damage. This guarantee is offered as an additional benefit and does not affect your statutory rights as a consumer. Morphy Richards products are intended for household use only. See usage limitations within the location safety instructions.

Disclaimer

Morphy Richards has a policy of continuous improvement in product quality and design. The company, therefore reserves the right to change the specification of its models at any time.

Health & Safety

The use of any electrical appliance requires the following common sense safety rules.

Please read these instructions carefully before using the product.

- This appliance can be used by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, if they have been given supervision or instruction concerning the use of the

LOCATION

- Do not expose the battery to direct sunlight.
- Do not use outdoors when it is raining or in humid conditions.
- Always locate your appliance away from the edge of the worktop.

OTHER SAFETY CONSIDERATIONS

- Do not use the battery for anything other than its intended purpose.
- The use of attachments or tools not recommended or sold by Morphy Richards may cause fire, electric shock or injury.
- **WARNING: Misuse of this appliance could cause personal injury.**

appliance in a safe way and understand the hazards involved.

- This appliance shall not be used by children.
- Children shall not play with the battery.
- This appliance is intended for household use only. It is not suitable for use in staff kitchen areas in shops, offices and other commercial environments.

PRODUCT SPECIFIC SAFETY

- Only use this Battery Pack with the Nomadica Cordless range listed. Using with other products may create a risk of injury and fire.

CHARGING CABLE

- Do not let the charging cable hang over the edge of the worktop where a child could reach it.
- Do not let the charging cable run across an open space e.g. between a low socket and table.
- The charging cable should run from the power source/socket to the appliance without straining the connections.
- Do not charge the battery with a damaged charging cable or charger (not supplied).

BATTERY SAFETY & DISPOSAL

- Do not use the Battery Pack if it has been damaged or modified. Damaged or modified batteries may result in fire, explosion or risk of injury.
- Do not expose a Battery Pack to fire or excessive heat. Exposure to fire or temperatures above 120°C/248°F may cause an explosion.
- Recommended ambient charging and storage temperature: 10°C–40°C (50°F–104°F). Recommended operation temperature: 25°C+/- 5°C.
- Do not incinerate electrical appliances even if the appliance is severely damaged, as lithium-ion batteries may explode in fire.
- The lithium battery is not a serviceable item. Check with your Local Authority for recycling advice.

This battery pack is compatible for use with the following Nomadica Cordless products.

- **400751 Handheld Mixer**
- **401751 Food Processor**
- **402751 Handheld Blender**
- **403751 Blender**



Morphy Richards
9 Cabot Lane, Poole, Dorset, BH17 7BY, UK

"Upon registering your product
at morphyrichards.co.uk

3 Year
Guarantee *

FP439000MUK Rev1

Model No. 439000

NOMADICA

morphy richards

 
User Manual

Please read and keep these instructions for future use


Charging the Battery Pack and Battery Status

Note: When using the battery pack for the first time (or after a period of being stored) it should be charged fully.


- 1. Attach the USB-C to USB-C cable to the adapter (not supplied) and to the Battery Pack.

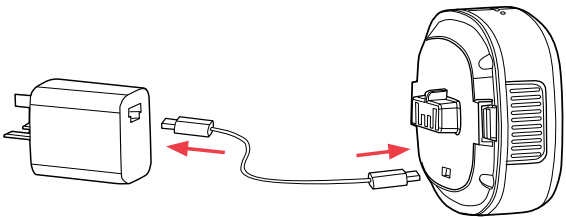

 - 2. Plug the adapter into a mains socket.

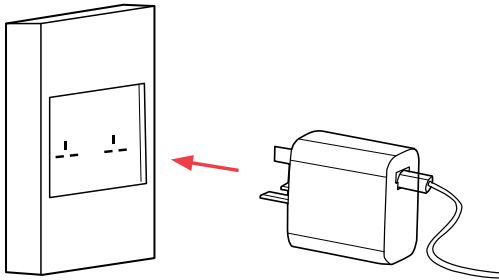

 - 3. The Battery Pack will begin charging with a single LED flashing. The LEDs will become solid as charging progresses. When the Battery Pack is fully charged, all LEDs will become solid and remain ON.

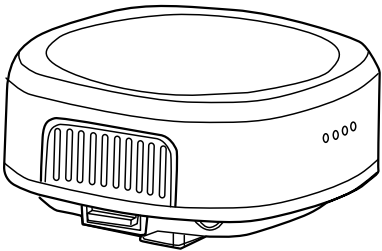

Note: If initial alternating light pattern continues for more than 10 seconds, the battery may be too warm or too cold to charge. Unplug the battery and allow it to stabilise to a normal room temperature and try charging again.
Note: Do not place the charger in an area of extreme heat or cold. The battery works best at room temperature.

Battery Status Indicator Lights

Indicators	Battery Level
○ ○ ○ ○	75-100%
○ ○ ○ ●	50-75%
○ ○ ● ●	25-50%
○ ● ● ●	<25%
⚡ ● ● ●	When the Battery Pack has only 10% charge, 1 indicator flashes 5 times.

Note: When the battery has very low charge remaining, 1 LED will flash 5 times.
Charging Time: The Battery Pack will fully charge in approximately 2 hours using a 40W adaptor (not supplied) with the USB-C to USB-C charging cable (supplied).

LED Indicators:

- = ON
- = OFF
- ⚡ = Flashing

Storage

- We recommend using the original box to store, in a clean and dry place below 27°C when not in use.
- Keep away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another. Shorting the terminals together may cause burns or a fire.
- If the battery pack isn't used for prolonged periods, it should be charged every 3 months to maintain optimum performance of the battery and the product/s it is used with.

Product Recycling

For electrical products sold within the European Community, at the end of the electrical products useful life, it should not be disposed of with household waste.
Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice in your country.
The lithium battery in this product is not a serviceable item. Check with your Local Authority for recycling advice.

 


Battery Details

Battery Output: 8.1-12.6VDC, 3A
Rated Battery Capacity: 2000mAh
Rated Battery Voltage: 10.8V
Charging Voltage: 5V
Charging Current: 3A Max
Max Continuous Discharge Current: 25A

morphy richards®

NOMADICA

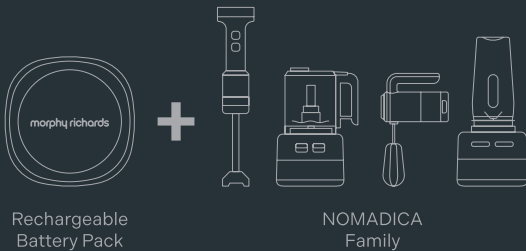

One Battery. No Limits.

NOMADICA is powered by a rechargeable battery pack for cordless flexibility across the family – just snap on & go!

Contact & Support

For help with your appliance, please visit our Help Centre:

support.morphyrichards.co.uk

Here you can browse FAQs, troubleshoot, or submit a Contact Us form.







Registering Your 3 Year Guarantee

Your standard 2 year guarantee is extended for an additional 1 year when you register the product within 28 days of purchase with Morphy Richards. If you do not register the product with Morphy Richards within 28 days, your product is guaranteed for 2 years.



To validate your 3 year guarantee, scan the QR code or register online at www.morphyrichards.co.uk

N.B. Each qualifying product needs to be registered with Morphy Richards individually. Please note that the 2 year guarantee is only available in the UK. Please refer to the 2 year guarantee for more information.

Your 2 Year Guarantee

It is important to retain the retailer’s receipt as proof of purchase. Staple your receipt to the back cover for future reference.

Please quote the following information if the product develops a fault. These numbers can be found on the base of the product.

Model no.

Serial no.

All Morphy Richards products are individually tested before leaving the factory. In the unlikely event of any appliance proving to be faulty within 28 days of purchase, it should be returned to the place of purchase for it to be replaced. If the fault develops after 28 days and within 24 months of original purchase, you should contact the Helpline quoting Model number and Serial number on the product, or write to Morphy Richards at the address shown. You may be asked to return a copy of proof of purchase. Subject to the exclusions set out on the next page (see Exclusions), the faulty appliance will then be repaired or replaced as appropriate and dispatched usually within 7 working days of receipt.

If, for any reason, this item is replaced or repaired during the 2 year guarantee period, the guarantee on the new item will be calculated from the original purchase date. Therefore it is vital to retain your original till receipt or invoice to indicate the date of initial purchase.

To qualify for the 2 year guarantee, the appliance must have been used according to the instructions supplied.

The appliance is intended for domestic use only. Misuse or use for commercial or any other purpose will render the guarantee invalid.

Exclusions

Morphy Richards shall not be liable to replace or repair the goods under the terms of the guarantee where:

1. The fault has been caused or is attributable to accidental use, misuse, negligent use or used contrary to the manufacturer’s recommendations or where the fault has been caused by power surges or damage caused in transit.
2. The appliance has been used on a voltage supply other than that stamped on the products.
3. Repairs have been attempted by persons other than our service staff (or authorised dealer).
4. The appliance has been used for hire purposes or non domestic use.
5. The appliance is second hand or refurbished.
6. Morphy Richards reserves the right not to carry out any type of servicing under the guarantee at its discretion.

This guarantee does not confer any rights other than those expressly set out above and does not cover any claims for consequential loss or damage. This guarantee is offered as an additional benefit and does not affect your statutory rights as a consumer. Morphy Richards products are intended for household use only. See usage limitations within the location safety instructions.

Disclaimer

Morphy Richards has a policy of continuous improvement in product quality and design. The company, therefore reserves the right to change the specification of its models at any time.

Health & Safety

The use of any electrical appliance requires the following common sense safety rules.

Please read these instructions carefully before using the product.

- This appliance can be used by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, if they have been given supervision or instruction concerning the use of the

LOCATION

- Do not expose the battery to direct sunlight.
- Do not use outdoors when it is raining or in humid conditions.
- Always locate your appliance away from the edge of the worktop.

OTHER SAFETY CONSIDERATIONS

- Do not use the battery for anything other than its intended purpose.
- The use of attachments or tools not recommended or sold by Morphy Richards may cause fire, electric shock or injury.

- **WARNING: Misuse of this appliance could cause personal injury.**

appliance in a safe way and understand the hazards involved.

- This appliance shall not be used by children.
- Children shall not play with the battery.
- This appliance is intended for household use only. It is not suitable for use in staff kitchen areas in shops, offices and other commercial environments.

PRODUCT SPECIFIC SAFETY

- Only use this Battery Pack with the Nomadica Cordless range listed. Using with other products may create a risk of injury and fire.

CHARGING CABLE

- Do not let the charging cable hang over the edge of the worktop where a child could reach it.
- Do not let the charging cable run across an open space e.g. between a low socket and table.
- The charging cable should run from the power source/socket to the appliance without straining the connections.
- Do not charge the battery with a damaged charging cable or charger (not supplied).

BATTERY SAFETY & DISPOSAL

- Do not use the Battery Pack if it has been damaged or modified. Damaged or modified batteries may result in fire, explosion or risk of injury.
- Do not expose a Battery Pack to fire or excessive heat. Exposure to fire or temperatures above 120°C/248°F may cause an explosion.
- Recommended ambient charging and storage temperature: 10°C–40°C (50°F–104°F). Recommended operation temperature: 25°C+/- 5°C.
- Do not incinerate electrical appliances even if the appliance is severely damaged, as lithium-ion batteries may explode in fire.

- The lithium battery is not a serviceable item. Check with your Local Authority for recycling advice.

This battery pack is compatible for use with the following Nomadica Cordless products.

- **400751 Handheld Mixer**
- **401751 Food Processor**
- **402751 Handheld Blender**
- **403751 Blender**



Morphy Richards
9 Cabot Lane, Poole, Dorset, BH17 7BY, UK

Upon registering your product at morphyrichards.co.uk

3 Year
Guarantee*

FP439000MUK Rev1

Model No. 439000

NOMADICA



 
User Manual

Please read and keep these instructions for future use


Charging the Battery Pack and Battery Status

Note: When using the battery pack for the first time (or after a period of being stored) it should be charged fully.


- 1. Attach the USB-C to USB-C cable to the adapter (not supplied) and to the Battery Pack.

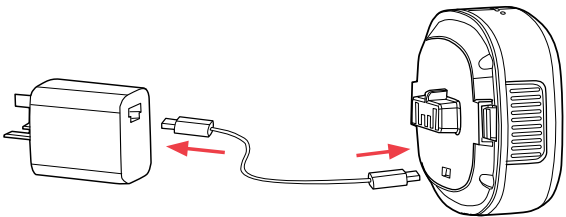

 - 2. Plug the adapter into a mains socket.

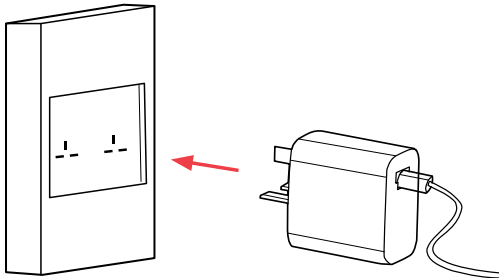

 - 3. The Battery Pack will begin charging with a single LED flashing. The LEDs will become solid as charging progresses. When the Battery Pack is fully charged, all LEDs will become solid and remain ON.

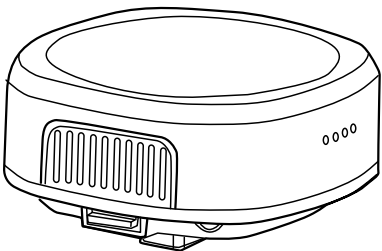

Note: If initial alternating light pattern continues for more than 10 seconds, the battery may be too warm or too cold to charge. Unplug the battery and allow it to stabilise to a normal room temperature and try charging again.

Note: Do not place the charger in an area of extreme heat or cold. The battery works best at room temperature.

Battery Details

Battery Output: 8.1-12.6VDC, 3A
Rated Battery Capacity: 2000mAh
Rated Battery Voltage: 10.8V
Charging Voltage: 5V
Charging Current: 3A Max
Max Continuous Discharge Current: 25A

Battery Status Indicator Lights

Indicators	Battery Level
○ ○ ○ ○	75-100%
○ ○ ○ ●	50-75%
○ ○ ● ●	25-50%
○ ● ● ●	<25%
⚡ ● ● ●	When the Battery Pack has only 10% charge, 1 indicator flashes 5 times.

Note: When the battery has very low charge remaining, 1 LED will flash 5 times.
Charging Time: The Battery Pack will fully charge in approximately 2 hours using a 40W adaptor (not supplied) with the USB-C to USB-C charging cable (supplied).

LED Indicators:

- = ON
- = OFF
- ⚡ = Flashing

Storage

- We recommend using the original box to store, in a clean and dry place below 27°C when not in use.
- Keep away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another. Shorting the terminals together may cause burns or a fire.
- If the battery pack isn't used for prolonged periods, it should be charged every 3 months to maintain optimum performance of the battery and the product/s it is used with.

Product Recycling

For electrical products sold within the European Community, at the end of the electrical products useful life, it should not be disposed of with household waste.



Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice in your country.

The lithium battery in this product is not a serviceable item. Check with your Local Authority for recycling advice.



Li-ion

Contact & Support

 
For help with your appliance, please visit our Help Centre:

support.morphyrichards.co.uk

Here you can browse FAQs, troubleshoot, or submit a Contact Us form.

morphy richards®

NOMADICA

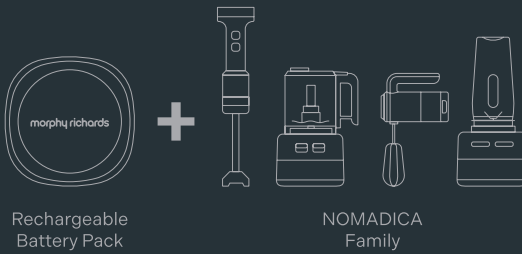

One Battery. No Limits.

NOMADICA is powered by a rechargeable battery pack for cordless flexibility across the family – just snap on & go!



@morphyrichardsuk #loveyourmorphy