



morphy richards

**3 Year
Guarantee***

*Upon registering your product
at morphyrichards.co.uk

STAND MIXER With Weighing Scale



Model No.

400024

User Manual

Please read and keep these instructions for future use





HEALTH AND SAFETY

The use of any electrical appliance requires the following common sense safety rules.

Read these instructions carefully and retain for future reference.

- This appliance can be used by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.
- This appliance shall not be used by children.
- Children shall not play with the appliance.
- Keep appliance and cord out of the reach of children.
- Do not use your Stand Mixer continuously for longer than 10 minutes. After using for these lengths of time, allow to cool for 20 minutes.
- Avoid touching moving parts. Keep hands, hair and clothing, and utensils away from the hand mixer attachments during operation, to prevent personal injury and/or damage to the appliance.





HEALTH AND SAFETY

- Switch off the appliance and disconnect from the supply before changing accessories or approaching parts that move in use.
- If the supply cable is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Unplug from the outlet when not in use, or when left unattended, and before assembling, disassembling or cleaning.
- For care & cleaning instructions, refer to the Cleaning Your Stand Mixer section of the manual.
- This appliance is intended for household use only. It is not suitable for use in staff kitchen areas in shops, offices and other commercial environments.
- This appliance is not intended to be to be operated on an extension cable or by means of an external timer or separate remote control system.



HEALTH AND SAFETY

LOCATION

- Do not use outdoors or in a bathroom.
- Always locate your appliance away from the edge of the worktop.

MAINS CABLE

- Do not let the mains cable hang over the edge of the worktop where a child could reach it.
- Do not let the lead run across an open space e.g. between a low socket and a table.
- Do not let the cable run across a cooker or other hot area which might damage the cable.
- The mains cable should reach from the socket to the base unit without straining the connections.
- The power cord cannot be replaced. Contact Morphy Richards for advice.

- The use of attachments or tools not recommended or sold by Morphy Richards may cause fire, electric shock or injury.

PRODUCT SAFETY

- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.

OTHER SAFETY CONSIDERATIONS


- Do not use the appliance for anything other than its intended purpose.
- **WARNING: Misuse of appliance could cause personal injury.**



ELECTRICAL DETAILS


- Check that the voltage on the rating plate of your appliance corresponds with your house electricity supply which must be A.C. (Alternating Current).
- Should the fuse in the mains plug require changing, replace it with a fuse of the same rating as originally fitted.
- The power consumption in off mode is 0.41w.
- The period after which the equipment reaches automatic off mode is after 3 minutes.
- **WARNING:** This appliance must be earthed.

PRODUCT REVIEW

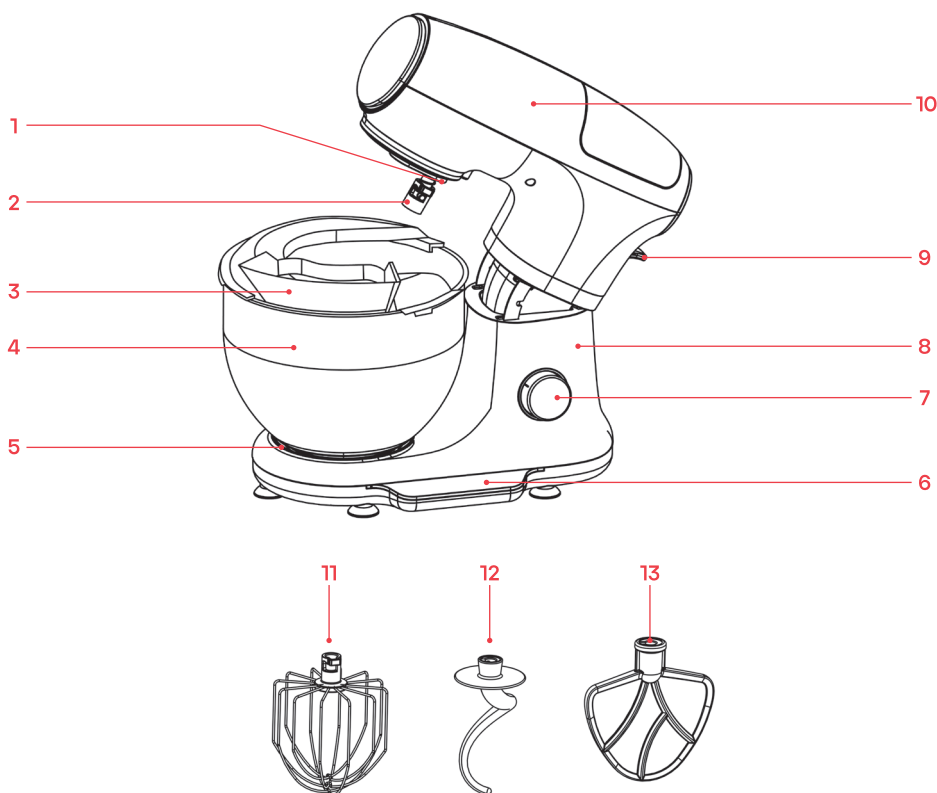



PRODUCT REVIEW

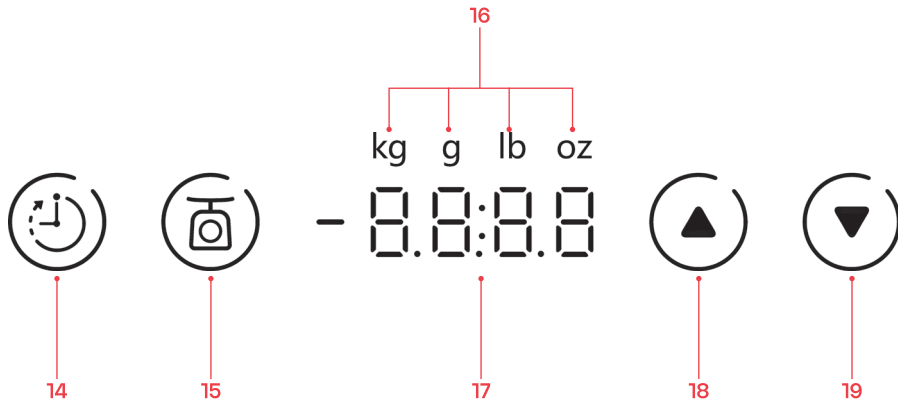

PRODUCT OVERVIEW

- | | |
|-----------------------------------|---|
| 1. Mixing Bowl Light | 13. Beater |
| 2. Accessory Socket | 14. Mixing Indicator |
| 3. Splash Guard | 15. Zero/Tare Button (with illumination) |
| 4. Bowl | 16. Unit of Weight Indicators |
| 5. Bowl Holder/Electric Scales | 17. Display Panel |
| 6. Control Panel | 18. Weight Unit Select/Time Increase Button (with illumination) |
| 7. Speed Dial (with illumination) | 19. Weight Unit Select/Time Decrease Button (with illumination) |
| 8. Base | |
| 9. Tilt/Release Button | |
| 10. Head | |
| 11. Whisk | |
| 12. Dough Hook | |

BEFORE FIRST USE

- Before first use thoroughly clean your Stand Mixer accessories with hot soapy water.





ASSEMBLING YOUR STAND MIXER

Assembling the accessories.

Note: The mixer **MUST** be unplugged while assembling.

- Press the Tilt/Release Button (9) raise the head until it locks into the tilt position.
- Select the required accessory.

Beater (13): Ideal for making cakes, cookies, pastry, mashed potato etc.


Dough Hook (12): Is used for kneading bread dough.

Whisk (11): Is used for whisking egg white and cream.

- Insert the accessory onto the Accessory Socket (2). Firstly, align the groove of the flat of the accessory with the pin on the Accessory Socket. Push the accessory upwards as far as possible and turn it anti-clockwise to lock it onto the Accessory Socket.
- When detaching, push the accessory upwards and turn it clockwise to remove it from the socket.

Note: Ensure the accessory is securely locked or it may fall off during operation.

- Place the Bowl (4) onto the Bowl Holder/Electric Scale (5), then turn it clockwise until it locks into position.
- To lower the Head (10), press the Tilt/Release Button (9) and lower the Head down until it clicks into the closed position.
- Slide the Splash Guard (3) over the Bowl (4).

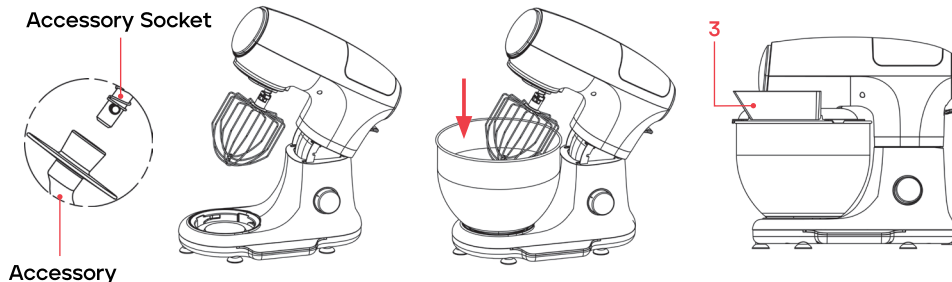



USING YOUR STAND MIXER

This Stand Mixer is integrated with the modes of **Weigh** and **Mix**. The weighing system is independent of the mixing system.

WEIGH MODE

Note: The appliance will enter into the **Weigh** mode when it is plugged into the mains outlet and the unit head is lifted to the tilt position.

- Ensure that the Speed Dial (7) is in the **0** position before plugging into the mains outlet.
- Press the Tilt/Release button (9) lift the unit Head (10) upwards until it locks into the tilt position.
- The appliance enters into the **Weigh** mode, and the indicators (15,17,18,19) will illuminate.

Note: While using the **Weigh** mode, the Mixing Indicator (14) does not illuminate and the **Mix** mode cannot be operated.

- After the appliance is powered on, the display shows the default setting **kg** and **0.000**.
- The unit of weigh can be changed to **g**, **lb** or **oz** by operating the Weight Unit Select/Time Increase Button (18) and the Weight Unit Select/Time Decrease Button (19).
- Put the Bowl (4) onto the Bowl Holder/Electric Scales (5) and then press the Zero/Tare Button (15) to tare, then add your ingredients until the weight is reached.

MIX MODE

Note: The appliance will enter into the **Mix** mode when it is plugged into a mains outlet and the Head (10) is in a horizontal position.

- Ensure that the Speed Dial (7) is in the **0** position before plugging into the mains outlet.





USING YOUR STAND MIXER

- Weigh your ingredients (instructions above in the Weigh Mode section)
- Select your accessory according to your ingredients and assemble using the instructions in the Assembling Your Stand Mixer section.
- Lower the Head (10) into the horizontal position, ensuring it is locked securely.
- The appliance will enter **Mix** mode. The Zero/Tare Button (15) will go out and the Mixing Indicator (14), Weight Unit Select/Time Increase Button (18) and the Weight Unit Select/Time Decrease Button (19) will illuminate.
- One beep will be heard, and the display will flash **88:88**, three times, then **00:00** will show in the display. The Speed Dial illumination (7) and the Mixing Bowl Light (1) will flash.

Note: All indicators will go out and the appliance will enter sleep mode if there is no operation for 3 minutes.

- Set the mixing time using the Weight Unit Select/Time Increase Button (18) and the Weight Unit Select/Time Decrease Button (19) button. The mixing time range is 5 seconds to 10 minutes. The default mixing time is 10 minutes.
- Turn the Speed Dial (7) to your required speed, the appliance will start to mix. The Speed Dial illumination and the Mixing Bowl light (1) will illuminate solidly.
- There are 8 soft start speed settings and P (pulse) setting for selection.
- Turn the Speed Dial to the required speed setting to begin mixing.

Note: During mixing or kneading, if flour sticks to the inside of the bowl, the appliance **MUST** be stopped before removing the flour.



USING YOUR STAND MIXER

Note: When kneading bread dough, use a low speed for slowing kneading. Using a high speed may damage the appliance.

- During mixing, you can add ingredients through the chute in the splash guard.
- When mixing is complete, the appliance stops, the Speed Dial indicator and Mixing Bowl Light flash. Turn the speed selector to **0** position, unplug from the mains outlet.

Note: After the appliance finishes mixing, three beeps will be heard, the display flashes **OFF** three times and then enters into the standby mode.

- If a mixing time is not set, the appliance will continue to mix for 10 minutes, three beeps will be heard and the display flashes **OFF** three times when mixing is finished and then enters into the standby mode.
- Press down the Tilt/Release button (9). The Head (10) will lift. Push upwards until it locks into the tilt position.
- Remove the accessory by pushing it upwards and then turning it clockwise to remove from the accessory socket.

IMPORTANT: The maximum operation time per cycle is 10 minutes and minimum of 20 minutes rest time is required between two consecutive cycles.

WARNING: The Speed Dial must be at 0 position and the plug removed from the mains outlet before removing the beater/dough hook/whisk.

WARNING: Avoid touching moving parts. Keep hands, hair and clothing, and all utensils away from the hand mixer attachments during operation to prevent personal injury and/or damage to the appliance.





HINTS AND TIPS

- Refrigerated ingredients, such as butter and eggs, should be at room temperature before adding to the bowl. Set the ingredients out ahead of time.
- To avoid eggs shells or unfresh eggs in your recipe, break them into a separate container before adding to the bowl.
- Do not over-beat ingredients.
- Climatic conditions, seasonal temperature changes, temperature of ingredients and their texture variation can all affect the required mixing time and the results achieved.
- Always start mixing at lower speed. Gradually increase to the recommended speed.

Accessory	Usage	Speed	Approx Time
Dough hook	For making bread dough.	1 to 2	4-6 minutes
Whisk	For making egg white, cream.	8	3 minutes
Beater	For making cakes, cookies, pastry, mashed potato etc.	1 to 5	4-6 minutes






CLEANING YOUR STAND MIXER

- **CAUTION:** Unplug the appliance and wait until it cools down completely before cleaning. The main unit **MUST NOT** be immersed into water or other liquid.

Accessory	Cloth	Water	Dishwasher
Main Unit	✓	✗	✗
Bowl	✓	✓	✓
Splash Guard	✓	✓	✓
Dough Hook	✓	✓	✓
Beater	✓	✓	✓
Whisk	✓	✓	✗

- Wipe the main unit Head (10) and Base (8) with a damp cloth and dry thoroughly with a soft cloth.
- Wipe any food particles from the power cord with a damp cloth and dry thoroughly.
- Wash the Bowl (4), Splash Guard (3), Beater (13), Dough Hook (12) and Whisk (11) in warm soapy water, rinse under running water and dry thoroughly. (The beater, dough hook, bowl and splash guard are dishwasher safe).
- After each use, wipe the Bowl Holder/Electric Scale (5) with a clean dry cloth. Any ingredients spilt in the gap (shown below) should be cleaned thoroughly with a soft brush. Failure to keep this area clean may affect the precision of the electronic scale.

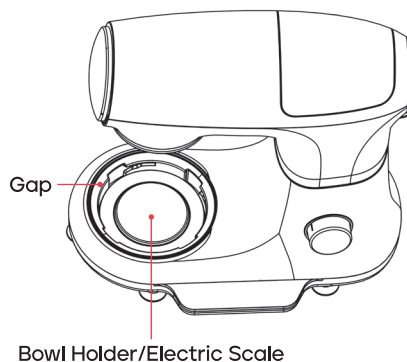



TROUBLESHOOTING

Problem	Solution
No power or not heating up.	Check the fuse and try a new fuse with the same rating.
	Try a different appliance in the socket as it may be the socket that is at fault.
	Check that the control knob has been turned on and the blue indicator light illuminates.
Not mixing.	Ensure the head is in a horizontal position and is locked securely.
	Is the mixer in weigh mode? Lock the mixing bowl into place and drop the head into a horizontal position.
Speed dial and mixing bowl light are flashing.	Lock the head into horizontal position.
Tripping Electrics.	Try using a different socket.
	Ensure there are no other appliances being used on the same set of sockets as the stand mixer.



SPARE PARTS

Part Number	Description	Qty per Product	Key Number
05593	Splash guard	1	3
05594	Bowl	1	4
05595	Whisk	1	11
05596	Dough Hook	1	12
05597	Beater	1	13





CONTACT US

If you are having a problem with your appliance, please contact our Helpline, as we are more likely to be able to help than the store you purchased the item from. Please have the product name, model number and serial number to hand when you contact us to help us deal with your enquiry quicker.

email: hello@morphyrichards.co.uk

www: www.morphyrichards.co.uk

PRODUCT RECYCLING



For electrical products sold within the European Community, at the end of the electrical products useful life, it should not be disposed of with household waste.

Please recycle where facilities exist.

Check with your Local Authority or retailer for recycling advice in your country.





REGISTERING YOUR 3 YEAR GUARANTEE

Your standard 2 year guarantee is extended for an additional 1 year when you register the product within 28 days of purchase with Morphy Richards. If you do not register the product with Morphy Richards within 28 days, your product is guaranteed for 2 years.



**To validate your 3 year guarantee,
scan the QR code or register online
at www.morphyrichards.co.uk**

N.B. Each qualifying product needs to be registered with Morphy Richards individually. Please note that the 2 year guarantee is only available in the UK. Please refer to the 2 year guarantee for more information.

YOUR 2 YEAR GUARANTEE

It is important to retain the retailer's receipt as proof of purchase. Staple your receipt to the back cover for future reference.

Please quote the following information if the product develops a fault. These numbers can be found on the base of the product.

Model no.

Serial no.

All Morphy Richards products are individually tested before leaving the factory. In the unlikely event of any appliance proving to be faulty within 28 days of purchase, it should be returned to the place of purchase for it to be replaced. If the fault develops after 28 days and within 24 months of original purchase, you should contact the Helpline quoting Model number and Serial number on the product, or write to Morphy Richards at the address shown. You may be asked to return a copy of proof of purchase.

Subject to the exclusions set out on the next page (see Exclusions), the faulty appliance will then be repaired or replaced as appropriate and dispatched usually within 7 working days of receipt.

If, for any reason, this item is replaced or repaired during the 2 year





REGISTERING YOUR 3 YEAR GUARANTEE

guarantee period, the guarantee on the new item will be calculated from the original purchase date. Therefore it is vital to retain your original till receipt or invoice to indicate the date of initial purchase.

To qualify for the 2 year guarantee, the appliance must have been used according to the instructions supplied.

The appliance is intended for domestic use only. Misuse or use for commercial or any other purpose will render the guarantee invalid.

Exclusions

Morphy Richards shall not be liable to replace or repair the goods under the terms of the guarantee where:

1. The fault has been caused or is attributable to accidental use, misuse, negligent use or used contrary to the manufacturer's recommendations or where the fault has been caused by power surges or damage caused in transit.
2. The appliance has been used on a voltage supply other than that stamped on the products.
3. Repairs have been attempted by persons other than our service staff (or authorised dealer).
4. The appliance has been used for hire purposes or non domestic use.
5. The appliance is second hand or refurbished.
6. Morphy Richards reserves the right not to carry out any type of servicing under the guarantee at its discretion.

This guarantee does not confer any rights other than those expressly set out above and does not cover any claims for consequential loss or damage. This guarantee is offered as an additional benefit and does not affect your statutory rights as a consumer. Morphy Richards products are intended for household use only. See usage limitations within the location safety instructions.

Disclaimer

Morphy Richards has a policy of continuous improvement in product quality and design. The company, therefore reserves the right to change the specification of its models at any time.





FP400024MUK Rev1

morphy richards



@morphyrichardsuk #loveyourmorphy

[morphyrichards.co.uk](https://www.morphyrichards.co.uk)

Morphy Richards

9 Cabot Lane, Poole, Dorset, BH17 7BY, UK

