



morphy richards

**3 Year
Guarantee***

*Upon registering your product
at morphyrichards.co.uk

3 LITRE Dehumidifier



Model No.
822126

User Manual

Please read and keep these instructions for future use





HEALTH AND SAFETY

The use of any electrical appliance requires the following common sense safety rules.

Please read these instructions carefully before using the product.

- **WARNING:** Disconnect from the mains supply before carrying out any routine maintenance.
- **WARNING:** Misuse of the appliance could cause personal injury.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children unless they are older than 8 years and supervised.





HEALTH AND SAFETY

- Keep the appliance and its cord out of reach of children less than 8 years.
- Do not use in an inflammable or explosive environment or which is above 40°C. Ideal operating environment temperature is 8°C - 40°C. Low temperatures may reduce dehumidification efficiency.
- The appliance is not intended to be operated on an extension cable or by means of an external timer or separate remote control system.
- This appliance is intended for indoor household use only. It is not suitable for use in staff kitchen areas in shops, offices and other commercial environments.



HEALTH AND SAFETY

LOCATION

- Ensure that the appliance is used on a firm flat surface.
- The appliance **MUST** have a minimum clearance of 50cm around all sides.
- Do not cover or place any objects on the dehumidifier.
- Do not use this appliance near water or in the immediate surroundings of a bath, shower or swimming pool.
- Do not use outdoors, this appliance is intended for indoor household use only.

MAINS CABLE

- The appliance should only be used with the adapter supplied.
- Do not let the adapter cable run across an open space e.g. between a low socket and a table.
- Do not place the cable in a position where it can be pulled by children or animals or tripped over.
- The adapter cable should reach from the socket to the product without straining the connections.
- It is normal that the adapter will get hot during use.

PERSONAL SAFETY

- Do not allow water or other liquids to run into the appliance as it could create a fire/electrical hazard. Do not operate with wet hands.

- Dispose of water collected from the dehumidifier. This water is not drinkable.
- Do not touch the adapter cable or plug with wet hands.
- Do not pull the adapter cable when unplugging.
- Keep hands, hair and clothing away from the appliance while in operation, to prevent personal injury and/or damage to the appliance.
- Do not push any objects in to the air inlet or outlet grilles as this may cause electric shock, fire or damage the appliance.
- In the unlikely event technical problems develop, stop using the product immediately and seek advice from the manufacturer.
- **WARNING:** Do not wrap the adapter cable around the main body of the appliance during or after use.

OTHER SAFETY CONSIDERATIONS

- Only use for its intended purpose.
- Do not in any way obstruct the air inlets and outlets of the appliance.
- Do not attempt to repair or adjust any electrical or mechanical element of the appliance. Doing so may be unsafe and will void your warranty.



ELECTRICAL DETAILS

Check that the voltage on the rating plate of your appliance corresponds with your house electricity supply which must be A.C. (Alternating Current).

Should the fuse in the mains plug require changing, replace it with a fuse of the same rating as originally fitted.

The power consumption in off mode is 0.49w.

 
The period after which the equipment reaches automatic off mode is 1 minute.

WARNING: The plug removed from the mains lead, if severed, must be destroyed, as a plug with a bared flexible cord is hazardous if engaged into a live socket outlet.

WARNING: This appliance must be earthed.




PRODUCT OVERVIEW

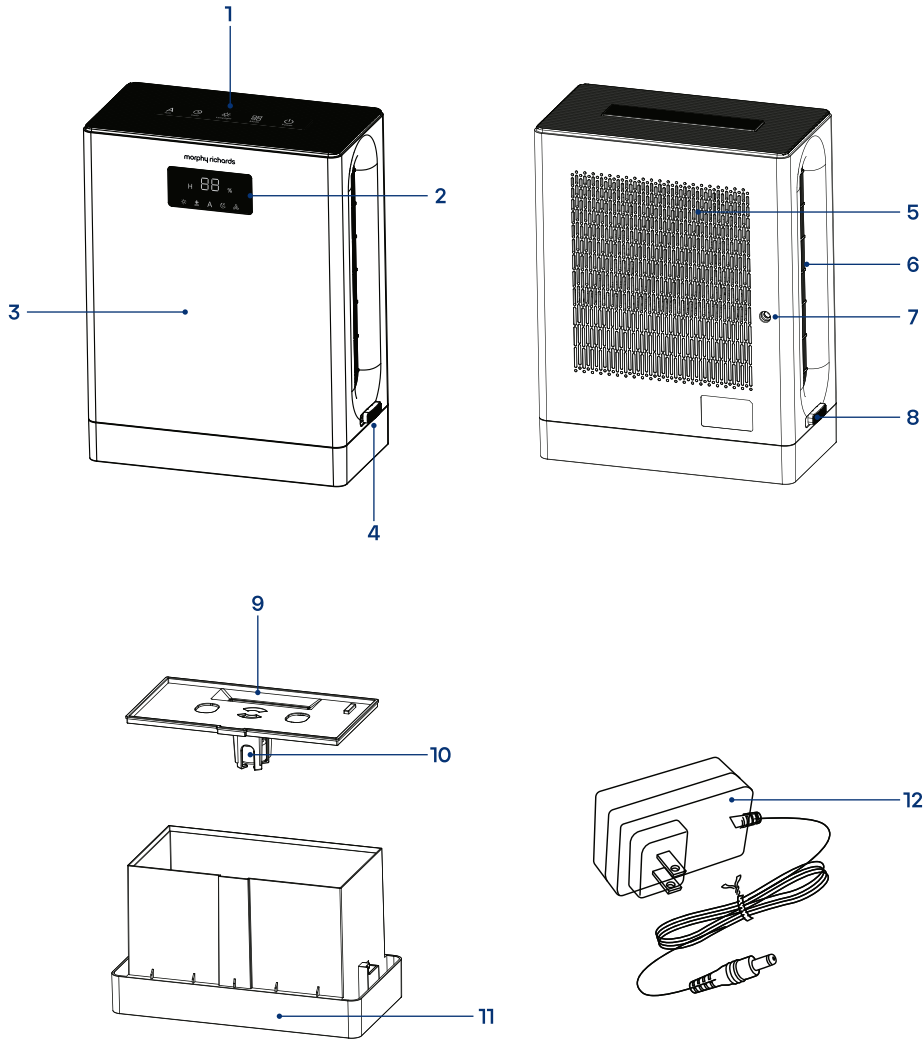




PRODUCT OVERVIEW

 CONTROL PANEL

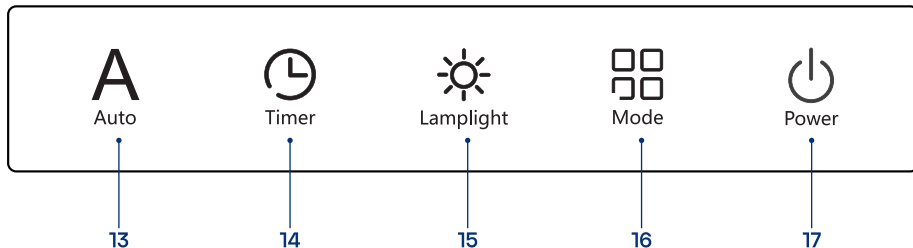

DISPLAY PANEL

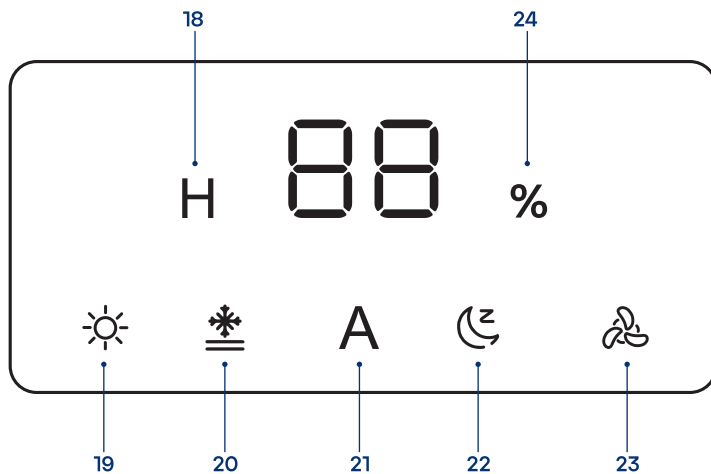 



PRODUCT OVERVIEW

- | | |
|-------------------------|-----------------------------|
| 1. Control Panel | 13. AUTO Button |
| 2. Display Panel | 14. Timer Button |
| 3. Main Unit | 15. Lamp Light Button |
| 4. RHS Water Tank Latch | 16. Mode Button |
| 5. Air Inlet | 17. Power ON/OFF Button |
| 6. Air Outlet | 18. Timer Hours LED |
| 7. Charging Inlet | 19. Lamp light LED |
| 8. LHS Water Tank Latch | 20. Defrost LED |
| 9. Water Tank Cover | 21. AUTO LED |
| 10. Float | 22. Sleep Mode LED |
| 11. Water Tank | 23. High mode fan LED |
| 12. Adapter | 24. Humidity Percentage LED |

INTENDED USE

Your Morphy Richards 3L Dehumidifier is ideal for use in small bedroom areas, wardrobes, small kitchen, closet, caravan, window cills, drying damp walls, mobile home

BEFORE FIRST USE

- Remove all packaging and ensure that all parts are included and undamaged prior to use.
- Ensure that the dehumidifier is assembled correctly





USING YOUR DEHUMIDIFIER

POWER BUTTON

- When the dehumidifier is plugged in, you will hear a short 'beep'.
- Press the Power ON/OFF Button (17) to turn on the appliance, a short beep will be heard. Press the Power ON/OFF Button again to turn the appliance off.

TIMER BUTTON

- To set the timer, press the Timer Button (14). The display will show 00 and the H (18) will illuminate, continue to press the Timer Button to increase the hours, the timing intervals are 8H, 12H, 24H, 36H and 48H.
- When the timing interval has been reached, the Display Panel (2) will flash twice, then remain still for 3 seconds and then revert to the mode in use.
- To cancel the timer, press Timer Button until it reaches 00. The H will go out and the appliance reverts to manual operation.

LIGHT BUTTON

- When the dehumidifier is powered on the Atmosphere light will illuminate the Water Tank (11). It gradually changes through 7 colours. Press the Lamp Light Button (15) to lock the desired colour.
- To switch off the light, press the Lamplight button again.

MODE BUTTON

- The Mode Button (16) selects Turbo Mode or Sleep Mode.
- Press the Mode Button once, the dehumidifier will operate in the Turbo Mode (high speed fan) and the Atmosphere light in the Water Tank will illuminate.
- Press the Mode Button again to switch to Sleep Mode. The fan will reduce to low speed and the Atmosphere lights will turn off.





USING YOUR DEHUMIDIFIER

AUTO BUTTON

- To set the Automatic Humidity Mode, press the Auto Button (21). It will default to 40%.
- Continue pressing the Auto Button until you reach your preferred humidity. The range is 40% to 70% and increases in 5% increments.

Note:

- In Automatic Mode, the appliance will switch off when it reaches the set humidity and restart when the humidity rises again.
- A comfortable humidity range is between 45% and 55%.

DEFROST INDICATOR

- The Defrost Function will automatically trigger if there is internal frosting in the appliance.
- The Defrost LED (20) will illuminate and the appliance will stop working.
- Wait for the appliance to defrost or move to a warmer area to speed up defrosting.
- When the appliance has defrosted the Defrost LED will go out and the operate again.

MEMORY FUNCTION

- When switched on the dehumidifier can recover the mode which was set before it was last switched off.

OVERFLOW PROTECTION

- When the Water Tank (11) is full, the appliance will turn off automatically. The Atmosphere light will flash red.
- Follow the instructions in Emptying the Water Tank section.





EMPTYING THE WATER TANK

WARNING: The appliance MUST be unplugged from the mains outlet before emptying the water tank.

- When the Water Tank (11) is full, the Atmosphere light will flash red and the appliance will turn off.
- Unlock the RHS Water Tank Latch (4) and LHS Water Tank Latch (8) shown in Figure 1, and lift the main unit up from the Water Tank, Figure 2.
- Remove the Water Tank Cover Figure 3, and empty the tank.
- Refit the Water Tank Cover, reassemble the appliance and lock the latches, Figure 4.

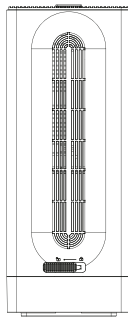 


Figure 1

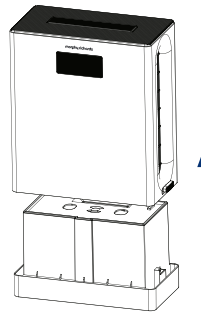 


Figure 2

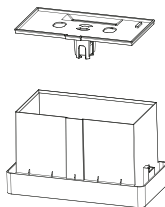 


Figure 3

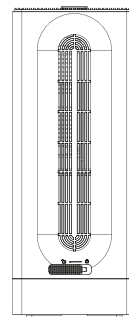 


Figure 4





EMPTYING THE WATER TANK

Note:

- **DO NOT** remove the Float (10) from the Water Tank (11). If the Float is removed the sensor may not be able to determine the water level in the Water Tank and may lead to the Water Tank overflowing.
- Ensure the water tank and lid are refitted correctly, Figures 5, 6 and 7.

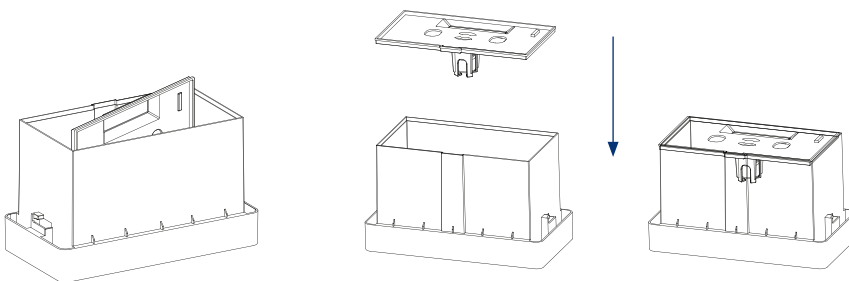 


Figure 5

Figure 6

Figure 7

CARE & CLEANING

WARNING: The appliance MUST be unplugged from the mains outlet before cleaning.

- Wipe the main unit with a soft, dry cloth to remove and light dust or debris.

WARNING: Never leave water in the water tank when the appliance is not in use.

The water tank should be cleaned at least once per week. If the water tank is dirty use cold water to clean it with a soft cloth.

DO NOT use detergent, steel wool, thinners or other solvents. It may damage the water tank, causing it to leak.





STORAGE

- Ensure the appliance and Water Tank are clean and dry before storing.
- To store your product out of season we recommend using the original box or similar size box.
- Unplug the adapter from the appliance and store separately, do not wrap the cable around the appliance as this cause damage to the adapter and cable.
- Store in a safe, clean and dry place when not in use.





TROUBLESHOOTING

Problem	Solution
Not working.	Try a different appliance in the socket as it may be the socket that is at fault.
	The water tank may not be fitted correctly. Refit the water tank
	The water tank may be full of water. Empty the water tank.
	The ambient humidity doesn't reach the products operating level.
	The initial humidity setting of the dehumidifier is 40%. If the set humidity value is higher than the current humidity level detected by the appliance, the dehumidifier goes into standby mode. The current humidity level detected by the appliance is shown on the LED display. Press and hold the AUTO button to set a value lower than the humidity level the appliance has detected.
	Low ambient temperature has caused defrost mode to activate. Wait for the appliance to defrost or move to a warmer area to speed up defrosting.
	The dehumidifier may not been on a firm, level surface. Relocate the appliance.
Machine collects water slowly.	The humidity may not be set correctly. Reset humidity.
	The air inlet and outlet may be covered or obstructed. Check for and move any coverings or obstructions.
	Doors and/or windows may be open. Close them.
	The dehumidification capacity will be affected in a low temperature and low humidity environment. If the indoor temperature is lower than 8°C, dehumidifying will not be effective.
	Check there are no other dehumidifying devices in the room.
Machine doesn't stop when the tank is full.	Float may be stuck, switch off the appliance and check the float.
	Water tank may not be installed properly, switch off the appliance and refit the water tank





SPARE PARTS

Part Number	Description	Qty per Product	Key Number
33024	Water tank cover with float	1	9 & 10
33025	Water tank	1	11
33026	Adapter	1	12





CONTACT US

If you are having a problem with your appliance, please contact our Helpline, as we are more likely to be able to help than the store you purchased the item from. Please have the product name, model number and serial number to hand when you contact us to help us deal with your enquiry quicker.

email: hello@morphyrichards.co.uk

www.morphyrichards.co.uk

PRODUCT RECYCLING



For electrical products sold within the European Community, at the end of the electrical products useful life, it should not be disposed of with household waste.

 
Please recycle where facilities exist.

Check with your Local Authority or retailer for recycling advice in your country.





NOTES





REGISTERING YOUR 3 YEAR GUARANTEE

Your standard 2 year guarantee is extended for an additional 1 year when you register the product within 28 days of purchase with Morphy Richards. If you do not register the product with Morphy Richards within 28 days, your product is guaranteed for 2 years.



**To validate your 3 year guarantee,
scan the QR code or register online
at www.morphyrichards.co.uk**

N.B. Each qualifying product needs to be registered with Morphy Richards individually. Please note that the 2 year guarantee is only available in the UK. Please refer to the 2 year guarantee for more information.

YOUR 2 YEAR GUARANTEE

It is important to retain the retailer's receipt as proof of purchase. Staple your receipt to the back cover for future reference.

Please quote the following information if the product develops a fault. These numbers can be found on the base of the product.

Model no.

Serial no.

All Morphy Richards products are individually tested before leaving the factory. In the unlikely event of any appliance proving to be faulty within 28 days of purchase, it should be returned to the place of purchase for it to be replaced. If the fault develops after 28 days and within 24 months of original purchase, you should contact the Helpline quoting Model number and Serial number on the product, or write to Morphy Richards at the address shown. You may be asked to return a copy of proof of purchase.

Subject to the exclusions set out on the next page (see Exclusions), the faulty appliance will then be repaired or replaced as appropriate and dispatched usually within 7 working days of receipt.

If, for any reason, this item is replaced or repaired during the 2 year





REGISTERING YOUR 3 YEAR GUARANTEE

guarantee period, the guarantee on the new item will be calculated from the original purchase date. Therefore it is vital to retain your original till receipt or invoice to indicate the date of initial purchase.

To qualify for the 2 year guarantee, the appliance must have been used according to the instructions supplied.

The appliance is intended for domestic use only. Misuse or use for commercial or any other purpose will render the guarantee invalid.

Exclusions

Morphy Richards shall not be liable to replace or repair the goods under the terms of the guarantee where:

1. The fault has been caused or is attributable to accidental use, misuse, negligent use or used contrary to the manufacturer's recommendations or where the fault has been caused by power surges or damage caused in transit.
2. The appliance has been used on a voltage supply other than that stamped on the products.
3. Repairs have been attempted by persons other than our service staff (or authorised dealer).
4. The appliance has been used for hire purposes or non domestic use.
5. The appliance is second hand or refurbished.
6. Morphy Richards reserves the right not to carry out any type of servicing under the guarantee at its discretion.

This guarantee does not confer any rights other than those expressly set out above and does not cover any claims for consequential loss or damage. This guarantee is offered as an additional benefit and does not affect your statutory rights as a consumer. Morphy Richards products are intended for household use only. See usage limitations within the location safety instructions.

Disclaimer

Morphy Richards has a policy of continuous improvement in product quality and design. The company, therefore reserves the right to change the specification of its models at any time.





AT822126MUK Rev1

morphy richards



@morphyrichardsuk #loveyourmorphy

[morphyrichards.co.uk](https://www.morphyrichards.co.uk)

Morphy Richards

9 Cabot Lane, Poole, Dorset, BH17 7BY, UK

