

morphy richards

**3 Year
Guarantee***

*Upon registering your product
at morphyrichards.co.uk

1.5 Litre Digital Kettle

Works with Alexa



Model No.

105000

User Manual

Please read and keep these instructions for future use

The use of any electrical appliance requires the following common sense safety rules.

Please read these instructions carefully before using the product.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- Keep the appliance and its cord out of reach of children aged less than 8 years.

- If the mains cable is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person in order to avoid a hazard.
- **WARNING: Do not open the lid whilst the water is boiling.**
- **WARNING: Misuse of the appliance could cause personal injury.**
- **WARNING: Avoid spillage on the connector.**
- This appliance has an element which may be subject to residual heat after use.
- This appliance is intended for household use only. It is not suitable for use in staff kitchen areas in shops, offices and other commercial environments.
- This appliance is not intended to be operated on an extension cable or by means of an external timer or a separate remote control system.

LOCATION

- Always locate your appliance away from the edge of the worktop.
- Ensure that the appliance is used on a firm, flat surface.
- Do not use the appliance outdoors or near water.
- **WARNING! Do not place the appliance onto a metal tray or metal surface whilst in use.**

MAINS CABLE

- Do not let the mains cable hang over the edge of the worktop where a child could reach it.
- Do not let the mains cable run across an open space e.g. between a low socket and a table.
- Do not let the mains cable run across a cooker or other hot area which might damage the cable.
- The mains cable should reach from the socket to the base unit without straining the connections.

PERSONAL SAFETY

- Always keep the top of the cordless base dry, especially around the connection area, disconnect the power supply before drying. Allow to dry thoroughly before reconnection to the power supply.
- Do not move the kettle while switched on.

- Always pour hot water slowly and carefully without tipping the appliance too fast to prevent splashing and spillage.
- If the kettle is overfilled, boiling water may be ejected.

OTHER SAFETY CONSIDERATIONS

- Do not use attachments or tools not recommended by Morphy Richards as this may cause fire, electric shock or injury.
- This kettle is only to be used with the cordless power base provided.
- Do not use the appliance for any use other than to boil water.
- The appliance must not be on the cordless power base when being filled with water.
- Unplug from the mains outlet when not in use.
- **WARNING! The appliance must not be immersed for cleaning.**



CAUTION!
HOT
SURFACE!

TREATING SCALDS

- Run cold water over the affected area immediately.
- Do not stop to remove clothing.
- Get medical help quickly.

ELECTRICAL DETAILS

Check that the voltage on the rating plate of your appliance corresponds with your house electricity supply which must be A.C. (Alternating Current).

WARNING: The plug removed from the mains lead, if severed, must be destroyed, as a plug with a bared flexible cord is hazardous if engaged into a live socket outlet.

Should the fuse in the mains plug require changing, replace it with a fuse of the same rating as originally fitted.

WARNING: This appliance must be earthed.

ERP Power dissipation:
off mode 0.45W.

Networked standby 0.77W.

The product will enter low power consumption mode in approximately 10 minutes once the main function has finished.

TX Frequency:	Wi-Fi: 2412-2472 MHz/2422-2462 MHz
Bluetooth/Bluetooth LE:	2402-2480 MHz
Output Power:	Wi-Fi: 18.85 dBm (802.11b)
Bluetooth LE:	7.83 dBm
Voltage / Frequency :	220-240V AC, 50-60Hz
Power:	1850-2200W
Capacity:	1.5Ltr (max.)
Indicator:	Power indicator when kettle is switched on
Safety class:	Class I

PRODUCT OVERVIEW



- | | |
|------------------------------|----------------------------------|
| 1. Lid | 7. Spout filter |
| 2. Lid pull handle | 8. Handle |
| 3. Spout | 9. Digital water level indicator |
| 4. Current water temperature | 10. Cordless power base |
| 5. Water temperature setting | 11. Cord storage (underneath) |
| 6. Power on/off switch | |

BEFORE FIRST USE

Before using the kettle for the first time, fill with water, boil and pour away.

IMPORTANT! Ensure that the electrical connections are completely dry before using the appliance.

BOILING THE KETTLE

1. Using the lid pull handle (2), remove the lid (1).
2. Fill the kettle carefully with water, through the lid opening, or alternatively fill through the spout (3) without removing the lid.

IMPORTANT! Do not fill to below the minimum fill line on the inside of the kettle, or above the max line.

To help to protect the environment, only boil as much water as you need. Ensure the lid is placed back on correctly.

3. Place the kettle on the cordless power base (10), ensuring the plug is connected to the mains supply. When connected to the mains supply, a beep will sound and the on/off switch will illuminate to indicate that the kettle is in standby mode. Touch the power on/off switch (6) to illuminate the full control screen.
4. Press the power on/off switch again to start boiling the water. The temperature display (showing the current water temperature) will flash, followed by the boiling symbol, indicating that the water will boil to 100°C. The boiling symbol will continue to flash throughout the process and the temperature display will increase as the water heats up. You can set the water temperature as required, please see the next page for more information.
5. When the water is boiled, a beep will sound twice and the kettle will switch off automatically. Lift the kettle from the cordless power base (10).
6. Carefully pour the water from the kettle.

WARNING! When boiled, allow a few seconds before pouring. Both the kettle and water will be hot.

SETTING THE WATER TEMPERATURE

When the full control screen is illuminated, touch the **SET** button to enter temperature setting mode, then touch again to cycle through the options and select your desired water temperature.

100°C (Fully Boiled) > **90°C** (Coffee) > **85°C** (Tea) > **80°C** (Green Tea) > **60°C** (Honey) > **40°C** (Warm Water)

When you have selected a temperature lower than 100°C (90°C, 85°C, 80°C, 60°C, 40°C), the keep warm indicator will flash and the kettle will begin heating the water. The temperature display will increase as the water heats up and a beep will sound twice to signal the end of operation.

The kettle will keep the water warm for 2 hours but if preferred, you can deactivate this function via the Alexa app (see page 13)

SETTING THE ILLUMINATION LIGHT

The kettle is equipped with an illumination light feature.

There are 3 settings of light mode (Breathing/On & Off).

When the kettle is boiling the illumination light is **always** in breathing mode.

Light mode set to breathing. When boiling is completed, the illumination light stays in the breathing mode.

Light mode set to On or Off. When boiling is completed, the illumination light will change to On or Off instead of breathing.

USING YOUR KETTLE (MANUAL USE)



 
DIGITAL WATER LEVEL INDICATOR

The kettle is equipped with a Digital Water Level Indicator feature.

IMPORTANT! Do not fill to below the minimum fill line on the inside of the kettle, or above the max line on the water gauge.

To help to protect the environment, only boil as much water as you need. Ensure the lid is re-fitted correctly after filling.

The guide below indicates the capacity according to each bar of the display.

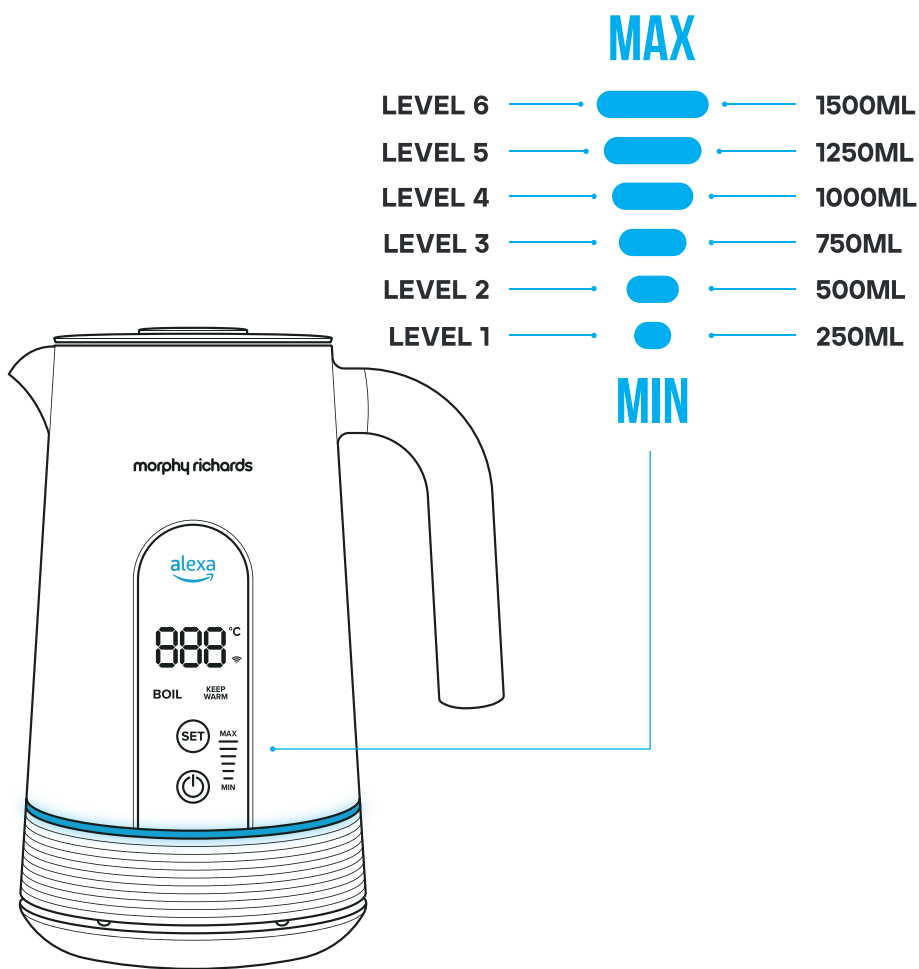

PAIRING YOUR DEVICES (APP USE)



 
IMPORTANT! Before pairing your kettle with the Alexa app, please ensure that the kettle has been set up correctly following the safety advice and usage guidance contained in this instruction booklet.

Before you get started, you will need:

- **Amazon account**
- **Alexa device**
- **Wi-Fi connection**
- **Alexa app downloaded to your mobile device**

Devices can be paired using the QR code (found on the product) or manually (without the QR code). Step 8 will give you a choice on which setup type to use.




1. Connect the power plug to the mains supply.
2. Activate the full control panel by pressing the illuminated power symbol. Press and hold **SET** for 3 seconds to enter pairing mode. The kettle will beep and the Wi-Fi symbol will start to flash, this indicates that the kettle is now ready to pair.
3. Open the Alexa app on your mobile device and select the **Devices** tab found at the bottom of the screen.
4. Next, select the **+** icon in the top right corner to add a new device. On the pop up menu, select **Add Device**.
5. Scroll down on the next screen and select **Kettle**.
6. You'll then be asked the brand of the kettle, select **Morphy Richards**.
7. The Alexa app will then ask for permission to access certain areas of your mobile device and includes a link to Amazon's Conditions of Use and all of the terms. Read this section carefully and click **Next** when you are ready to continue.

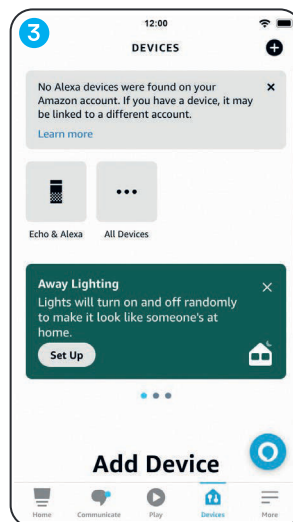







PAIRING YOUR DEVICES (APP USE)



   8. You will find a QR code sticker on the product. On the next screen, select **Scan Barcode** and simply scan the QR code through the camera. You can remove this sticker once your kettle is all set up and ready to use. If you don't have a QR code, simply select **Don't have a barcode?**.
9. The Alexa app will then search for the device in order to establish a connection, this can take around 45 seconds.
10. When the app has connected to the kettle, select your Wi-Fi network and input the password. To avoid any connection issues, Wi-Fi should be 2.4G and there shouldn't be any unusual characters or symbols in the Wi-Fi name or password.
11. The kettle has now been added to your Alexa account. Continue setup by selecting **Done**.
12. The next screen allows you to add devices to a group. For example "Kitchen", this means you can control multiple devices at one time. However, you do not need to set groups up at this point and you can skip this step if preferred.
13. Congratulations! Your new Morphy Richards kettle is now set up and ready to use with Alexa!
14. If preferred, you can rename your kettle on the Alexa app.
 1. Via the app, go to the kettle device main screen, then select Settings.
 2. Select Edit Name under Morphy Richards Kettle.
 3. Rename the kettle by typing in the new name.
 4. Select back <.

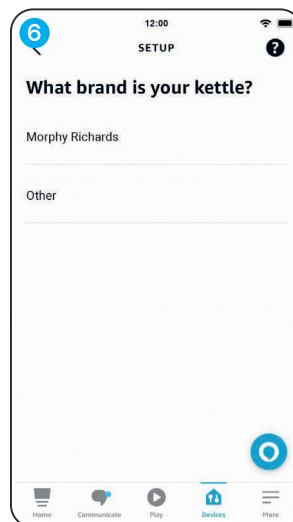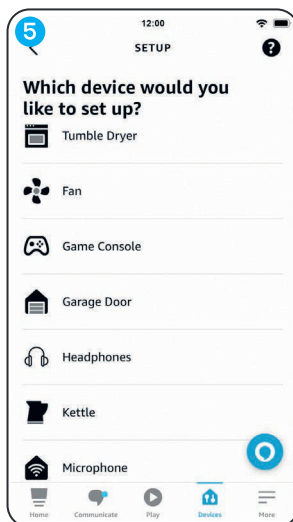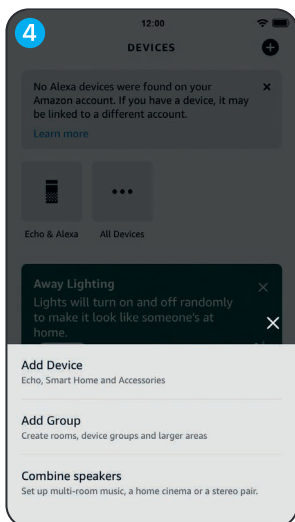

PAIRING YOUR DEVICES (APP USE)

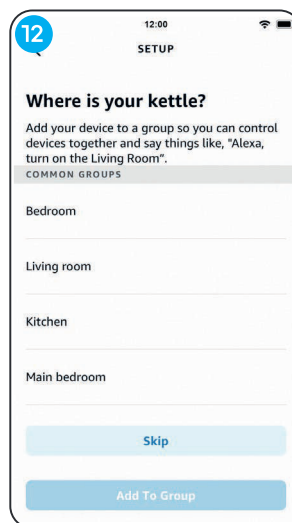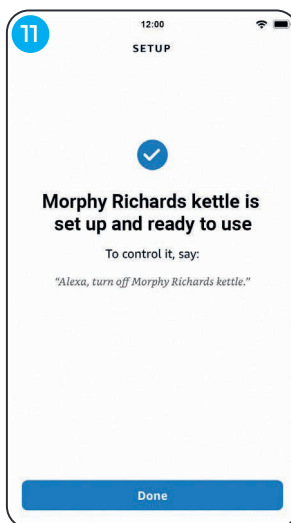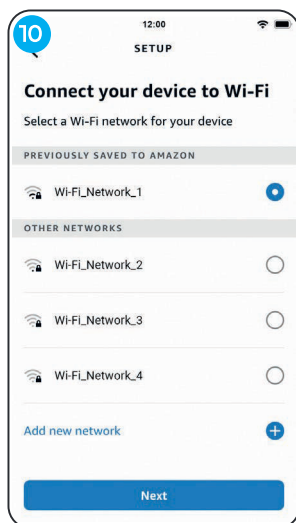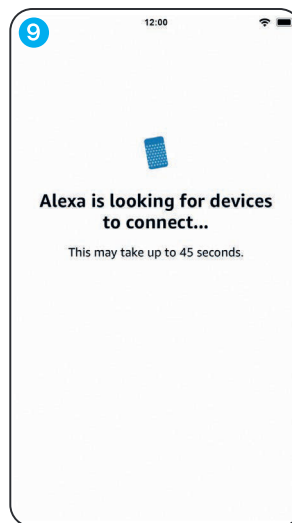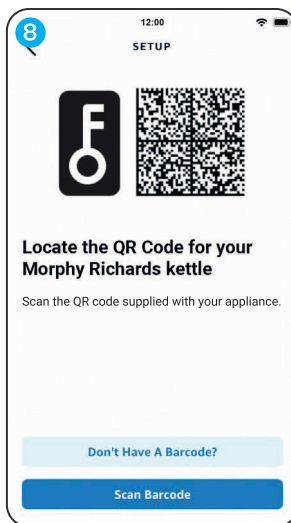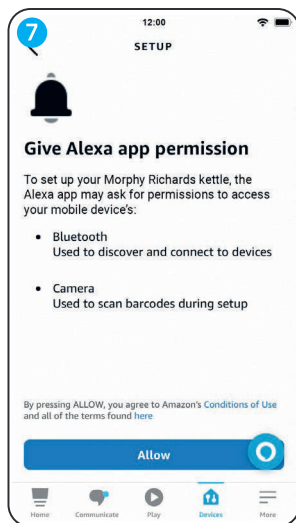     


Now your kettle is paired with your mobile device, you can take full control via the Alexa app.

Your Morphy Richards kettle will now appear under the **Devices** tab on the Alexa app. Select the kettle to enter the control screen.

This screen contains information about your kettle and all control options.

 1. Switch the kettle on and off.
2. Current water temperature.
3. Number of boils until the next recommended descale*.
4. General status.
5. Remaining water level.
6. Preset the water temperature.
7. Change the temperature unit.
8. Switch the keep warm function on and off (find out more on page 17).
9. Morphy Richards Kettle On/Off.
10. Reset the descale countdown.
11. Create a routine (find out more on page 14)
12. Voice commands
(See morphyrichards.co.uk for more info)

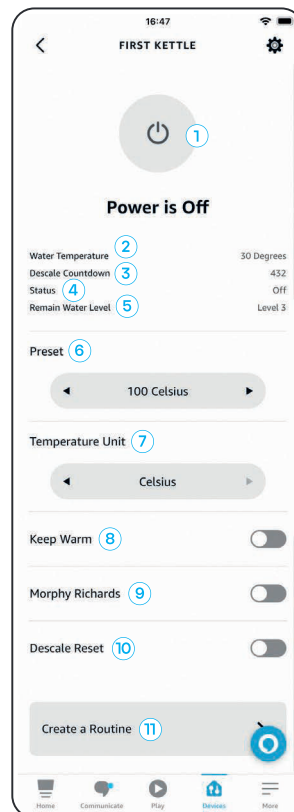



*After 500 boils (set to any temperature), you will be reminded via the app to descale the kettle. To maintain the efficiency of this product, it is very important to descale it regularly. Advice regarding descaling the kettle can be found on page 18.

CREATING ROUTINES







USING VOICE COMMANDS

1. On the main control screen, select **Create a routine** (see page 13 for more information regarding the main control screen).
2. Select **Create Routine** on the next screen.
3. The following screen contains options to create your new routine. Select **Enter routine name** and type in the name of your routine, for example **Boil the kettle** (press **Next** to save this name and return to the options on the **New Routine** screen).
4. Under **When this happens** you can select a trigger. Choosing **Voice** will activate your routine when you say a specific phrase.
5. Type in your voice command such as "Alexa, boil the kettle" (press **Next** to save this voice command and return to the options on the **New Routine** screen). You can set up different trigger types for your routine (see page 16 for more information).
6. Press **Save** when you have set up your new routine.
7. Your new routine will appear under **Your Routines** on the main **Routines** screen.
8. To **Edit the routine**, you can activate or deactivate the routine using the toggle switch. Select the 3 dots in the top right corner for more options such as **Play Routine**, **Change Trigger**, **Copy Actions To New Routine**, **View Activity**, **Share Routine** and **Delete Routine**.

  Please note: The kettle must show as Power On, on the main control screen for your routine to work successfully.

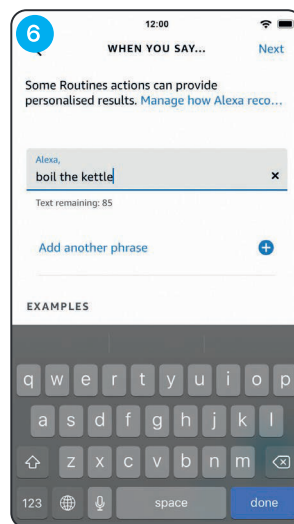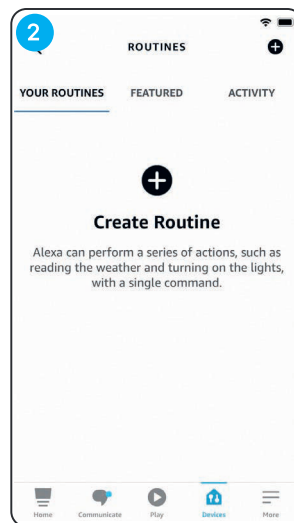

USING YOUR KETTLE (APP USE)

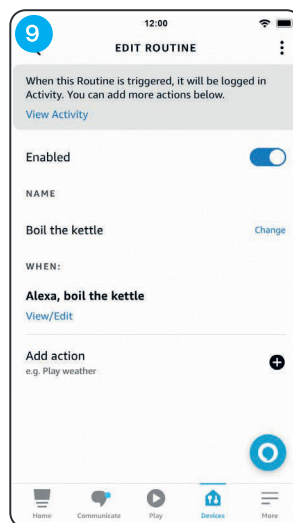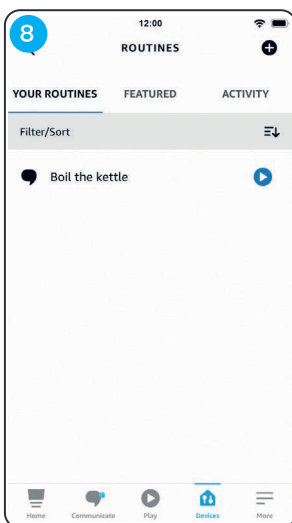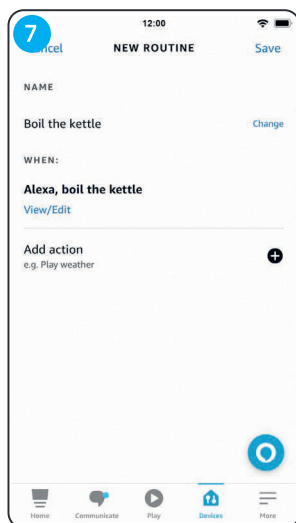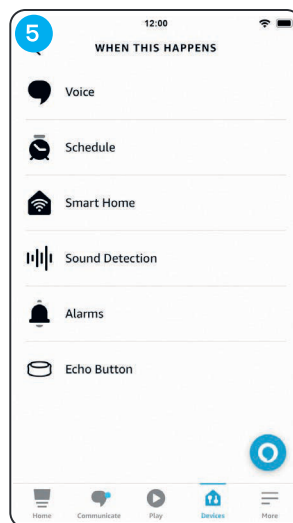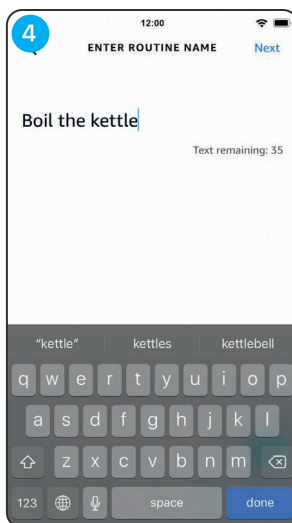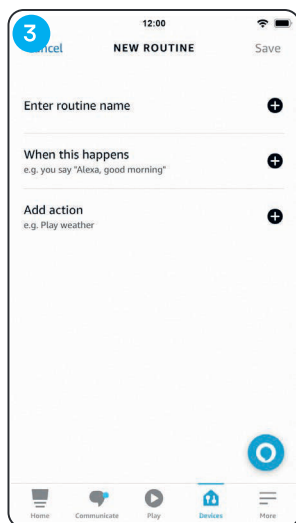      


IMPORTANT! Routines will heat the water to the selected preset temperature. Ensure that the setting is correct for your routine.

CREATING ROUTINES

WITH DIFFERENT TRIGGERS



1. Follow steps 1-3 on page 14 to get to the **When this happens** menu. For this example, we will create a routine for your first hot drink of the day, you could call it **Morning Routine**
2. Instead of setting the routine to activate through voice command, here you can select a different trigger such as **Schedule**, **Smart Home**, **Sound Detection**, **Alarms** or **Echo Button**. For this example, we will set the routine to activate at a certain time, select **Schedule**.
3. You can set a specific time by selecting **At Time**. You can also set the activation time as **Sunrise** or **Sunset**.
4. When you select **At Time** you will find options to repeat the routine (the routine can be repeated every day or you can choose specific days) and you can also set the specific activation time. Select **Next** when you are happy with the settings.
5. On the routine overview screen, select **Save**. This routine will now appear under **Your Routines** on the main **Routines** screen.

 Please note: The kettle must show as Power On, on the main control screen for your routine to work successfully.

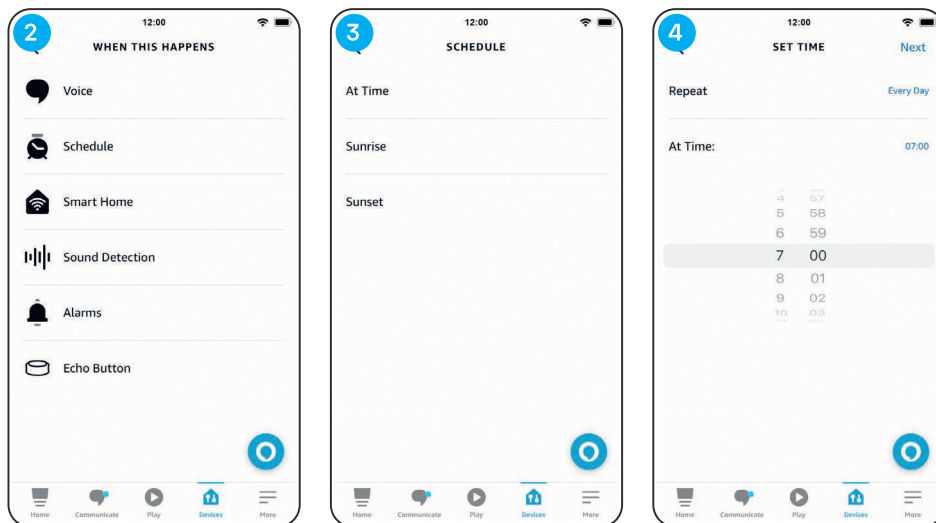

VIEWING YOUR ROUTINES

  1. On the home screen of the Alexa app, select the **More** tab.
2. Select **Routines** to view all of your current routines.
3. Select **Activity** on the top tab to view a log of all recent activity.

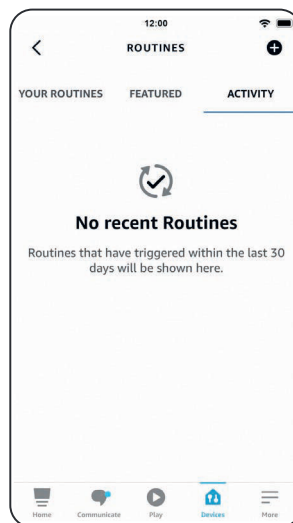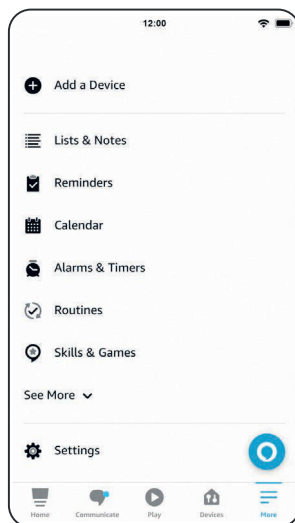

DUPLICATING ROUTINES

Duplicate a routine under **Edit Routine** by selecting the 3 dots in the top right corner, and selecting **Copy Actions To New Routine**

You may have a favoured routine already set up that you'd like to use on a different day, but perhaps with just the time set slightly differently, depending on your schedule. The duplicating a routine feature is perfect for this as it avoids having to create a whole new routine from scratch.

KEEP WARM FUNCTION

If the kettle is switched on when pre-set to any temperature other than a full 100°C boil (90°C, 85°C, 80°C, 60°C, 40°C) and the keep warm function is activated (see page 13 for more information on how to activate and deactivate this function), the kettle will heat the water to the set temperature, beep twice and then keep the water warm for 2 hours.

The kettle does not keep water warm that has been set to boil at 100°C.

RENAMING YOUR KETTLE

If preferred, you can rename your kettle on the Alexa app.

1. Via the app, go to the kettle device main screen, then select **Settings**.
2. Select **Edit Name** under **Morphy Richards Kettle**.
3. Rename the kettle by typing in the new name.
4. Select back <.

CLEANING AND MAINTENANCE

CLEANING YOUR KETTLE

- **WARNING!** Always disconnect the plug from the mains and allow the kettle to cool before cleaning.
- Wipe the outside with a damp cloth.
- **IMPORTANT!** Do not use abrasive cleaners on the outside of the kettle which may scratch the surface.

DESCALING

- **IMPORTANT!** As this appliance is fitted with a concealed element it must be descaled regularly. The frequency of descaling depends on usage and the hardness of the water in your area.
- Excessive scale can cause the appliance to switch off before boiling and may damage the element, invalidating the warranty.
- It is essential that regular descaling takes place. The Alexa app will remind you every 500 boils to descale your kettle.
- Remove hard scale using a proprietary descaling product suitable for stainless steel, glass or plastic. Please follow the cleaning products instructions carefully.
- **IMPORTANT!** Ensure that the electrical connections are completely dry before using the appliance.

SPARES



Part number	Description	Qty per product	Features key number
02155	Spout Filter	1	7

CONTACT & SUPPORT

For help with your appliance, please visit our Help Centre:

support.morphyrichards.co.uk

Here you can browse FAQs, troubleshoot, or submit a Contact Us form.

PRODUCT RECYCLING



For electrical products sold within the European Community, at the end of the electrical products useful life, it should not be disposed of with household waste.

Please recycle where facilities exist.

Check with your Local Authority or retailer for recycling advice in your country.

REGISTERING YOUR 3 YEAR GUARANTEE



Your standard 2 year guarantee is extended for an additional 1 year when you register the product within 28 days of purchase with Morphy Richards. If you do not register the product with Morphy Richards within 28 days, your product is guaranteed for 2 years.



To validate your 3 year guarantee,
scan the QR code or register online
at www.morphyrichards.co.uk

N.B. Each qualifying product needs to be registered with Morphy Richards individually. Please note that the 2 year guarantee is only available in the UK. Please refer to the 2 year guarantee for more information.

YOUR 2 YEAR GUARANTEE

It is important to retain the retailer's receipt as proof of purchase. Staple your receipt to the back cover for future reference.

Please quote the following information if the product develops a fault. These numbers can be found on the base of the product.

Model no.

Serial no.

All Morphy Richards products are individually tested before leaving the factory. In the unlikely event of any appliance proving to be faulty within 28 days of purchase, it should be returned to the place of purchase for it to be replaced. If the fault develops after 28 days and within 24 months of original purchase, you should contact the Helpline quoting Model number and Serial number on the product, or write to Morphy Richards at the address shown. You may be asked to return a copy of proof of purchase.

Subject to the exclusions set out below (see Exclusions), the faulty appliance will then be repaired or replaced as appropriate and dispatched usually within 7 working days of receipt.

If, for any reason, this item is replaced or repaired during the 2 year

guarantee period, the guarantee on the new item will be calculated from the original purchase date. Therefore it is vital to retain your original till receipt or invoice to indicate the date of initial purchase.

To qualify for the 2 year guarantee, the appliance must have been used according to the instructions supplied.

The appliance is intended for domestic use only. Misuse or use for commercial or any other purpose will render the guarantee invalid.

Exclusions

Morphy Richards shall not be liable to replace or repair the goods under the terms of the guarantee where:

1. The fault has been caused or is attributable to accidental use, misuse, negligent use or used contrary to the manufacturer's recommendations or where the fault has been caused by power surges or damage caused in transit.
2. The appliance has been used on a voltage supply other than that stamped on the products.
3. Repairs have been attempted by persons other than our service staff (or authorised dealer).
4. The appliance has been used for hire purposes or non domestic use.
5. The appliance is second hand or refurbished.
6. Morphy Richards reserves the right not to carry out any type of servicing under the guarantee at its discretion.

This guarantee does not confer any rights other than those expressly set out above and does not cover any claims for consequential loss or damage. This guarantee is offered as an additional benefit and does not affect your statutory rights as a consumer. Morphy Richards products are intended for household use only. See usage limitations within the location safety instructions.

Disclaimer

Morphy Richards has a policy of continuous improvement in product quality and design. The company, therefore reserves the right to change the specification of its models at any time.



works with alexa

[illegible]



KT105000MUK Rev1

morphy richards



@morphyrichardsuk #loveyourmorphy

morphyrichards.co.uk

Morphy Richards

9 Cabot Lane, Poole, Dorset, BH17 7BY, UK

