

Bakeware Care and Use

Please read and keep these instructions for future use.

- Before first use remove all packaging and wash before first use in warm, soapy water and dry thoroughly.
- Always use oven gloves when handling the product if hot.
- If the cookware has a non-stick coating, metal tools should not be used in order to protect the non-stick coating.
- Oven safe to 230°C / 450°F / Gas Mark 8; unless otherwise specified.
- Do not use this product over direct heat or gas flame.
- Do not use under a grill.
- This product is dishwasher safe but we recommend hand washing to prolong the performance of the non-stick coating.
- Always leave bakeware to cool off before submerging in water.
- Do not use metal scourers or harsh abrasives to remove stubborn bits of food as these may damage the non-stick coating.
- Do not use knives or other sharp tools to cut cake whilst still in the tin.
- Remove burnt-on foods left in the mould by soaking for a few minutes in hot soapy water before cleaning.
- Always make sure bakeware is dried thoroughly before storage.
- Take care when storing your bakeware — stacking may result in scratches on the non-stick coating.



To validate your 3 year guarantee,
scan the QR code or register online
at www.morphyrichards.co.uk