



morphy richards

**3 Year
Guarantee***

*Upon registering your product
at morphyrichards.co.uk

SIGNATURE Long Slot 4 Slice Toaster



Model No.
245703/245704/
245705/245742/
245744

User Manual

Please read and keep these instructions for future use





HEALTH AND SAFETY

The use of any electrical appliance requires the following common sense safety rules.

Please read these instructions carefully before using the product.

- **WARNING! Disconnect from the mains supply before carrying out any routine maintenance.**
- **WARNING! Misuse of the appliance could cause person injury.**
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.



HEALTH AND SAFETY

- Keep the appliance and its cord out of the reach of children less than 8 years.
- If the supply cable is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person in order to avoid a hazard.
- The bread may burn, therefore do not use the appliance near or below combustible material such as curtains.
- This appliance is not intended to be operated on an extension cable or by means of an external timer or a separate remote control system.
- This appliance is intended for household use only. It is not suitable for use in staff kitchen areas in shops, offices and other commercial environments.



HEALTH AND SAFETY

WARNING

= Danger to the person

IMPORTANT

= Damage to the appliance

In addition, we offer the following safety advice.

MAINS CABLE

- Do not let the cable run across a cooker or hot area which might damage the cable.

PERSONAL SAFETY

- Watch over your appliance during use and do not leave unattended when switched on.
- **WARNING! Do not touch the top of the appliance or other hot parts during or after use, use handles or knobs.**
- **WARNING! Do not wrap the cable around the main body of the appliance during or after use.**
- **WARNING! Do not use under cupboards.**
- **WARNING! Do not insert oversize foods, metal, foil packages or utensils into the toaster.**
- **WARNING! Do not attempt to dislodge food when the appliance is plugged in and never insert cooking utensils into the slots.**
- **IMPORTANT! Do not place bread or other items on top of the slots as this may damage the appliance and creates a fire hazard.**

PRECAUTIONS

- Never use the appliance when it is empty (when there is no bread inside) except on first use.
- Do not use very thin or broken slice of bread.
- Do not insert other foods that may drip during the cooking process. In addition to making the cleaning procedure more difficult, these may cause fires.
- Clean the crumb tray regularly: crumbs can smoke or burn.
- Do not insert (by force) foods that are too big for the slots.
- Do not insert forks or other utensils into the toaster in order to remove bread. As well as damaging the toaster, there is a high risk of electric shock.
- Should some toast remain blocked in the toaster, remove the plug from the mains, wait for the toaster to cool down until it is safe to touch, then turn the toaster over and shake it gently.



HEALTH AND SAFETY

PLEASE BE AWARE OF HOT SURFACES. HANDLE WITH CARE.



**CAUTION!
HOT
SURFACE!**

TREATING SCALDS

- Run cold water over the affected area immediately.
- Do not stop to remove clothing.
- Get medical help quickly.

ELECTRICAL REQUIREMENTS

Check that the voltage on the rating plate of your appliance corresponds with your house electricity supply which must be A.C. (Alternating Current).

 
WARNING: The plug removed from the mains lead, if severed, must be destroyed, as a plug with a bared flexible cord is hazardous if engaged into a live socket outlet.

Should the fuse in the mains plug require changing, replace it with a fuse of the same rating as originally fitted.

WARNING: This appliance must be earthed.



PRODUCT OVERVIEW

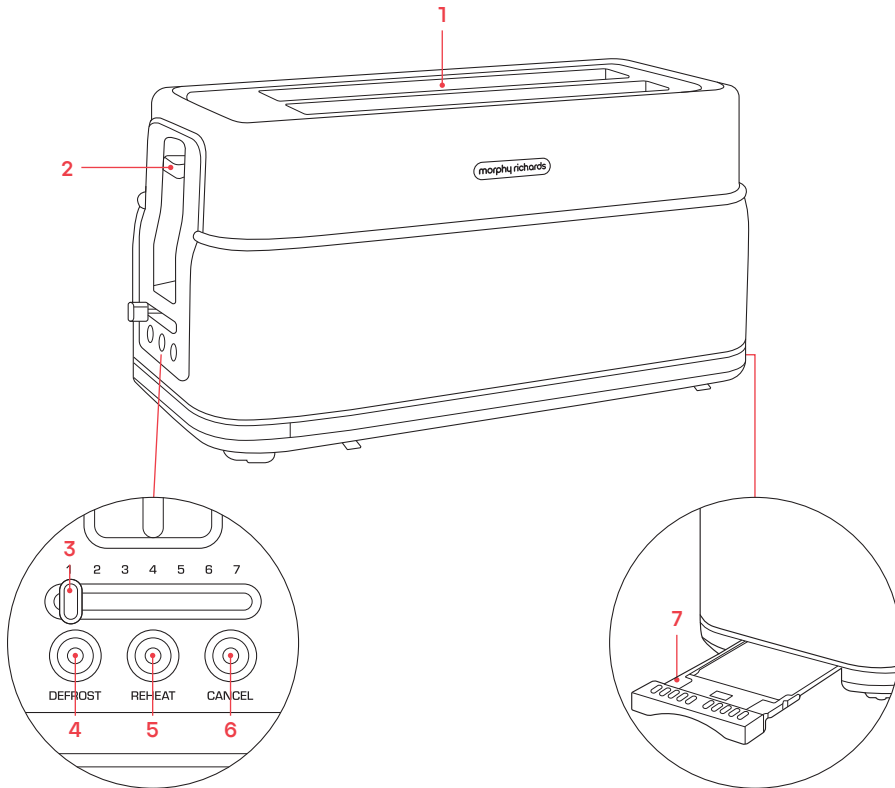

- | | |
|-------------------------|-------------------|
| 1. Bread slots | 5. Re-heat button |
| 2. Bread carriage lever | 6. Cancel button |
| 3. Browning control | 7. Crumb tray |
| 4. Defrost button | |

 
BEFORE FIRST USE

- Before using your toaster for the first time, operate the toaster without bread.
- As with all new electric heating elements, your toaster will emit a 'new' smell when it is first switched on. This is quite normal and not a cause for concern.






USING YOUR TOASTER

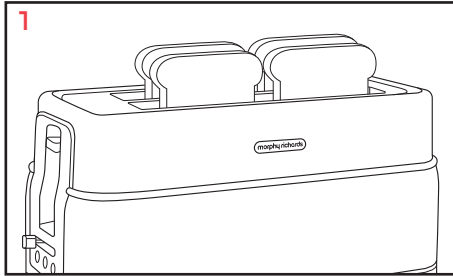


Place the sliced bread into the bread slots (1).

If you toast two slices, put them in the same bread slot, not one in each of the slots.


 
If you put just one slice in either of the two bread slots, it may become over-browned due to the additional heat coming from the long elements, adjust the browning control (3) to a lower setting.

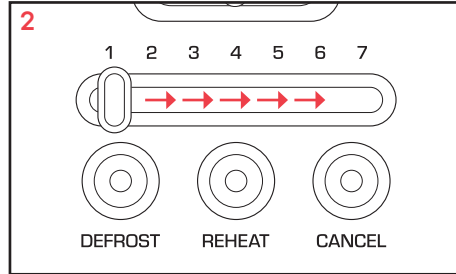

 Adjust the browning control (3) to the desired setting.

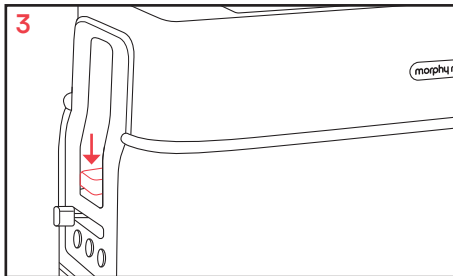

  Depress the bread carriage lever (2). The toaster will begin toasting the bread.

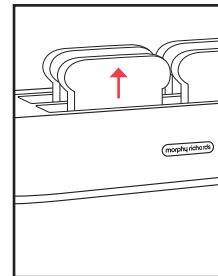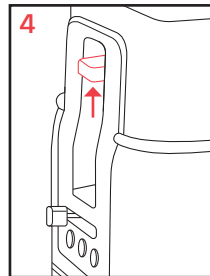

When completed, the bread carriage lever will automatically rise and lift the toast from the toaster.



ADDITIONAL FEATURES

CANCEL BUTTON

If you wish to interrupt the toasting process, press the cancel button.

RE-HEAT BUTTON

If your toast has popped up and gone cold, the toaster offers a re-heat facility. To use, depress the bread carriage lever (2), and press the re-heat button (5) immediately. The button will illuminate and the toaster will operate for a short period re-heating the bread.

FROZEN BUTTON

 
To toast frozen bread, do not adjust the browning control (3) from your normal setting. Place the frozen bread in the bread slots (1), depress the bread carriage lever (2) and press the defrost button (4). The button will illuminate and the toaster will operate for a longer period defrosting and toasting the bread.

REMOVING THE CRUMB TRAY

WARNING! Crumbs will accumulate in the crumb tray (7) and could catch fire if not emptied regularly.

1. When the appliance has cooled down completely, tap the sides of the case lightly to dislodge any crumbs lodged in the bread slots (1).
2. Empty the crumb tray and replace.

Never operate the appliance without the crumb tray fitted.

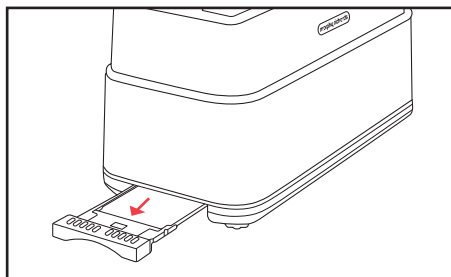



HINTS AND TIPS

- In order to achieve uniform browning, we recommend you wait a minimum of 30 seconds between each toasting, so that the control can be automatically reset.
- **If toasting one slice, or one slice in each slot, you may need to adjust the browning control (3) to a slightly lower setting. You will notice a variation in toast colour on one side of a single slice. The side facing the inner wall of the bread slot (1) will be darker in colour than the side facing the outer wall of the bread slot.**
- When toasting two slices it is recommended they are of equal size and freshness. Also, put both slices in the same bread slot, not one in each of the slots. If you put just one slice in a bread slot, it may become over-browned due to the additional heat coming from the long elements.
- Stale bread toasts more rapidly than fresh bread. Therefore, the browning control should be set at a lower setting than usual.
- All sorts of bread can be used as well as teacakes, small rolls etc. The length of bread slots (1) allow for longer types of bread such as artisan, pittas, small baguettes etc. Slices should not however be so thick as to cause burning or jamming within the bread slots.
- If the bread in your toaster becomes jammed, disconnect your toaster at the socket, allow it to cool, then remove the bread.
- Allow the toaster to cool fully before putting away.
- Should some toast remain blocked in the toaster, remove the plug from the mains, wait for the toaster to cool down until it is safe to touch, then turn the toaster over and shake it gently.



CARE AND CLEANING

- Before cleaning, unplug your toaster and let it cool down.
- The external part of the appliance must be cleaned with a soft cloth. Do not use abrasive detergents that can ruin the surface.
- **DO NOT IMMERSE IN WATER.**
- After each use, remove the plug from the electrical outlet, and empty the crumb collection tray that is under the appliance.

DO NOT TOUCH ANY PART OF THE TOASTER WITH SHARP OR METAL UTENSILS, ESPECIALLY INSIDE THE BREAD TOASTING SLOTS. RISK OF ELECTRIC SHOCK AND DAMAGE TO THE TOASTER.

CONTACT US

If you are having a problem with your appliance, please contact our Helpline, as we are more likely to be able to help than the store you purchased the item from. Please have the product name, model number and serial number to hand when you contact us to help us deal with your enquiry quicker.

email: hello@morphyrichards.co.uk

www.morphyrichards.co.uk



PRODUCT RECYCLING



For electrical products sold within the European Community, at the end of the electrical products useful life, it should not be disposed of with household waste.

Please recycle where facilities exist.

Check with your Local Authority or retailer for recycling advice in your country.





REGISTERING YOUR 3 YEAR GUARANTEE

Your standard 2 year guarantee is extended for an additional 1 year when you register the product within 28 days of purchase with Morphy Richards. If you do not register the product with Morphy Richards within 28 days, your product is guaranteed for 2 years.



To validate your 3 year guarantee,
scan the QR code or register online
at www.morphyrichards.co.uk

N.B. Each qualifying product needs to be registered with Morphy Richards individually. Please note that the 2 year guarantee is only available in the UK. Please refer to the 2 year guarantee for more information.

YOUR 2 YEAR GUARANTEE

It is important to retain the retailer's receipt as proof of purchase. Staple your receipt to the back cover for future reference.

Please quote the following information if the product develops a fault. These numbers can be found on the base of the product.

Model no.

Serial no.

All Morphy Richards products are individually tested before leaving the factory. In the unlikely event of any appliance proving to be faulty within 28 days of purchase, it should be returned to the place of purchase for it to be replaced. If the fault develops after 28 days and within 24 months of original purchase, you should contact the Helpline quoting Model number and Serial number on the product, or write to Morphy Richards at the address shown. You may be asked to return a copy of proof of purchase.

Subject to the exclusions set out below (see Exclusions), the faulty appliance will then be repaired or replaced as appropriate and dispatched usually within 7 working days of receipt.

If, for any reason, this item is replaced or repaired during the 2 year



REGISTERING YOUR 3 YEAR GUARANTEE

guarantee period, the guarantee on the new item will be calculated from the original purchase date. Therefore it is vital to retain your original till receipt or invoice to indicate the date of initial purchase.

To qualify for the 2 year guarantee, the appliance must have been used according to the instructions supplied.

The appliance is intended for domestic use only. Misuse or use for commercial or any other purpose will render the guarantee invalid.

Exclusions

Morphy Richards shall not be liable to replace or repair the goods under the terms of the guarantee where:

1. The fault has been caused or is attributable to accidental use, misuse, negligent use or used contrary to the manufacturer's recommendations or where the fault has been caused by power surges or damage caused in transit.
2. The appliance has been used on a voltage supply other than that stamped on the products.
3. Repairs have been attempted by persons other than our service staff (or authorised dealer).
4. The appliance has been used for hire purposes or non domestic use.
5. The appliance is second hand or refurbished.
6. Morphy Richards reserves the right not to carry out any type of servicing under the guarantee at its discretion.

This guarantee does not confer any rights other than those expressly set out above and does not cover any claims for consequential loss or damage. This guarantee is offered as an additional benefit and does not affect your statutory rights as a consumer. Morphy Richards products are intended for household use only. See usage limitations within the location safety instructions.

Disclaimer

Morphy Richards has a policy of continuous improvement in product quality and design. The company, therefore reserves the right to change the specification of its models at any time.





TT245742MUK Rev3

morphy richards



@morphyrichardsuk #loveyourmorphy

[morphyrichards.co.uk](https://www.morphyrichards.co.uk)

Morphy Richards

9 Cabot Lane, Poole, Dorset, BH17 7BY, UK

