5. Storing Your Lint Remover

- Store the product in a dry and dust-free place.
- Do not expose to high temperatures.
- Store in a cool, dry place.

6. Product Recycling

For electrical products sold within the European Community, at the end of the electrical products useful life, it should not be disposed of with household waste.

Please recycle where facilities exist.

Check with your Local Authority or retailer for recycling advice in your country.

7. Troubleshooting

1. Not charging.

The charging cable and/or adapter may not be attached/ plugged in correctly. Check the connection of the USB cable/adapter.

2. The lint remover isn't working.

a. Low battery, charge the product.
b. Lint Container may be full and/or lint obstructing the blades turning. Empty the container and clean the product before using again.

3. Power On/Off button / Charging Indicator is pulsating white.

The battery has low charge, charge the product.

Registering Your 3 Year Guarantee

Your standard 2 year guarantee is extended for an additional 1 year when you register the product within 28 days of purchase with Morphy Richards. If you do not register the product with Morphy Richards within 28 days, your product is guaranteed for 2 years.

To validate your 3 year guarantee, scan the QR code or register online at www.morphyrichards.co.uk

N.B. Each qualifying product needs to be registered with Morphy Richards individually. Please note that the 2 year guarantee is only available in the UK. Please refer to the 2 year guarantee for more information.

Your 2 Year Guarantee

It is important to retain the retailer's receipt as proof of purchase. Staple your receipt to the back cover for future reference.

Please quote the following information if the product develops a fault. These numbers can be found on the base of the product.

Model no.

Serial no.

All Morphy Richards products are individually tested before leaving the factory. In the unlikely event of any appliance proving to be faulty within 28 days of purchase, it should be returned to the place of purchase for it to be replaced. If the fault develops after 28 days and within 24 months of original purchase, you should contact the Helpline quoting Model number and Serial number on the product, or write to Morphy Richards at the address shown. You may be asked to return a copy of proof of purchase.

Subject to the exclusions set out on the next page (see Exclusions), the faulty appliance will then be repaired or replaced as appropriate and dispatched usually within 7 working days of receipt.

If, for any reason, this item is replaced or repaired during the 2 year guarantee period, the guarantee on the new item will be calculated from the original purchase date. Therefore it is vital to retain your original till receipt or invoice to indicate the date of initial purchase.

To qualify for the 2 year guarantee, the appliance must have been used according to the instructions supplied.

The appliance is intended for domestic use only. Misuse or use for commercial or any other purpose will render the guarantee invalid.

Exclusions

Morphy Richards shall not be liable to replace or repair the goods under the terms of the guarantee where:

1. The fault has been caused or is attributable to accidental use, misuse, negligent use or used contrary to the manufacturer's recommendations or where the fault has been caused by power surges or damage caused in transit.
2. The appliance has been used on a voltage supply other than that stamped on the products.
3. Repairs have been attempted by persons other than our service staff (or authorised dealer).
4. The appliance has been used for hire purposes or non domestic use.
5. The appliance is second hand or refurbished.
6. Morphy Richards reserves the right not to carry out any type of servicing under the guarantee at its discretion.

This guarantee does not confer any rights other than those expressly set out above and does not cover any claims for consequential loss or damage. This guarantee is offered as an additional benefit and does not affect your statutory rights as a consumer. Morphy Richards products are intended for household use only. See usage limitations within the location safety instructions.

Disclaimer

Morphy Richards has a policy of continuous improvement in product quality and design. The company, therefore reserves the right to change the specification of its models at any time.

Health & Safety

The use of any electrical appliance requires the following common sense safety rules. Please read these instructions carefully before using the product.

- This appliance can be used by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.
- This appliance shall not be used by children.
- Children shall not play with the appliance.
- Keep appliance and cord out of the reach of children.
- **CAUTION: Ensure that the lint remover is switched off before removing parts that move in use.**
- Avoid touching moving parts. Keep hands, hair and clothing, and utensils away from the blades during operation, to prevent personal injury and/or damage to the appliance.
- Care shall be taken when handling the sharp cutting blades when emptying the lint container and during cleaning.
- For care & cleaning refer to the Cleaning Your Lint Remover section of the manual.
- This appliance is intended for household use only. It is not suitable for use in commercial environments.

LOCATION

- Do not use outdoors or in a bathroom.
- Do not expose the appliance to direct sunlight.

OTHER SAFETY CONSIDERATIONS

- Do not use the appliance for anything other than its intended purpose.
- The use of attachments or tools not recommended or sold by Morphy Richards may cause fire, electric shock or injury.

- **WARNING: Misuse of this appliance could cause personal injury.**

PRODUCT SPECIFIC SAFETY

- Do not leave the product unattended when it is switched on or connected to the mains.
- When disconnecting the product from the socket, never pull the charging cable, grasp the plug to disconnect it.

CHARGING CABLE

- Do not let the charging cable hang over the edge of the worktop where a child could reach it.
- Do not let the charging cable run across an open space e.g. between a low socket and table.
- The charging cable should run from the power source/socket to the appliance without straining the connections.
- Do not operate the appliance with a damaged charging cable or charger (not supplied).

BATTERY SAFETY & DISPOSAL

- Do not expose a battery pack or appliance to fire or excessive heat. Exposure to fire or temperatures above 130°C/265°F may cause an explosion.
- Recommended ambient charging and storage temperature: 10°C–40°C (50°F–104°F). Recommended operation temperature: 25°C+/- 5°C.
- Do not incinerate electrical appliances even if the appliance is severely damaged, as Ni-MH (Nickel Metal Hydride) batteries may explode in fire.
- The Ni-MH (Nickel Metal Hydride) battery in this product is not a serviceable item. Check with your Local Authority for recycling advice.

Morphy Richards
9 Cabot Lane, Poole, Dorset, BH17 7BY, UK

"Upon registering your product at morphyrichards.co.uk

3 Year Guarantee*

RN390001MUK Rev1

Model No. 390001

morphy richards





VIBE

User Manual
Please read and keep these instructions for future use

Product Overview

1. Power On/Off button/ Charging Indicator
2. Handle
3. Main Unit
4. Lint Collection Bin
5. Blade Assembly
6. Blade Guard
7. Lint Collection Bin Cover
8. Charging Port
9. Cleaning Brush
10. USB-C Charging Cable

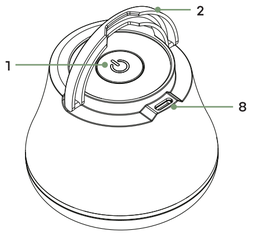

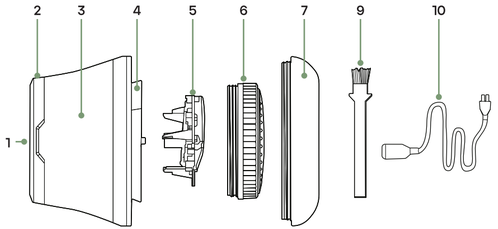

3. Charging your Lint Remover

Note: When using the lint remover for the first time (or after a period of being stored) it should be charged fully.

- Connect the USB-C cable (10) to the charging port (8) on the main unit (3) and then connect to the mains socket using a 5VDC 1A adapter (not supplied).
- During charging, the power On/Off button/ charging indicator (1) is white and pulsates.
- Charging time is approximately 8 hours.
- When fully charged, the charging indicator becomes solid white.
- If charging is interrupted/disconnected before the 8 hours is complete, the next time the appliance is put on charge it will start charging for 8 hours again.

Note: The lint remover will not operate during charging.

Note: Run time on a fully charged battery is approximately 45 minutes.

Contact & Support

For help with your appliance, please visit our Help Centre:

support.morphyrichards.co.uk

Here you can browse FAQs, troubleshoot, or submit a Contact Us form.

1. Before First Use

WARNING: Carefully unpack your lint remover as the blades are very sharp.

- Wipe the lint remover with a warm damp cloth and dry thoroughly before use.
- DO NOT immerse the appliance in water or any other liquid.

2. Using your Lint Remover

CAUTION: The blades are very sharp.

Important: Before use, check that the blade guard (6) is securely fastened.

1. Place the garment on a firm, flat surface and smooth out any creases or folds.
2. Press the power On/Off button (1) to turn on the appliance, the button will illuminate white while in use.
3. Run the lint remover lightly over the garment, alternating between right to left, top to bottom and circular movements. Do not apply pressure to avoid disturbing the main fibres and creating holes. The weight of the product is all that is required to remove lint.
4. For garments with a lot of lint, you can pass over it several times, alternating between right to left, top to bottom and circular movements.
5. After use, switch off immediately.
6. Empty the lint collection bin (4) after every use. (see Cleaning Your Lint Remover section).

Note: While in use if battery power is low, the power On/Off button/charging indicator (1) starts to pulsate.

Important:

- **Always** test the lint remover on a non-exposed corner of the fabric.
- **Do not** use if the fabric shows any signs of damage.
- **Do not** use the lint remover on a garment you are wearing.
- **Do not** use the product without the blades.
- **Do not** allow sharp/hard objects to come into contact with the blades.
- **Do not** use on fine fabrics or weaves such as silk, cashmere, angora, mohair, antique or embroidered fabrics.
- **Do not** use over zips or buttons to avoid damaging the product.

4. Cleaning your Lint Remover

WARNING: Handle the blades with care as they are sharp. Take care when removing the blade guard (6) and blade assembly (5).

Important: The product should be switched off and the USB cable (10) removed before disassembling for cleaning.

Note: Clean the lint remover after each use.

Note: Do not immerse the lint remover into water or any other liquid.

Important: Do not remove the lint collection bin cover when the appliance is switched on.

1. Wipe the main unit (3) using a soft damp cloth. Do not clean with water or abrasive cleaners.
2. Unscrew the lint collection bin cover (7) from the main unit and empty lint from the main unit *(Figure 1 & 2)*.



Figure 1

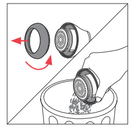


Figure 2

3. Turn the blade guard anti-clockwise to remove it *(Figure 3)*.



Figure 3

4. Carefully remove the blade assembly *(Figure 4)*.



Figure 4

5. Clean the blade assembly and blade guard with the cleaning brush (9) provided *(Figure 5)*. Take extra care to avoid injury.



Figure 5

6. Clean around the blade assembly spindle *(Figure 6)*.



Figure 6

7. Re-fit the blade assembly *(Figure 7)*.



Figure 7

8. Re-attach the blade guard, turn clockwise to secure (Figure 8).
9. Finally, re-attach the lint collection bin cover.



Figure 8

RN390001MUK Rev1.v1.indd 3 04/08/2026 15:44

5. Storing Your Lint Remover

- Store the product in a dry and dust-free place.
- Do not expose to high temperatures.
- Store in a cool, dry place.

6. Product Recycling

For electrical products sold within the European Community, at the end of the electrical products useful life, it should not be disposed of with household waste.

Please recycle where facilities exist.

Check with your Local Authority or retailer for recycling advice in your country.

7. Troubleshooting

1. Not charging.

The charging cable and/or adapter may not be attached/ plugged in correctly. Check the connection of the USB cable/adapter.

2. The lint remover isn't working.

a. Low battery, charge the product.
b. Lint Container may be full and/or lint obstructing the blades turning. Empty the container and clean the product before using again.

3. Power On/Off button / Charging Indicator is pulsating white.

The battery has low charge, charge the product.

Registering Your 3 Year Guarantee

Your standard 2 year guarantee is extended for an additional 1 year when you register the product within 28 days of purchase with Morphy Richards. If you do not register the product with Morphy Richards within 28 days, your product is guaranteed for 2 years.

To validate your 3 year guarantee, scan the QR code or register online at www.morphyrichards.co.uk

N.B. Each qualifying product needs to be registered with Morphy Richards individually. Please note that the 2 year guarantee is only available in the UK. Please refer to the 2 year guarantee for more information.

Your 2 Year Guarantee

It is important to retain the retailer's receipt as proof of purchase. Staple your receipt to the back cover for future reference.

Please quote the following information if the product develops a fault. These numbers can be found on the base of the product.

Model no.

Serial no.

All Morphy Richards products are individually tested before leaving the factory. In the unlikely event of any appliance proving to be faulty within 28 days of purchase, it should be returned to the place of purchase for it to be replaced. If the fault develops after 28 days and within 24 months of original purchase, you should contact the Helpline quoting Model number and Serial number on the product, or write to Morphy Richards at the address shown. You may be asked to return a copy of proof of purchase.

Subject to the exclusions set out on the next page (see Exclusions), the faulty appliance will then be repaired or replaced as appropriate and dispatched usually within 7 working days of receipt.

If, for any reason, this item is replaced or repaired during the 2 year guarantee period, the guarantee on the new item will be calculated from the original purchase date. Therefore it is vital to retain your original till receipt or invoice to indicate the date of initial purchase.

To qualify for the 2 year guarantee, the appliance must have been used according to the instructions supplied.

The appliance is intended for domestic use only. Misuse or use for commercial or any other purpose will render the guarantee invalid.

Exclusions

Morphy Richards shall not be liable to replace or repair the goods under the terms of the guarantee where:

1. The fault has been caused or is attributable to accidental use, misuse, negligent use or used contrary to the manufacturer's recommendations or where the fault has been caused by power surges or damage caused in transit.
2. The appliance has been used on a voltage supply other than that stamped on the products.
3. Repairs have been attempted by persons other than our service staff (or authorised dealer).
4. The appliance has been used for hire purposes or non domestic use.
5. The appliance is second hand or refurbished.
6. Morphy Richards reserves the right not to carry out any type of servicing under the guarantee at its discretion.

This guarantee does not confer any rights other than those expressly set out above and does not cover any claims for consequential loss or damage. This guarantee is offered as an additional benefit and does not affect your statutory rights as a consumer. Morphy Richards products are intended for household use only. See usage limitations within the location safety instructions.

Disclaimer

Morphy Richards has a policy of continuous improvement in product quality and design. The company, therefore reserves the right to change the specification of its models at any time.

Health & Safety

The use of any electrical appliance requires the following common sense safety rules. Please read these instructions carefully before using the product.

- This appliance can be used by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.
- This appliance shall not be used by children.
- Children shall not play with the appliance.
- Keep appliance and cord out of the reach of children.
- **CAUTION: Ensure that the lint remover is switched off before removing parts that move in use.**
- Avoid touching moving parts. Keep hands, hair and clothing, and utensils away from the blades during operation, to prevent personal injury and/or damage to the appliance.
- Care shall be taken when handling the sharp cutting blades when emptying the lint container and during cleaning.
- For care & cleaning refer to the Cleaning Your Lint Remover section of the manual.
- This appliance is intended for household use only. It is not suitable for use in commercial environments.

LOCATION

- Do not use outdoors or in a bathroom.
- Do not expose the appliance to direct sunlight.

OTHER SAFETY CONSIDERATIONS

- Do not use the appliance for anything other than its intended purpose.
- The use of attachments or tools not recommended or sold by Morphy Richards may cause fire, electric shock or injury.
- **WARNING: Misuse of this appliance could cause personal injury.**

PRODUCT SPECIFIC SAFETY

- Do not leave the product unattended when it is switched on or connected to the mains.
- When disconnecting the product from the socket, never pull the charging cable, grasp the plug to disconnect it.

CHARGING CABLE

- Do not let the charging cable hang over the edge of the worktop where a child could reach it.
- Do not let the charging cable run across an open space e.g. between a low socket and table.
- The charging cable should run from the power source/socket to the appliance without straining the connections.
- Do not operate the appliance with a damaged charging cable or charger (not supplied).

BATTERY SAFETY & DISPOSAL

- Do not expose a battery pack or appliance to fire or excessive heat. Exposure to fire or temperatures above 130°C/265°F may cause an explosion.
- Recommended ambient charging and storage temperature: 10°C–40°C (50°F–104°F). Recommended operation temperature: 25°C+/- 5°C.
- Do not incinerate electrical appliances even if the appliance is severely damaged, as Ni-MH (Nickel Metal Hydride) batteries may explode in fire.
- The Ni-MH (Nickel Metal Hydride) battery in this product is not a serviceable item. Check with your Local Authority for recycling advice.

Morphy Richards
9 Cabot Lane, Poole, Dorset, BH17 7BY, UK

"Upon registering your product at morphyrichards.co.uk

3 Year Guarantee*

RN390001MUK Rev1

Model No. 390001

morphy richards





VIBE

User Manual
Please read and keep these instructions for future use

Product Overview

1. Power On/Off button/ Charging Indicator
2. Handle
3. Main Unit
4. Lint Collection Bin
5. Blade Assembly
6. Blade Guard
7. Lint Collection Bin Cover
8. Charging Port
9. Cleaning Brush
10. USB-C Charging Cable

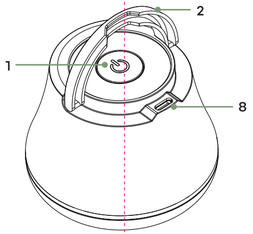

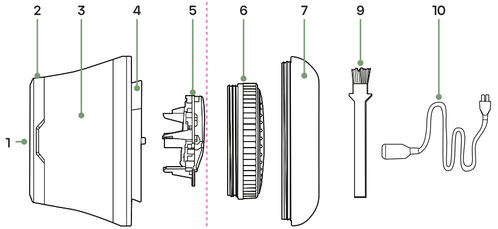

1. Before First Use

WARNING: Carefully unpack your lint remover as the blades are very sharp.

- Wipe the lint remover with a warm damp cloth and dry thoroughly before use.
- DO NOT immerse the appliance in water or any other liquid.

2. Using your Lint Remover

CAUTION: The blades are very sharp.

Important: Before use, check that the blade guard (6) is securely fastened.

1. Place the garment on a firm, flat surface and smooth out any creases or folds.
2. Press the power On/Off button (1) to turn on the appliance, the button will illuminate white while in use.
3. Run the lint remover lightly over the garment, alternating between right to left, top to bottom and circular movements. Do not apply pressure to avoid disturbing the main fibres and creating holes. The weight of the product is all that is required to remove lint.
4. For garments with a lot of lint, you can pass over it several times, alternating between right to left, top to bottom and circular movements.
5. After use, switch off immediately.
6. Empty the lint collection bin (4) after every use. (see Cleaning Your Lint Remover section).

Note: While in use if battery power is low, the power On/Off button/charging indicator (1) starts to pulsate.

Important:

- **Always** test the lint remover on a non-exposed corner of the fabric.
- **Do not** use if the fabric shows any signs of damage.
- **Do not** use the lint remover on a garment you are wearing.
- **Do not** use the product without the blades.
- **Do not** allow sharp/hard objects to come into contact with the blades.
- **Do not** use on fine fabrics or weaves such as silk, cashmere, angora, mohair, antique or embroidered fabrics.
- **Do not** use over zips or buttons to avoid damaging the product.

3. Charging your Lint Remover

Note: When using the lint remover for the first time (or after a period of being stored) it should be charged fully.

- Connect the USB-C cable (10) to the charging port (8) on the main unit (3) and then connect to the mains socket using a 5VDC 1A adapter (not supplied).
- During charging, the power On/Off button/ charging indicator (1) is white and pulsates.
- Charging time is approximately 8 hours.
- When fully charged, the charging indicator becomes solid white.
- If charging is interrupted/disconnected before the 8 hours is complete, the next time the appliance is put on charge it will start charging for 8 hours again.

Note: The lint remover will not operate during charging.

Note: Run time on a fully charged battery is approximately 45 minutes.

Contact & Support

For help with your appliance, please visit our Help Centre:

support.morphyrichards.co.uk

Here you can browse FAQs, troubleshoot, or submit a Contact Us form.

4. Cleaning your Lint Remover

WARNING: Handle the blades with care as they are sharp. Take care when removing the blade guard (6) and blade assembly (5).

Important: The product should be switched off and the USB cable (10) removed before disassembling for cleaning.

Note: Clean the lint remover after each use.

Note: Do not immerse the lint remover into water or any other liquid.

Important: Do not remove the lint collection bin cover when the appliance is switched on.

1. Wipe the main unit (3) using a soft damp cloth. Do not clean with water or abrasive cleaners.
2. Unscrew the lint collection bin cover (7) from the main unit and empty lint from the main unit *(Figure 1 & 2)*.



Figure 1

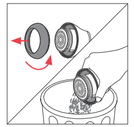


Figure 2

3. Turn the blade guard anti-clockwise to remove it *(Figure 3)*.



Figure 3

4. Carefully remove the blade assembly *(Figure 4)*.



Figure 4

5. Clean the blade assembly and blade guard with the cleaning brush (9) provided *(Figure 5)*. Take extra care to avoid injury.



Figure 5

6. Clean around the blade assembly spindle *(Figure 6)*.



Figure 6

7. Re-fit the blade assembly *(Figure 7)*.



Figure 7

8. Re-attach the blade guard, turn clockwise to secure (Figure 8).
9. Finally, re-attach the lint collection bin cover.



Figure 8